lenovo

Hardware Maintenance Manual



Think Think Centre Think

Machine Tyeps: 4215, 4219, 4220, 4221, and 4222.



Hardware Maintenance Manual

Machine Tyeps: 4215, 4219, 4220, 4221, and 4222.

Note Before using this information and the product it supports, be sure to read and understand the Chapter 2 "Safety information" on page 3 and Appendix A "Notices" on page 169. Fourth Edition (Octorber 2011) © Copyright Lenovo 2010, 2011. LENOVO products, data, computer software, and services have been developed exclusively at private expense and are sold to governmental entities as commercial items as defined by 48 C.F.R. 2.101 with limited and restricted rights to use, reproduction and disclosure.

LIMITED AND RESTRICTED RIGHTS NOTICE: If products, data, computer software, or services are delivered pursuant a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Contents

Chapter 1. About this manual 1	Enabling or disabling a device
Important Safety Information	Selecting a startup device 4
Important information about replacing RoHS	Selecting a temporary startup device 4
compliant FRUs	Selecting or changing the startup device sequence
Chapter 2. Safety information 3	Advanced settings
General safety	9
Electrical safety	
Voltage-selection switch	Chapter 7. Configuring RAID 43
Safety inspection guide 5	
Handling electrostatic discharge-sensitive devices	Configuring the system BIOS to enable SATA RAID functionality
Grounding requirements 6	Creating RAID volumes
Safety notices (multi-lingual translations) 6	Deleting RAID volumes
Chapter 3. General information 29	• • •
Online Books folder	
Lenovo ThinkVantage Tools 29	Power Supply Problems
Lenovo Welcome	
Additional information resources 29	
Specifications	
Chantar 4 Canaral Chackaut 21	Miscellaneous error messages 65
Chapter 4. General Checkout 31	Ondetermined problems
Problem determination tips	
Chapter 5. Diagnostics 33	, ,
Lenovo ThinkVantage Toolbox	
Lenovo System Toolbox	Locating connectors on the nont of your
PC-Doctor for Rescue and Recovery	
PC-Doctor for DOS	
Creating a diagnostic disc	Locating components
Running the diagnostic program from a	Locating parts on the system board 7
diagnostic disc	Locating internal drives
Navigating through the diagnostics	Removing the computer cover
programs	hemoving and remistalling the nont bezer
Running tests	installing of replacing a for card
Viewing the test log	Installing or replacing a memory module 78
Chapter 6. Using the Setup Utility	Installing or replacing the optical drive 80
program	Replacing the power supply assembly 82
Starting the Setup Utility program	Replacing the battery
Viewing and changing settings	Replacing the heat sink and fan assembly 85
Using passwords	Replacing the microprocessor 86
Password considerations	Replacing the system board
Power-On Password	Replacing the primary hard disk drive.
Administrator Password	Replacing the secondary hard disk drive 93
Hard Disk Password	Replacing the card reader 95
Setting, changing, and deleting a password . 40	Replacing the front fan assembly $\ldots \ldots \ldots$ 90
country, orlanging, and dolothing a password . To	Replacing the rear fan assembly

© Copyright Lenovo 2010, 2011

Replacing the front audio and USB assembly	100 Security features
Replacing the internal speaker	Hardware-controlled passwords 165
Completing the FRU replacement	Operating system password 165
Overall: MT 4215, 4219, 4220, 4221, and 4222 1	Vital product data
,	120 Updating (flashing) BIOS from your operating system
Power Cords	Recovering from a POST/BIOS update failure 166
Windows Vista Business 32 Recovery CD	150 Power management
Chapter 11. Additional service information	165

Chapter 1. About this manual

This manual contains service and reference information for ThinkStation™ computers listed on the cover. It is intended only for trained servicers who are familiar with Lenovo® computer products.

Before servicing a Lenovo product, be sure to read the Safety Information in Chapter 2 "Safety information" on page 3.

Chapter 8 "Symptom-to-FRU Index" on page 45 and Chapter 11 "Additional service information" on page 165 chapters are not specific to any machine type and are applicable to all ThinkStation computers.

This manual includes a complete FRU part number listing for each machine type and model listed on the cover. If you have Internet access, FRU part numbers are also available at: http://www.lenovo.com/support

Important Safety Information

Be sure to read all caution and danger statements in this book before performing any of the instructions.

Veuillez lire toutes les consignes de type DANGER et ATTENTION du présent document avant d'exécuter les instructions.

Lesen Sie unbedingt alle Hinweise vom Typ "ACHTUNG" oder "VORSICHT" in dieser Dokumentation, bevor Sie irgendwelche Vorgänge durchführen

Leggere le istruzioni introdotte da ATTENZIONE e PERICOLO presenti nel manuale prima di eseguire una qualsiasi delle istruzioni

Certifique-se de ler todas as instruções de cuidado e perigo neste manual antes de executar qualquer uma das instruções

Es importante que lea todas las declaraciones de precaución y de peligro de este manual antes de seguir las instrucciones.

```
تأكد من قراءة كل التحذيرات الموجودة في هذا الكتاب قبل اتباع هذه التعليمات.
```

执行任何说明之前,请确保已阅读本书中的所有警告和危险声明。

執行任何指示前,請確實閱讀本書中的所有警告及危險聲明。

ודאו שקראתם את כל הודעות האזהרה והסכנה במסמך זה לפני שתבצעו פעולה כלשהי.

본 사용 설명서에 기재된 내용을 실행하기 전에 모든 주의사항 및 위험사항을 숙지하십시오.

Important information about replacing RoHS compliant FRUs

RoHS, The Restriction of Hazardous Substances in Electrical and Electronic Equipment Directive (2002/95/EC) is a European Union legal requirement affecting the global electronics industry. RoHS requirements must be implemented on Lenovo products placed on the market and sold in the European Union after June 2006. Products on the market before June 2006 are not required to have RoHS compliant parts. If the parts are not compliant originally, replacement parts can also

be noncompliant, but in all cases, if the parts are compliant, the replacement parts must also be compliant.

Note: RoHS and non-RoHS FRU part numbers with the same fit and function are identified with unique FRU part numbers.

Lenovo plans to transition to RoHS compliance well before the implementation date and expects its suppliers to be ready to support Lenovo's requirements and schedule in the EU. Products sold in 2005 will contain some RoHS compliant FRUs. The following statement pertains to these products and any product Lenovo produces containing RoHS compliant parts.

RoHS compliant ThinkStation parts have unique FRU part numbers. Before or after June 2006, failed RoHS compliant parts must always be replaced using RoHS compliant FRUs, so only the FRUs identified as compliant in the system hardware maintenance manual or direct substitutions for those FRUs can be used.

Products marketed before June 2006		Products marketed after June 2006	
Current or original part	Replacement FRU	Current or original part	Replacement FRU
Non-RoHS	Can be Non-RoHS	Must be RoHS	Must be RoHS
Non-RoHS	Can be RoHS		
Non-RoHS	Can substitute for RoHS		
RoHS	Must be RoHS		

Note: A direct substitution is a part with a different FRU part number that is automatically shipped by the distribution center at the time of order.

Chapter 2. Safety information

This chapter contains the safety information that you need to be familiar with before servicing a computer.

General safety

Follow these rules to ensure general safety:

- Observe good housekeeping in the area of the machines during and after maintenance.
- When lifting any heavy object:
 - 1. Ensure you can stand safely without slipping.
 - 2. Distribute the weight of the object equally between your feet.
 - 3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift.
 - 4. Lift by standing or by pushing up with your leg muscles; this action removes the strain from the muscles in your back. Do not attempt to lift any objects that weigh more than 16 kg (35 lb) or objects that you think are too heavy for you.
- Do not perform any action that causes hazards to the customer, or that makes the equipment unsafe.
- Before you start the machine, ensure that other service representatives and the customer's personnel are not in a hazardous position.
- Place removed covers and other parts in a safe place, away from all personnel, while you are servicing the machine.
- Keep your tool case away from walk areas so that other people will not trip over it.
- Do not wear loose clothing that can be trapped in the moving parts of a machine. Ensure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with a nonconductive clip, approximately 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.
 Remember: Metal objects are good electrical conductors.
- Wear safety glasses when you are: hammering, drilling, soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that might be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.

Electrical safety



CAUTION:

Electrical current from power, telephone, and communication cables can be hazardous. To avoid personal injury or equipment damage, disconnect the attached power cords, telecommunication systems, networks, and modems before you open the server/workstation covers, unless instructed otherwise in the installation and configuration procedures.

Observe the following rules when working on electrical equipment.

Important: Use only approved tools and test equipment. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents. Many customers have, near their equipment, rubber floor mats that contain small conductive fibers to decrease electrostatic discharges. Do not use this type of mat to protect yourself from an electric shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch, or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near equipment that has hazardous voltages.
- Disconnect all power before:
 - Performing a mechanical inspection
 - Working near power supplies
 - Removing or installing Field Replaceable Units (FRUs)
- Before you start to work on the machine, unplug the power cord. If you cannot unplug it, ask the customer to power-off the wall box that supplies power to the machine and to lock the wall box in the off position.
- If you need to work on a machine that has exposed electrical circuits, observe the following precautions:
 - Ensure that another person, familiar with the power-off controls, is near you.
 - **Remember:** Another person must be there to switch off the power, if necessary.
 - Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.
 - **Remember:** There must be a complete circuit to cause an electric shock. By observing the above rule, you may prevent a current from passing through your body.
 - When using a tester, set the controls correctly and use the approved probe leads and accessories for that tester.
 - Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; these instructions are in the safety sections of maintenance information. Use extreme care when measuring high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- Never assume that power has been disconnected from a circuit. First, check that it has been powered-off.
- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, nongrounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and machine damage.
- Do not service the following parts with the power on when they are removed from their normal operating places in a machine:
 - Power supply units
 - Pumps
 - Blowers and fans
 - Motor generators

and similar units. (This practice ensures correct grounding of the units.)

- If an electrical accident occurs:
 - Use caution; do not become a victim yourself.
 - Switch off power.
 - Send another person to get medical aid.

Voltage-selection switch

Some computers are equipped with a voltage-selection switch located near the power-cord connection point on the computer. If your computer has a voltage-selection switch, ensure that you set the switch to match the voltage available at your electrical outlet. Setting the voltage-selection switch incorrectly can cause permanent damage to the computer.

If your computer does not have a voltage-selection switch, your computer is designed to operate only at the voltage provided in the country or region where the computer was originally purchased.

If you relocate your computer to another country, be aware of the following:

- If your computer does not have a voltage-selection switch, do not connect the computer to an electrical outlet until you have verified that the voltage provided is the same as it was in the country or region where the computer was originally purchased.
- If your computer has a voltage selection switch, do not connect the computer to an electrical outlet until you have verified that the voltage-selection switch is set to match the voltage provided in that country or region.

If you are not sure of the voltage provided at your electrical outlet, contact your local electric company or refer to official Web sites or other literature for travelers to the country or region where you are located.

Safety inspection guide

The intent of this inspection guide is to assist you in identifying potentially unsafe conditions on these products. Each machine, as it was designed and built, had required safety items installed to protect users and service personnel from injury. This guide addresses only those items. However, good judgment should be used to identify potential safety hazards due to attachment of features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock).
- Explosive hazards, such as a damaged CRT face or bulging capacitor
- Mechanical hazards, such as loose or missing hardware

The guide consists of a series of steps presented in a checklist. Begin the checks with the power off, and the power cord disconnected.

Checklist:

- 1. Check exterior covers for damage (loose, broken, or sharp edges).
- 2. Power-off the computer. Disconnect the power cord.
- 3. Check the power cord for:
 - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and frame ground.
 - b. The power cord should be the appropriate type as specified in the parts listings.
 - c. Insulation must not be frayed or worn.
- 4. Remove the cover.

- 5. Check for any obvious alterations. Use good judgment as to the safety of any alterations.
- 6. Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
- 7. Check for worn, frayed, or pinched cables.
- 8. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

Handling electrostatic discharge-sensitive devices

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

- 1. Use product-specific ESD procedures when they exceed the requirements noted here.
- 2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- · Avoid contact with other people while handling the part.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use the black side of a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

Note: The use of a grounding system is desirable but not required to protect against ESD damage.

- Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
- Use an ESD common ground or reference point when working on a double-insulated or battery-operated system. You can use coax or connector-outside shells on these systems.
- Use the round ground-prong of the ac plug on ac-operated computers.

Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Safety notices (multi-lingual translations)

The caution and danger safety notices in this section are provided in the following languages:

- English
- Arabic
- Brazilian/Portuguese
- Chinese (simplified)
- Chinese (traditional)
- French

- German
- Hebrew
- Italian
- Korean
- Spanish





DANGER

Electrical current from power, telephone and communication cables is hazardous.

To avoid a shock hazard:

- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- · Connect all power cords to a properly wired and grounded electrical outlet.
- Connect to properly wired outlets any equipment that will be attached to this product.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- · Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Connect and disconnect cables as described in the following tables when installing, moving, or opening covers on this product or attached devices.

To Connect	To Disconnect
1. Turn everything OFF.	1. Turn everything OFF.
2. First, attach all cables to devices.	2. First, remove power cords from outlet.
3. Attach signal cables to connectors.	3. Remove signal cables from connectors.
4. Attach power cords to outlet.	4. Remove all cables from devices.
5. Turn device ON.	



When replacing the lithium battery, use only Part Number 45C1566 or an equivalent type battery recommended by the manufacturer. If your system has a module containing a lithium battery, replace it only with the same module type made by the same manufacturer. The battery contains lithium and can explode if not properly used, handled, or disposed of. Do not:

- Throw or immerse into water
- Heat to more than 100°C (212°F)
- Repair or disassemble

Dispose of the battery as required by local ordinances or regulations.



CAUTION:

When laser products (such as CD-ROMs, DVD-ROM drives, fiber optic devices, or transmitters) are installed, note the following:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.



Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following:

Laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.









≥18 kg (37 lbs)

≥32 kg (70.5 lbs)

≥55 kg (121.2 lbs)

CAUTION:


Use safe practices when lifting.





CAUTION:

The power control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.







خــطر

التيار الكهربسي المدوجدود بمصدر الطاقــة أو أجــهزة التليفــون أو أســـلك الإتصالات يشكل خطورة.

لتفادى مخاطر الصدمات الكهربائية:

لا تحاول توصيل أو فصل أي أسلك أو القيام بعمليات تسركيب أو صيانة أو إعدادة توصيف لهذا المنتج أنسناء وجود عاصفة كهربائية.

يجب توصيل كل أسلك الكهرباء في مخارج كهرباء ذات توصيلات أسلك وتوصيلات أرضية صحيحة يجب توصييل أي جهاز سينم الحاقه بهذا المنتج في مخارج كهرباء ذات توصيلات أسلك صحيحة.

وإن أمكن يجب استخدام يد واحدة فقط في توصيل أو فصل أسلاك الاشارة.

لا يتحاول تشغيل أي جهاز إذا كان هناك أشر لحرق أو مياه أو تلف ب قصبل أسسلاك الكهرباء وأنسظمة الاتصسالات وشسبكات الاتصسال وأجهزة ودم الملحقة قسيل فستح أغطية الجهاز، مسالسم يستم طسلب خسلاف ذلك فسي عليسمات الخساصة بالتسركيب والتسومسيف. قم بتوصّيل وفصل الأسلاك كما هُو موضح في الجدول التالي وذلك عند القيام بعمليات التركيب أو النقل أو فتح أغطية هذا المنتج أو الاجهزة الملحقة.

للفصل:

قم بإيقاف كل شيء. أو لا، قم بفصل كل أسلاك الكهرباء من المخرج. قم بفصل أسلاك الإشارة من الموصلات. قم بفصل كل الأسلاك من الأجهزة.

للتوصيل:

قم بإيقاف كل شيء. أو لا، قم بتوصيل كل الأسلاك بالأجهزة. قم بتوصيل أسلاك الإشارة في لموصلات. قم بتوصيل أسلاك الكهرباء في المخارج. قم بتشغيل الجهاز.



عند استبدال البطارية الليثيوم، استخدم فقط رقم الجزء الخاص Part Number 45C1566 أو نوع أخر يكون على نفس مستوى الكفاءة يحدده لك المصنع.

اذا كان النظام الخاص يستخدم معه بطارية ليثيوم قم باستبدالها بنفس النوع الذي تم صناعته من خلال نفس المصنع. تحتوي البطارية على مادة الليثيوم ويمكن أن تنفجرفى حالة عدم استخدامها أو التعامل معها بطريقة صحيحة أو عند التخلص منها بطريقة خطأ.

لا تقم بــ:

- القاء البطارية أو غمرها في الماء
- تسخينها أعلى من ١٠٠ درجة مئوية و (٢١٢ ° فهرنهیت)
 - بتصليحها أو فكها

تخلص من البطارية طبقا للقانون أو النظام المحلى.



أثناء تركيب منتجات ليزر (مثل CD-ROMs)أو وحدة تشغيل DVDأو أجهزة Fiber Optic أو وحدات الارسال) يجب مراعاة الآتي:

لا تنزع الأغطية. قد ينتج عن نزع أغطية منتج الليزر انفجار أشعة الليزر شديدة الخطورة.

لا يوجد أجزاء يمكن تغييرها داخل الجهاز. قد ينتج عن استخدام تحكمات أو تعديلات أو عمل أي تصرفات أخرى تخالف ما هو محددا هنا الى انفجار أشعة شديدة الخطورة.



تحتوى بعض منتجات الليزر على الفئة دايود ليزر مدمج من الفئة Class 3B أو Class 3B. يجب مراعاة الآتى .

أشعة الليزر عند الفتح. لا تحدق الى الاشعاع و لا تنظر اليه مباشرة بواسطة أي أجهزة مرئية وتجنب التعرض المباشر للاشعاع.





≥18 kg (37 lbs)



≥32 kg (70.5 lbs)




≥55 kg (121.2 lbs)

يجب استخدام ممارسات آمنة عند الرفع





لا يقم زر التحكم في التشغيل الموجود على الجهاز والمفتاح الكهربائي الموجود على لوحة التحكم بايقاف التيار الكهربائي المار بالجهاز. قد يكون للجهاز أكثر من سلك كهربائي واحد. لايقاف التيار الكهربائي المار بالجهاز، تأكد من فصل جميع أسلاك الكهرباء من مصدر الكهرباء .







PERIGO

A corrente elétrica proveniente de cabos de alimentação, de telefone e de comunicações é perigosa.

Para evitar risco de choque elétrico:

- Não conecte nem desconecte nenhum cabo ou execute instalação, manutenção ou reconfiguração deste produto durante uma tempestade com raios.
- Conecte todos os cabos de alimentação a tomadas elétricas corretamente instaladas e aterradas.
- Todo equipamento que for conectado a este produto deve ser conectado a tomadas corretamente instaladas.
- Quando possível, utilize apenas uma das mãos para conectar ou desconectar cabos de sinal.
- Nunca ligue nenhum equipamento quando houver evidência de fogo, água ou danos estruturais.
- Antes de abrir tampas de dispositivos, desconecte cabos de alimentação, sistemas de telecomunicação, redes e modems conectados, a menos que especificado de maneira diferente nos procedimentos de instalação e configuração.
- Conecte e desconecte os cabos conforme descrito na tabela apresentada a seguir ao instalar, mover ou abrir tampas deste produto ou de dispositivos conectados.

Para Conectar:	Para Desconectar:
1. DESLIGUE Tudo.	1. DESLIGUE Tudo.
Primeiramente, conecte todos os cabos aos dispositivos.	 Primeiramente, remova os cabos de alimentação das tomadas.
3. Conecte os cabos de sinal aos conectores.	3. Remova os cabos de sinal dos conectores.
4. Conecte os cabos de alimentação às tomadas.	4. Remova todos os cabos dos dispositivos.
5. LIGUE os dispositivos.	



CUIDADO:

Ao substituir a bateria de lítio, utilize apenas uma bateria com Número de Peça 45C1566 ou um tipo de bateria equivalente recomendado pelo Se o seu sistema possui um módulo com uma bateria de lítio, substitua-o apenas por um módulo do mesmo tipo e do mesmo fabricante. A bateria contém lítio e pode explodir se não for utilizada, manuseada ou descartada de maneira correta.

Não:

- Jogue ou coloque na água
- Aqueça a mais de 100°C (212°F)
- · Conserte nem desmonte

Descarte a bateria conforme requerido pelas leis ou regulamentos locais.



PRECAUCIÓN:

Quando produtos a laser (como unidades de CD-ROMs, unidades de DVD-ROM, dispositivos de fibra ótica ou transmissores) estiverem instalados, observe o seguinte:

- Não remova as tampas. A remoção das tampas de um produto a laser pode resultar em exposição prejudicial à radiação de laser. Não existem peças que podem ser consertadas no interior do dispositivo.
- A utilização de controles ou ajustes ou a execução de procedimentos diferentes dos especificados aqui pode resultar em exposição prejudicial à radiação.

PERIGO

Alguns produtos a laser contêm diodo de laser integrado da Classe 3A ou da Classe 3B. Observe o seguinte:

Radiação a laser quando aberto. Não olhe diretamente para o feixe a olho nu ou com instrumentos ópticos e evite exposição direta ao feixe.









≥18 kg (37 lbs)

≥32 kg (70.5 lbs)

≥55 kg (121.2 lbs)

CUIDADO:


Utilize procedimentos de segurança para levantar equipamentos.





CUIDADO:

O botão de controle de alimentação do dispositivo e o botão para ligar/desligar da fonte de alimentação não desligam a corrente elétrica fornecida ao dispositivo. O dispositivo também pode ter mais de um cabo de alimentação. Para remover toda a corrente elétrica do dispositivo, assegure que todos os cabos de alimentação estejam desconectados da fonte de alimentação.







危险

电源、电话和通信电缆中的电流是危险的。

- 请勿在雷电期间连接或断开任何电缆的连接, 或者对本产品进行安装、维护或重新配置。
- 将所有电源线连接到正确连线和妥善接地的电源插座。
- 将所有要连接到该产品的设备连接到正确连线的插座。
- 如果可能,请仅使用一只手来连接或断开信号电缆的连接。
- 切勿在有火、水、结构损坏迹象的情况下开启任何设备。
- 在打开设备外盖之前请断开已连接的电源线、远程通信系统、 网络和调制解调器,除非在安装和配置过程中另有说明。
- 当安装、移动或打开该产品或连接设备的外盖时, 请按照下表所述来连接或断开电缆的连接。

要连接	要断开连接	
1. 切断所有电源。 2. 首先将所有电缆连接到设备。	1. 切断所有电源。 2. 首先从插座上拔出电源线。	
3. 将信号电缆连接到接口。	3. 从接口上拔出信号电缆。	
 4. 将电源线连接到插座。 5. 开启设备。 	4. 从设备上拔出所有电缆。	



警告: 更换锂电池时,请仅使用部件号为 45C1566 的电池或制造商推荐的同类电池。如果您的系统有包含锂电池的模块,请仅使用同一制造商生产的相同模块类型来替换该模块。该电池中含有锂,如果使用、操作或处理不当,可能会发生爆炸。

切勿:

- 投入或浸入水中
- 加热到 100°C (212°F) 以上
- 维修或拆卸

请按照当地法令或条例的要求处理电池。



言曰: 安装激光产品(例如 CD-ROM、DVD-ROM 驱动器、光纤设备或发射设备)时, 请注意以下声明:

- 请勿卸下外盖。卸下激光产品的外盖可能导致遭受激光辐射的危险。该设备内没有可维修的部件。
- 如果不按照此处指定的过程进行控制、调整或操作,则有可能导致遭受辐 射的危险。



危险

某些激光产品包含嵌入式 3A 类或 3B 类激光二极管。请注意以下声明: 打开后有激光辐射。请勿注视光束,请勿直接用光学仪器查看,并请避免直接暴露在光束中。









≥18 千克 (37 磅)

≥32 千克 (70.5 磅) ≥55 千克 (121.2 磅)

警告: 抬起时请采取安全措施。





警告: 设备上的电源控制按钮和电源上的电源开关不会切断供给该设备的电流。该设备还可 能有多条电源线。要切断该设备的所有电流,请确保所有电源线都与电源断开连接。









危險

電源、電話及通訊纜線上的電流都具有危險性。

若要避免觸電危險:

- 請勿在雷雨期間,連接或拔除纜線、執行安裝、維護或重新配置本產品。
- 將所有電源線連接到正確配線及接地的電源插座。
- -任何與本產品連接的設備都必須連接到配線妥當的電源插座。
- 請盡可能用單手連接或拔除信號線。
- 發生火災、水災或結構損害時,絕對不要開啟任何設備。
- 除非在安裝及配置程序中另有指示,否則在開啟裝置機蓋之前,請拔掉連接的電源線、電信系統、網路及數據機。
- 安裝、移動或開啟本產品或附屬裝置的機蓋時,請遵循下列說明連接及拔掉纜線。

連線	切斷連線
1. 關閉所有開關。	1. 關閉所有開闢。
2. 首先,連接所有接線到裝置。	2. 首先,拔掉插座上的電源線。
3. 連接信號線到接頭。	3. 拔掉接頭上的信號線。
4. 連接電源線到插座。	4. 拔掉裝置上所有接線。
5. 開啟裝置。	



警告:

更換鋰電池時,請僅使用產品編號 45C1566 或製造商所建議的同類型電池。 如果您的系統中含有鋰電池模組,請僅使用同一家製造商所生產的相同模組進行更換。 如果未以正確方式使用、處理或棄置含鋰的電池,會有爆炸的危險。 請勿:

- 沾溼或浸入水中
- 置於 100°C (212°F)以上的高溫環境
- 修理或拆開

請按照各地區有關廢棄電池的法令和規定處理舊電池。



警告:

- 請勿移除機蓋。移除雷射產品的機蓋,可能會導致暴露在危險的雷射輻射中。裝置內部並無可自行維修的零件。
- 利用或執行非本文中所指定的控制、調整及執行程序,可能會導致危險的輻射外洩。



危險

部分雷射產品含有內嵌式 Class 3A 或 Class 3B 雷射二極體。請注意下列事項: 在開啟光碟機時,會發生雷射輻射。請勿直視光束或用光學儀器直接檢視,並避免直接暴露在光束中。









≥ 18 公斤 (37 磅)

≥ 32 公斤 (70.5 磅)

≥ 55 公斤 (121.2 磅)


警告: 搬運時請注意安全。





警告:

。 裝置上的電源控制按鈕及電源供應器上的電源開關,無法關閉裝置所產生的電流。 該裝置可能有多條電源線。若要除去裝置流出的所有電流,請確認已切斷所有電源線的電源。







DANGER

Le courant électrique provenant de l'alimentation, du téléphone et des câbles de transmission peut présenter un danger.

Pour éviter tout risque de choc électrique :

- Ne manipulez aucun câble et n'effectuez aucune opération d'installation, d'entretien ou de reconfiguration de ce produit au cours d'un orage.
- Branchez tous les cordons d'alimentation sur un socle de prise de courant correctement câblé et mis à la terre.
- Branchez sur des socles de prise de courant correctement câblés tout équipement connecté à ce produit.
- Lorsque cela est possible, n'utilisez qu'une seule main pour connecter ou déconnecter les câbles d'interface.
- Ne mettez jamais un équipement sous tension en cas d'incendie ou d'inondation, ou en présence de dommages matériels.
- Avant de retirer les carters de l'unité, mettez celle-ci hors tension et déconnectez ses cordons d'alimentation, ainsi que les câbles qui la relient aux réseaux, aux systèmes de télécommunication et aux modems (sauf instruction contraire mentionnée dans les procédures d'installation et de configuration).
- Lorsque vous installez, que vous déplacez, ou que vous manipulez le présent produit ou des périphériques qui lui sont raccordés, reportez-vous aux instructions ci-dessous pour connecter et déconnecter les différents cordons.

Connexion	Déconnexion
1. Mettez les unités HORS TENSION.	Mettez les unités HORS TENSION.
2. Commencez par brancher tous les cordons sur les	Débranchez les cordons d'alimentation des prises.
unités.	3. Débranchez les câbles d'interface des connecteurs.
3. Branchez les câbles d'interface sur des connecteurs.	4. Débranchez tous les câbles des unités.
4. Branchez les cordons d'alimentation sur des prises.	
5. Mettez les unités SOUS TENSION.	



ATTENTION:

Remplacer la pile au lithium usagée par une pile de référence identique exclusivement, (référence 45C1566), ou suivre les instructions du fabricant qui en définit les équivalences. Si votre système est doté d'un module contenant une pile au lithium, vous devez le remplacer uniquement par un module identique, produit par le même fabricant. La pile contient du lithium et peut exploser en cas de mauvaise utilisation, de mauvaise manipulation ou de mise au rebut inappropriée.

Ne pas:

- la jeter à l'eau,
- l'exposer à des températures supérieures à 100°C,
- · chercher à la réparer ou à la démonter.

Ne pas mettre la pile à la poubelle. Pour la mise au rebut, se reporter à la réglementation en vigueur.



ATTENTION:

Si des produits à laser (tels que des unités de CD-ROM, de DVD-ROM, des unités à fibres optiques, ou des émetteurs) sont installés, prenez connaissance des informations suivantes :

- Ne retirez pas le carter. En ouvrant l'unité de CD-ROM ou de DVD-ROM, vous vous exposez au rayonnement dangereux du laser. Aucune pièce de l'unité n'est réparable.
- Pour éviter tout risque d'exposition au rayon laser, respectez les consignes de réglage et d'utilisation des commandes, ainsi que les procédures décrites dans le présent manuel.



DANGER

Certains produits à laser contiennent une diode à laser intégrée de classe 3A ou 3B. Prenez connaissance des informations suivantes:

Rayonnement laser lorsque le carter est ouvert. Evitez toute expositiondirecte au rayon laser. Evitez de regarder fixement le faisceau ou del'observer à l'aide d'instruments optiques.









≥18 kg (37 lbs)

≥32 kg (70.5 lbs)

≥55 kg (121.2 lbs)

ATTENTION:


Soulevez la machine avec précaution.





ATTENTION:

L'interrupteur de contrôle d'alimentation de l'unité et l'interrupteur dubloc d'alimentation ne coupent pas le courant électrique alimentantl'unité. En outre, le système peut être équipé de plusieurs cordonsd'alimentation. Pour mettre l'unité hors tension, vous devez déconnectertous les cordons de la source d'alimentation.







VORSICHT

An Netz-, Telefon- und Datenleitungen können gefährliche Spannungen anliegen.

Aus Sicherheitsgründen:

- Bei Gewitter an diesem Gerät keine Kabel anschließen oder lösen. Ferner keine Installations-, Wartungs- oder Rekonfigurationsarbeiten durchführen.
- Gerät nur an eine Schutzkontaktsteckdose mit ordnungsgemäß geerdetem Schutzkontakt anschließen.
- Alle angeschlossenen Geräte ebenfalls an Schutzkontaktsteckdosen mit ordnungsgemäß geerdetem Schutzkontakt anschließen.
- Die Signalkabel nach Möglichkeit einhändig anschließen oder lösen, um einen Stromschlag durch Berühren von Oberflächen mit unterschiedlichem elektrischem Potenzial zu vermeiden.
- Geräte niemals einschalten, wenn Hinweise auf Feuer, Wasser oder Gebäudeschäden vorliegen.

- Die Verbindung zu den angeschlossenen Netzkabeln, Telekommunikationssystemen, Netzwerken und Modems ist vor dem Öffnen des Gehäuses zu unterbrechen, sofern in den Installations- und Konfigurationsprozeduren keine anders lautenden Anweisungen enthalten sind.
- Zum Installieren, Transportieren und Öffnen der Abdeckungen des Computers oder der angeschlossenen Einheiten die Kabel gemäß der folgenden Tabelle anschließen und abziehen.

Zum Anschließen der Kabel gehen Sie wie folgt vor	Zum Abziehen der Kabel gehen Sie wie folgt vor
Schalten Sie alle Einheiten AUS.	Schalten Sie alle Einheiten AUS.
2. Schließen Sie erst alle Kabel an die Einheiten an.	2. Ziehen Sie zuerst alle Netzkabel aus den
3. Schließen Sie die Signalkabel an die Buchsen an.	Netzsteckdosen.
4. Schließen Sie die Netzkabel an die Steckdose an.	Ziehen Sie die Signalkabel aus den Buchsen.
5. Schalten Sie die Einheit EIN.	Ziehen Sie alle Kabel von den Einheiten ab.



CAUTION:

Eine verbrauchte Lithiumbatterie nur durch eine Batterie mit der Teilenummer 45C1566 oder eine gleichwertige, vom Hersteller empfohlene Batterie ersetzen. Enthält das System ein Modul mit einer Lithiumbatterie, dieses nur durch ein Modul desselben Typs und von demselben Hersteller ersetzen. Die Batterie enthält Lithium und kann bei unsachgemäßer Verwendung, Handhabung oder Entsorgung explodieren.

Die Batterie nicht:

- mit Wasser in Berührung bringen.
- über 100 C erhitzen.
- · reparieren oder zerlegen.

Die örtlichen Bestimmungen für die Entsorgung von Sondermüll beachten.



ACHTUNG:

Bei der Installation von Lasergeräten (wie CD-ROM-Laufwerken, DVD- aufwerken, Einheiten mit Lichtwellenleitertechnik oder Sendern) Folgendes beachten:

- Die Abdeckungen nicht entfernen. Durch Entfernen der Abdeckungen des Lasergeräts können gefährliche Laserstrahlungen freigesetzt werden. Das Gerät enthält keine zu wartenden Teile.
- Werden Steuerelemente, Einstellungen oder Durchführungen von Prozeduren anders als hier angegeben verwendet, kann gefährliche Laserstrahlung auftreten.



VORSICHT

Einige Lasergeräte enthalten eine Laserdiode der Klasse 3A oder 3B. Beachten Sie Folgendes:

Laserstrahlung bei geöffneter Verkleidung. Nicht in den Strahl blicken. Keine Lupen oder Spiegel verwenden. Strahlungsbereich meiden.









≥18 kg (37 lbs)

≥32 kg (70.5 lbs)

≥55 kg (121.2 lbs)

ACHTUNG:


Arbeitsschutzrichtlinien beim Anheben der Maschine beachten.





ACHTUNG:

Mit dem Netzschalter an der Einheit und am Netzteil wird die Stromversorgung für die Einheit nicht unterbrochen. Die Einheit kann auch mit mehreren Netzkabeln ausgestattet sein. Um die Stromversorgung für die Einheit vollständig zu unterbrechen, müssen alle zum Gerät führenden Netzkabel vom Netz getrennt werden.







סכנה

זרם חשמלי המועבר בכבלי חשמל, טלפון ותקשורת הוא מסוכן.

כדי להימנע מסכנת התחשמלות:

- אל תחברו או תנתקו כבלים, ואל תבצעו פעולת התקנה, תחזוקה או שינוי תצורה במוצר זה במהלך סופת ברקים.
 - חברו את כל כבלי החשמל לשקע חשמל מחווט ומוארק כהלכה.
 - חברו כל ציוד שיחובר למוצר זה לשקעי חשמל מחווטים כהלכה.
 - במידת האפשר, השתמשו ביד אחת בלבד לחיבור או לניתוק של כבלי אותות.
- לעולם אל תפעילו ציוד כלשהו כאשר יש עדות לנזק מבני או לנזק כתוצאה מאש או ממים.
- נתקו את כבלי החשמל, מערכות התקשורת, התקני הרשת והמודמים המחוברים לפני פתיחת כיסויי ההתקן,
 אלא אם הליכי ההתקנה וקביעת התצורה מורים אחרת.
 - בעת התקנה, העברה או פתיחת כיסויים במוצר זה או בהתקנים המחוברים,
 חברו ונתקו את הכבלים כמתואר בטבלה שלהלן.

כדי לחבר	כדי לנתק
1. כבו הכל.	1. כבו הכל.
2. ראשית, חברו את כל הכבלים להתקנים.	2. ראשית, נתקו את כבלי החשמל מהשקעים.
3. חברו את כבלי האותות למחברים.	3. נתקו את כבלי האותות מהמחברים.
4. חברו את כבלי החשמל לשקעים.	4. הסירו את כל הכבלים מההתקנים.
5. הפעילו את ההתקן.	



זהירות:

בעת החלפת סוללת הליתיום, השתמשו רק בסוללה בעלת מק"ט 45C1566 או בסוג תואם שהומלץ על ידי היצרן. אם המערכת כוללת מודול המכיל סוללת ליתיום, החליפו אותו רק במודול מאותו סוג ומתוצרת אותו יצרן. הסוללה מכילה ליתיום, ועלולה להתפוצץ אם לא משתמשים ומטפלים בה או משליכים אותה כיאות.

:לעולם

- אל תטבלו במים -
- (212 $^{
 m O}$ F) אל תחממו לטמפרטורה הגבוהה מ-210 $^{
 m O}$ C -
 - אל תתקנו או תפרקו -

השליכו את הסוללה כנדרש לפי התקנות והחוקים המקומיים.



:זהירות

בעת התקנת מוצרי לייזר (כגון כונני תקליטורים ו-DVD, התקני סיב אופטי או משדרים), שימו לב לאזהרות הבאות:

- אל תסירו את הכיסויים. הסרת הכיסויים של מוצר הלייזר עלולה לגרום לחשיפה לקרינת לייזר מסוכנת.אין חלקים ברי טיפול בתוך ההתקן.
- שינויים, שימוש בבקרות או ביצוע הליכים אחרים מאלה המתוארים כאן, עלולים לגרום לחשיפה לקרינה מסוכנת.




סכנה

מוצרי לייזר מסוימים מכילים דיודת לייזר מסוג Class 3A או Class 3A. שימו לב לאזהרה הבאה:

כאשר הוא פתוח, המוצר פולט קרינת לייזר. אל תביטו ישירות בקרן, אל תביטו ישירות בעזרת ציוד אופטי, והימענו מחשיפה לקרן.









('ביב' 70.5 ליב' 32≤



('ביב' 121.2 ליב') ≤ 55


זהירות: השתמשו בהליכים הנאותים בעת הרמת הציוד.





זהירות:

לחצן ההפעלה של ההתקן ומתג ההפעלה של ספק החשמל אינם מפסיקים את זרם החשמל המסופק להתקן. בנוסף, ההתקן עשוי לכלול יותר מכבל חשמל אחד. כדי לסלק את כל הזרם החשמלי מההתקן, ודאו שכל כבלי החשמל מנותקים ממקור החשמל.







PERICOLO

La corrente elettrica proveniente dai cavi di alimentazione, del telefono e di comunicazione può essere pericolosa.

Per evitare il rischio di scosse elettriche:

- Non collegare o scollegare qualsiasi cavo oppure effettuare l'installazione, la manutenzione o la riconfigurazione del prodotto durante un temporale.
- Collegare tutti i fili elettrici a una presa di alimentazione correttamente cablata e dotata di messa a
- Collegare alle prese elettriche appropriate tutte le apparecchiature che verranno utilizzate per questo prodotto.

- Se possibile, utilizzare solo una mano per collegare o scollegare i cavi di segnale.
- Non accendere assolutamente apparecchiature in presenza di incendi, perdite d'acqua o danno strutturale.
- Scollegare i cavi di alimentazione, i sistemi di telecomunicazione, le reti e il modem prima di aprire i coperchi del dispositivo, salvo istruzioni contrarie relative alle procedure di installazione e configurazione.
- Collegare e scollegare i cavi come descritto nella seguente tabella quando vengono effettuate operazioni di installazione, spostamento o apertura dei coperchi di questo prodotto o delle unità collegate.

Per collegarsi	Per scollegarsi
SPEGNERE le apparecchiature.	SPEGNERE le apparecchiature.
2. Innanzitutto, collegare tutti i cavi alle unità.	2. Innanzitutto, rimuovere i cavi di alimentazione dalla
3. Collegare i cavi di segnale ai connettori.	presa.
4. Collegare i cavi di alimentazione alla presa.	3. Rimuovere i cavi di segnale dai connettori.
5. Accendere l'unità.	4. Rimuovere tutti i cavi dalle unità.



ATTENZIONE:

Quando si sostituisce la batteria al litio, utilizzare solo il Numero parte 45C1566 o un tipo di batteria equivalente consigliato dal produttore. Se sul sistema è presente un modulo che contiene una batteria al litio, sostituirlo solo con un tipo di modulo dello stesso tipo della stessa casa di produzione. La batteria contiene litio e può esplodere se usata, maneggiata o smaltita in modo non corretto.

Non:

- Gettare o immergere la batteria nell'acqua
- Riscaldarla ad una temperatura superiore ai 100 gradi C (212 gradi F)
- · Smontarla, ricaricarla o tentare di ripararla

Le batterie usate vanno smaltite in accordo alla normativa in vigore (DPR 915/82 e successive disposizioni e disposizioni locali).



ATTENZIONE:

Quando vengono installati prodotti laser (quali CD-ROM, unità DVD-ROM, unità a fibre ottiche o trasmittenti), tener presente quanto segue:

- Non rimuovere gli sportelli. L'apertura di un'unità laser può determinare l'esposizione a radiazioni laser pericolose. All'interno dell'unità non vi sono parti su cui effettuare l'assistenza tecnica.
- L'utilizzo di controlli, regolazioni o l'esecuzione di procedure non descritti nel presente manuale possono provocare l'esposizione a radiazioni pericolose.



PERICOLO

Alcune unità laser contengono un diodo laser di Classe 3A o Classe 3B. Tener presente quanto segue:

Aprendo l'unità vengono emesse radiazioni laser. Non fissare il fascio, non guardarlo direttamente con strumenti ottici ed evitare l'esposizione al fascio.









≥18 kg (37 lbs)

≥32 kg (70.5 lbs)

≥55 kg (121.2 lbs)

ATTENZIONE:


Prestare attenzione nel sollevare l'apparecchiatura.





ATTENZIONE:

Il pulsante di controllo dell'alimentazione presente sull'unità e l'interruttore dell'alimentatore non disattivano l'alimentazione corrente fornita all'unità. E' possibile che l'unità disponga di più cavi di alimentazione. Per disattivare l'alimentazione dall'unità, accertarsi che tutti i cavi di alimentazione siano scollegati dalla fonte di alimentazione.







위험

전원, 전화, 통신 케이블의 전류는 위험합니다.

감전의 위험을 피하려면 다음과 같이 하십시오.

- 번개가 치는 날에는 케이블을 연결 또는 분리하거나 본 제품을 설치, 보수, 재구성하지 마십시오.
- 모든 전원 코드는 올바르게 접지된 전기 콘센트에 연결하십시오.
- 본 제품에 연결될 장치는 올바르게 배선된 콘센트에 연결하십시오.
- 신호 케이블을 연결 또는 분리할 때 가능하면 한 손만을 사용하십시오.
- 불 또는 물로 인한 손상이나 구조적인 손상이 있을 경우 장치의 전원을 절대 켜지 마십시오.
- 설치 및 구성 과정에 별도의 지시 사항이 없는 경우, 장치의 덮개를 열기 전에 연결된 전원 코드, 원격 통신 시스템, 네트워크, 모뎀을 분리하십시오.
- 본 제품이나 연결된 장치를 설치, 이동하거나 덮개를 열 때 다음 표와 같은 순서로 케이블을 연결하거나 분리하십시오.

연결할 때:	분리할 때:
4 05 120 120 120	
1. 모든 장치의 전원을 끄십시오.	1. 모든 장치의 전원을 끄십시오.
2. 먼저 모든 케이블을 장치에 연결하십시오.	2. 먼저 콘센트에서 전원 코드를 분리하십시오.
3. 커넥터에 신호 케이블을 연결하십시오.	3. 커넥터에서 신호 케이블을 분리하십시오.
4. 콘센트에 전원 코드를 연결하십시오.	4. 장치에서 모든 케이블을 분리하십시오.
5. 장치의 전원을 켜십시오.	



주의:

배터리를 교환할 때는 Part Number 45C1566 또는 제조업체에서 지정한 동일한 종류의 제품을 사용하십시오. 사용자의 시스템이 리튬 배터리를 포함하는 모듈일 경우, 동일한 제조업체에서 동일한 모듈 유형으로 생산된 제품으로 교체하십시오. 배터리에는 리튬이 함유되어 있어 잘못 사용, 취급 또는 폐기할 경우 폭발의 위험이 있습니다.

사고를 방지하려면 다음 사항을 준수하십시오.

- 배터리를 물 속에 던지거나 침수시키지 마십시오.
- 100℃(212°F) 이상 가열하지 마십시오.
- 수리하거나 분해하지 마십시오.

배터리를 폐기할 때는 법령 또는 회사의 안전 수칙에 따라 폐기하십시오.



주의:

CD-ROM, DVD-ROM 장치, 광섬유 장치 또는 송신 장치와 같은 레이저 제품을 설치할 때, 다음과 같은 취급 주의사항을 참고하십시오.

- 덮개를 열지 마십시오. 덮개를 열면 레이저 복사 에너지에 노출될 위험이 있습니다. 장치 내부에는 사용자가 조정하거나 수리할 수 있는 부품이 없습니다.
- 규정된 것 이외의 절차 수행, 제어 조정 등의 행위로 인해 해로운 레이저 복사에 노출될 수 있습니다.



위험

일부 장비에는 임베디드 클래스 3A 또는 클래스 3B 레이저 다이오드가 있습니다. 다음 주의사항에 유의하십시오.

드라이브가 열리면 레이저 복사 에너지가 방출됩니다. 광선이 눈에 직접 쏘이지 않도록 하십시오. 나안 또는 광학 기구를 착용한 상태에서 광선을 직접 바라보지 않도록 하십시오.









≥18 kg (37 lbs)

≥32 kg (70.5 lbs)

≥55 kg (121.2 lbs)

주의: 제품을 들어 올릴 때 안전 규제를 따르십시오.





주의:

장치의 전원 제어 버튼 및 전원 공급 장치의 전원 스위치를 사용하여 장치에 공급되는 전기를 차단하지 마십시오. 장치는 둘 이상의 코드를 가지고 있을 수 있습니다. 장치에서 모든 전원을 차단하려면 콘센트에서 코드가 모두 분리되어 있는지 확인하십시오.







PELIGRO

La corriente eléctrica procedente de cables de alimentación, teléfonos y cables de comunicación puede ser peligrosa.

Para evitar el riesgo de descarga eléctrica:

- No conecte ni desconecte los cables ni realice ninguna tarea de instalación, mantenimiento o reconfiguración de este producto durante una tormenta eléctrica.
- Conecte todos los cables de alimentación a tomas de corriente debidamente cableadas y conectadas a tierra.
- Cualquier equipo que se conecte a este producto también debe conectarse a tomas de corriente debidamente cableadas.
- Siempre que sea posible, utilice una sola mano para conectar o desconectar los cables de señal.
- No encienda nunca un equipo cuando hay señales de fuego, agua o daños estructurales.

- Desconecte los cables de alimentación, los sistemas de telecomunicaciones, las redes y los módems conectados antes de abrir las cubiertas de los dispositivos, a menos que se indique lo contrario en los procedimientos de instalación y configuración.
- Conecte y desconecte los cables, como se describe en la tabla siguiente, cuando instale, mueva o abra las cubiertas de este producto o de los dispositivos conectados.

Para conectar	Para desconectar
1. APÁGUELO todo.	1. APÁGUELO todo.
En primer lugar, conecte todos los cables a los dispositivos.	En primer lugar, desenchufe los cables de alimentación de las tomas de corriente.
3. Conecte los cables de señal a los conectores.	3. Desconecte los cables de señal de los conectores.
 Enchufe los cables de alimentación a las tomas de corriente. 	Desconecte todos los cables de los dispositivos.
5. Encienda el dispositivo.	



PRECAUCIÓN:

Cuando sustituya una batería de litio, utilice solamente una batería número de pieza 45C1566 u otra de tipo equivalente recomendada por el fabricante. Si su sistema dispone de un módulo que contiene una batería de litio, reemplácelo sólo con el mismo tipo de módulo, del mismo fabricante. La batería contiene litio y puede explotar si no se utiliza, manipula o desecha correctamente.

No debe:

- Arrojarla al agua o sumergirla en ella
- Exponerla a temperaturas superiores a 100°C (212°F)
- Repararla o desmontarla

Deshágase de la batería según especifiquen las leyes o normas locales.



PRECAUCIÓN:

Cuando haya productos láser (como unidades de CD-ROM, unidades de DVD, dispositivos de fibra óptica o transmisores) instalados, tenga en cuenta lo siguiente:

- No quite las cubiertas. Si quita las cubiertas del producto láser, podría quedar expuesto a radiación láser peligrosa. Dentro del dispositivo no existe ninguna pieza que requiera servicio técnico.
- Si usa controles o ajustes o realiza procedimientos que no sean los especificados aquí, podría exponerse a radiaciones peligrosas.



PELIGRO

Algunos productos láser tienen incorporado un diodo láser de clase 3A o clase 3B. Tenga en cuenta lo siguiente:

Cuando se abre, queda expuesto a radiación láser. No mire directamente al rayo láser, ni siquiera con instrumentos ópticos, y evite exponerse directamente al rayo láser.









≥18 kg (37 lbs)

≥32 kg (70.5 lbs)

≥55 kg (121.2 lbs)

PRECAUCIÓN:


Adopte procedimientos seguros al levantar el equipo.





PRECAUCIÓN:

El botón de control de alimentación del dispositivo y el interruptor de alimentación de la fuente de alimentación no desconectan la corriente eléctrica suministrada al dispositivo. Además, el dispositivo podría tener más de un cable de alimentación. Para suprimir toda la corriente eléctrica del dispositivo, asegúrese de que todos los cables de alimentación estén desconectados de la toma de corriente.



Chapter 3. General information

This chapter provides general information that applies to all machine types supported by this publication.

Online Books folder

The Online Books folder preinstalled on your computer contains the *ThinkStation User Guide*, which provides information about your computer to help you set up, use, and maintain your computer. It requires no Internet access to view the publication.

To view the publications, click $Start \to All\ Programs \to Online\ Books \to Online\ Books$, then double-click the appropriate publication for your computer. The publications are also available on the Lenovo Support Web site at:http://www.lenovo.com/support

Notes:

- The publications are in Portable Document Format (PDF). To view the publications, you need to have the Adobe Reader program preinstalled on your computer. If the Adobe Reader program has not been installed on your computer, a message will appear when you attempt to view the PDF file and you will be guided through the Adobe Reader program installation.
- 2. The publications are available in other languages on the Lenovo Support Web site at:http://www.lenovo.com/support
- 3. If you want to install a different language version of the Adobe Reader program rather than the version preinstalled on your computer, download the language version you want from the Adobe Web site at:http://www.adobe.com

Lenovo ThinkVantage Tools

The Lenovo ThinkVantage Tools program guides you to a host of information sources and provides easy access to various tools to help you work more easily and securely.

Note: The Lenovo ThinkVantage Tools program is only available on computers with the Windows 7 operating system from Lenovo.

To access the Lenovo ThinkVantage Tools program, click $Start \rightarrow All \ Programs \rightarrow Lenovo \ ThinkVantage \ Tools$.

Lenovo Welcome

The Lenovo Welcome program introduces you to some innovative built-in features of Lenovo and guides you through a few important setup tasks to help you make the most of your computer.

Note: The Lenovo Welcome program is only available on computers preinstalled with the Windows 7 operating system or the Windows Vista operating system from Lenovo.

Additional information resources

If you have Internet access, the most up-to-date information for your computer is available at: http://www.lenovo.com/support

- CRU removal and installation instructions
- Publications
- Troubleshooting information
- Parts information

- · Downloads and drivers
- Links to other useful sources of information

Specifications

This section lists the physical specifications for your computer.

Dimensions

Width: 174.8 mm (6.88 inches)

Height: 425.2 mm (16.74 inches) (floor to top of handle)

Depth: 430.8 mm (16.96 inches)

Weight

Maximum configuration: 11.2 kg (24.7 lbs)

Environment

• Air temperature:

Operating: 10° to 35°C (50° to 95°F)

Non-operating: -40° to 60°C (-40° to 140°F) (with package) Non-operating: -10° to 60°C (14° to 140°F) (without package)

Note: The allowable upper temperature limit is lowered by 1°C (1.8°F) for every 300 m (1000 ft) above sea level.

· Humidity:

Operating: 20% to 80% (non-condensing)
Non-operating: 20% to 90% (non-condensing)

· Maximum altitude:

Operating: 0 to 10 000 ft (0 to 3 048 m)

Non-operating: 0 to 35 000 ft (-15.2 to 10 668 m)

Electrical input

- Input voltage:
 - Low range:

Minimum: 100 V ac Maximum: 127 V ac

Input frequency range: 50 to 60 Hz Voltage-selection switch setting: 115 V ac

- High range:

Minimum: 200 V ac Maximum: 240 V ac

Input frequency range: 50 to 60 Hz Voltage-selection switch setting: 230 V ac

Chapter 4. General Checkout

Attention

The drives in the computer you are servicing might have been rearranged or the drive startup sequence might have been changed. Be extremely careful during write operations such as copying, saving, or formatting. Data or programs can be overwritten if you select an incorrect drive.

General error messages appear if a problem or conflict is found by an application program, the operating system, or both. For an explanation of these messages, refer to the information supplied with that software package.

Before replacing a FRU, ensure that the latest level of BIOS is installed on the system. A down-level BIOS might cause false errors and unnecessary replacement of the system board. For more information on how to determine and obtain the latest level BIOS, see "BIOS levels" on page 165.

Use the following procedure to help determine the cause of a problem:

- 1. Power-off the computer and all external devices.
- 2. Check all cables and power cords.
- 3. Set all display controls to the middle position.
- 4. Power-on all external devices.
- 5. Power-on the computer.
 - Look for displayed error codes
 - Listen for beep codes
 - Look for readable instructions or a main menu on the display.

If you did not receive the correct response, proceed to step 6 on page 31.

If you do receive the correct response, proceed to step 7 on page 31.

- 6. Look at the following conditions and follow the instructions:
 - If you hear beep codes during POST, go to "Beep symptoms" on page 63.
 - If the computer displays a POST error, go to "POST error codes" on page 64.
 - If the computer hangs and no error is displayed, continue at step 7 on page 31.
- 7. Run the Diagnostic programs. See Chapter 5 "Diagnostics" on page 33.
 - If you receive an error, replace the part that the diagnostic program calls out or go to "Diagnostic error codes" on page 46.
 - If the test stops and you cannot continue, replace the last device tested.

Problem determination tips

Due to the variety of hardware and software combinations that can be encountered, use the following information to assist you in problem determination. If possible, have this information available when requesting assistance from Service Support and Engineering functions.

- Machine type and model
- Processor or hard disk drive upgrades
- Failure symptom
 - Do diagnostics indicate a failure?
 - What, when, where, single, or multiple systems?
 - Is the failure repeatable?

- Has this configuration ever worked?
- If it has been working, what changes were made prior to it failing?
- Is this the original reported failure?
- Diagnostics version
 - Type and version level
- Hardware configuration
 - Print (print screen) configuration currently in use
 - BIOS level
- Operating system software
 - Type and version level

Notes: To eliminate confusion, identical systems are considered identical only if they:

- 1. Are the exact machine type and models
- 2. Have the same BIOS level
- 3. Have the same adapters/attachments in the same locations
- 4. Have the same address jumpers/terminators/cabling
- 5. Have the same software versions and levels
- 6. Have the same diagnostic diskettes (version)
- 7. Have the same configuration options set in the system
- 8. Have the same setup for operating-system-controlled files

Comparing the configuration and software set-up between "working and non-working" systems will often lead to problem resolution.

Chapter 5. Diagnostics

Diagnostic programs are used to test hardware components of your computer. Diagnostic programs are also used to report operating-system-controlled settings that interfere with the correct operation of your computer. There are two programs preinstalled on your computer to help you diagnose computer problems:

- Lenovo ThinkVantage Toolbox or Lenovo System Toolbox, depending on your operating system (used when you are running the Windows operating system)
- PC-Doctor for Rescue and Recovery (used when your Windows operating system does not start)

Notes:

- 1. You can also download the PC-Doctor for DOS diagnostic program from http://www.lenovo.com/support. See "PC-Doctor for DOS" on page 34 for detailed information.
- 2. If you are unable to isolate and repair the problem yourself after running the diagnostic programs, save and print the log files created by the diagnostic programs. You will need the log files when you speak to a Lenovo technical support representative.

Lenovo ThinkVantage Toolbox

Note: The Lenovo ThinkVantage Toolbox program is only available on computers preinstalled with the Windows 7 operating system from Lenovo.

The Lenovo ThinkVantage Toolbox program helps you maintain your computer, improve computing security, diagnose computer problems, get familiar with the innovative technologies provided by Lenovo, and get more information about your computer. You can use the Diagnostics feature of the Lenovo ThinkVantage Toolbox program to test devices, diagnose computer problems, create bootable diagnostic media, update system drivers, and view system information.

To run the Lenovo ThinkVantage Toolbox program, click $Start \rightarrow All \ Programs \rightarrow Lenovo \ ThinkVantage \ Tools \rightarrow System Health and Diagnostics. Follow the instructions on the screen.$

For additional information about running the Lenovo ThinkVantage Toolbox program, refer to the Lenovo ThinkVantage Toolbox help system.

Lenovo System Toolbox

Note: The Lenovo System Toolbox program is only available on computers preinstalled with the Windows Vista operating system or the Windows XP operating system from Lenovo.

The Lenovo System Toolbox program is a diagnostic program that works through the Windows operating system and enables you to view symptoms and solutions for computer problems, access the Lenovo troubleshooting center, update system drivers, and review system information.

To run the Lenovo System Toolbox program, click $Start \rightarrow All \ Programs \rightarrow Lenovo \ System \ Toolbox$. Follow the instructions on the screen.

For additional information about running the Lenovo System Toolbox program, refer to the Lenovo System Toolbox help system.

PC-Doctor for Rescue and Recovery

The PC-Doctor for Rescue and Recovery diagnostic program is part of the Rescue and Recovery workspace on each Lenovo computer. Use the PC-Doctor for Rescue and Recovery diagnostic program if you are unable to start the Windows operating system.

To run the PC-Doctor for Rescue and Recovery diagnostic program from the Rescue and Recovery workspace, do the following:

- 1. Turn off the computer.
- 2. Repeatedly press and release the F11 key when turning on the computer. When you hear beeps or see a logo screen, stop pressing the F11 key. The Rescue and Recovery workspace opens after a short delay.
- From the Rescue and Recovery workspace, select Launch advanced Rescue and Recovery → Diagnose hardware. The PC-Doctor for Rescue and Recovery diagnostic program opens.
- 4. Select the diagnostic test you want to run. Then, follow the instructions on the screen.

For additional information about running the PC-Doctor for Rescue and Recovery diagnostic program, refer to the PC-Doctor for Rescue and Recovery help system.

Note: If you encounter failures that prevent you from gaining access to the Rescue and Recovery workspace, you can run the PC-Doctor for Rescue and Recovery diagnostic program after using a rescue medium to recover the computer from failures and gaining access to the Rescue and Recovery workspace. See "Creating and using rescue media" in your *ThinkStation User Guide*.

PC-Doctor for DOS

You can also download the latest version of the PC-Doctor for DOS diagnostic program from http://www.lenovo.com/support. The PC-Doctor for DOS diagnostic program runs independently of the Windows operating system. Use the PC-Doctor for DOS diagnostic program if you are unable to start the Windows operating system or if the two diagnostic programs preinstalled on your computer have not been successful in isolating a possible problem. You can run the PC-Doctor for DOS diagnostic program from a diagnostic disc that you created.

Creating a diagnostic disc

This section provides instructions on how to create a diagnostic disc.

To create a diagnostic disc, do the following:

- 1. Download a self-starting bootable CD/DVD image (known as an ISO image) of the diagnostic program from:http://www.lenovo.com/support
- 2. Use any CD/DVD burning software to create a diagnostic disc with the ISO image.

Running the diagnostic program from a diagnostic disc

This section provides instructions on how to run the diagnostic program from a diagnostic disc that you created.

To run the diagnostic program from a diagnostic disc that you created, do the following:

- 1. Make sure the optical drive you want to use is set as the first boot device in the startup device sequence. See "Selecting or changing the startup device sequence" on page 41.
- 2. Make sure the computer is turned on and then insert the disc into the optical drive. The diagnostic program opens.

Note: You can insert the disc into the optical drive when you are setting the startup device sequence. However, if you insert the disc into the optical drive when you have already entered the operating system, you need to restart the computer to access the diagnostic program.

3. Follow the instructions on the screen to select the diagnostic test you want to run.

Note: For additional help, press the F1 key.

4. Remove the diagnostic disc from the optical drive when you complete the diagnostic process.

Navigating through the diagnostics programs

Use the cursor movement keys to navigate within the menus.

- The Enter key is used to select a menu item.
- The Esc key is used to back up to the previous menu.
- For online help, select F1.

Running tests

There are four ways to run the diagnostic tests.

- Using the cursor movement keys, highlight Run Normal Test or Run Quick Test from the Diagnostics
 menu and then press Enter. This automatically runs a pre-defined group of tests from each test category.
 Run Normal Test runs a more extensive set of tests than Run Quick Test does and takes longer to
 complete.
- Press F5 to automatically run all selected tests in all categories.
- From within a test category, press Ctrl+Enter to automatically run only the selected tests in that category.
- Using the cursor movement keys, highlight a single test within a test category, and then press Enter.
 This runs only that test.

Press Esc at any time to stop the testing process.

Test results (N/A, PASSED, FAILED, ABORTED) are displayed in the field beside the test description and in the test log. See "Viewing the test log" on page 36.

To select one or more tests, do the following:

- 1. Open the corresponding test category.
- 2. Using the cursor movement keys, highlight the desired test.
- 3. Press the space bar. A selected test is marked by >>. Pressing the space bar again de-selects a test and removes the >>.
- 4. Repeat steps 2 and 3 above to select all desired tests.

Test results

Diagnostics test results produce the following error code format:

Function Code Failure Type DeviceID Date ChkDigits Text	
---	--

• Function Code:

Represents the feature or function within the computer.

• Failure Type:

Represents the type of error encountered.

DeviceID:

Contains the component's unit-ID that corresponds to a fixed disk drive, removable media drive, serial or parallel port, processor, specific RIMM, or a device on the PCI bus.

Date:

Contains the date when the diagnostic test was run. The date is retrieved from CMOS and displayed using the YYYYMMDD format.

• ChkDigits:

Contains a 2-digit check-digit value to ensure the following:

- Diagnostics were run on the specified date.
- Diagnostics were run on the specified computer.
- The diagnostic error code is recorded correctly.

• Text:

Description of the error.

Note: See "Diagnostic error codes" on page 46 for error code listings.

Quick and Full erase - hard disk drive

The diagnostics program offers two hard disk drive formatting utilities:

- · Quick Erase Hard Drive
- Full Erase Hard Drive

Quick Erase Hard Drive provides a DOS utility that performs the following:

- · Destroys the Master Boot Record (MBR) on the hard disk drive.
- Destroys all copies of the FAT Table on all partitions (both the master and backup).
- · Destroys the partition table.
- Provides messages that warn the user that this is a non-recoverable process.

Full Erase Hard Drive provides a DOS utility that performs the following:

- · Performs all the steps in Quick Erase.
- Provides a DOS utility that writes random data to all sectors of the hard disk drive.
- Provides an estimate of time to completion along with a visual representation of completion status.
- Provides messages that warn the user about a non-recoverable process.

Important: Make sure that all data is backed up before using the Quick or Full Erase functions.

To select the Quick Erase Hard Drive or Full Erase Hard Drive utility, do the following:

- 1. Select the UTILITY option on the toolbar and press Enter.
- Select either the QUICK ERASE or FULL ERASE HARD DISK option and follow the instructions on the screen.

Viewing the test log

Errors reported by the diagnostic test will be displayed by the program as a failed test.

To view details of a failure or to view a list of test results, use the following procedure from any test category screen:

1. Press F3 to activate the log file.

2. Press F3 again to save the file to diskette or press F2 to print the file.

Chapter 6. Using the Setup Utility program

The Setup Utility program is used to view and change the configuration settings of your computer, regardless of which operating system you are using. However, the operating system settings might override any similar settings in the Setup Utility program.

Starting the Setup Utility program

To start the Setup Utility program, do the following:

- 1. Make sure your computer is turned off.
- 2. Repeatedly press and release the F1 key when turning on the computer. When you hear multiple beeps or see a logo screen, release the F1 key.

Note: If a Power-On Password or an Administrator Password has been set, the Setup Utility program menu will not be displayed until you type the correct password. For more information, see "Using passwords" on page 39.

The Setup Utility program might start automatically when POST detects that hardware has been removed or new hardware has been installed in your computer.

Viewing and changing settings

The Setup Utility program menu lists various items about the system configuration. To view or change settings, start the Setup Utility program. See "Starting the Setup Utility program" on page 39. Then, follow the instructions on the screen.

When working with the Setup Utility program menu, you must use the keyboard. The keys used to perform various tasks are displayed at the bottom of each screen.

Using passwords

By using the Setup Utility program, you can set passwords to prevent unauthorized access to your computer and data. The following types of passwords are available:

- Power-On Password
- Administrator Password
- Hard Disk Password

You do not have to set any passwords to use your computer. However, using passwords improves computing security. If you decide to set any passwords, read the following sections.

Password considerations

A password can be any combination of up to 64 alphabetic and numeric characters. For security reasons, it is recommended to use a strong password that cannot be easily compromised. To set a strong password, use the following guidelines:

- · Have at least eight characters in length
- · Contain at least one alphabetic character and one numeric character
- · Setup Utility program and hard disk drive passwords are not case sensitive

- Not be your name or your user name
- Not be a common word or a common name
- · Be significantly different from your previous passwords

Power-On Password

When a Power-On Password is set, you are prompted to type a valid password each time the computer is turned on. The computer cannot be used until the valid password is typed in.

Administrator Password

Setting an Administrator Password deters unauthorized users from changing configuration settings. If you are responsible for maintaining the configuration settings of several computers, you might want to set an Administrator Password.

When an Administrator Password is set, you are prompted to type a valid password each time you try to access the Setup Utility program. The Setup Utility program cannot be accessed until a valid password is typed in.

If both the Power-On Password and Administrator Password are set, you can type either password. However, you must use your Administrator Password to change any configuration settings.

Hard Disk Password

Setting a Hard Disk Password prevents unauthorized access to the data on the hard disk drive. When a Hard Disk Password is set, you are prompted to type a valid password each time the system is turned on.

Setting, changing, and deleting a password

To set, change, or delete a password, do the following:

- 1. Start the Setup Utility program. See "Starting the Setup Utility program" on page 39.
- 2. From the Setup Utility program main menu, select Security.
- Depending on the password type, select Set Power-On Password, Set Administrator Password, or Hard Disk Security → Hard Disk Password.
- 4. Follow the instructions on the right side of the screen to set, change, or delete a password.

Note: A password can be any combination of up to 64 alphabetic and numeric characters. For more information, see "Password considerations" on page 39.

Enabling or disabling a device

This section provides information on how to enable or disable user access to the following devices:

Floppy Driver A When this option is set to Disabled, the floppy drive cannot be accessed.

USB Setup Use this option to enable or disable a USB connector. When a USB connector is

disabled, the device connected to the USB connector cannot be used.

SATA Controller When this option is set to Disable, all devices connected to the SATA connectors (such

as hard disk drives or the optical drive) are disabled and cannot be accessed.

External SATA Port When this option is set to Disable, the device connected to the External SATA

connector cannot be accessed.

To enable or disable a device, do the following:

- 1. Start the Setup Utility program. See "Starting the Setup Utility program" on page 39.
- 2. From the Setup Utility program main menu, select **Devices**.
- 3. Depending on the device you want to enable or disable, do one of the following:
 - Select **USB Setup** to enable or disable a USB device.
 - Select **ATA Drives Setup** to enable or disable an internal or external SATA device.
- 4. Select the desired settings and press Enter.
- 5. Press F10 to save and exit the Setup Utility program. See "Exiting from the Setup Utility program" on page 41.

Selecting a startup device

If your computer does not start up from a device such as the disc, diskette, or hard disk drive as expected, do one of the following to select the startup device you want.

Selecting a temporary startup device

Use this procedure to select a temporary startup device.

Note: Not all discs, hard disk drives, and diskettes are bootable.

- 1. Turn off your computer.
- 2. Repeatedly press and release the F12 key when turning on the computer. When the Please select boot device window displays, release the F12 key.
- 3. Select the desired startup device and press Enter. The computer will start up from the device you selected.

Note: Selecting a startup device from the Please select boot device window does not permanently change the startup sequence.

Selecting or changing the startup device sequence

To view or permanently change the configured startup device sequence, do the following:

- 1. Start the Setup Utility program. See "Starting the Setup Utility program" on page 39.
- 2. From the Setup Utility program main menu, select **Startup**.
- 3. Select the devices for the Primary Boot Sequence, the Automatic Boot Sequence, and the Error Boot Sequence. Read the information displayed on the right side of the screen.
- 4. Press F10 to save and exit the Setup Utility program. See "Exiting from the Setup Utility program" on page 41.

Advanced settings

On some computer models, the **Advanced** menu includes a setting to enable or disable HyperThreading. This feature works only with HyperThreading-aware operating systems, such as the Windows 7 operating system and the Windows Vista operating system. The default setting for HyperThreading is enabled. However, if you are not using a HyperThreading-aware operating system and the setting for HyperThreading is **Enabled**, your computer performance might be degraded. Therefore, you should always set HyperThreading to **Disabled** unless you are sure your operating system supports HyperThreading.

Exiting from the Setup Utility program

After you finish viewing or changing settings, press Esc to return to the Setup Utility program main menu. You might have to press Esc several times. Then, do one of the following:

- If you want to save the new settings, press F10 to save and exit the Setup Utility program.
- If you do not want to save the settings, select $\textbf{Exit} \rightarrow \textbf{Discard Changes}$ and Exit.
- If you want to return to the default settings, press F9 to load the default settings.

Chapter 7. Configuring RAID

This chapter provides information about how to configure Redundant Array of Independent Disks (RAID) for your computer.

Note: The information about configuring RAID in this chapter is applicable only for a Windows environment. For information about configuring RAID in a Linux environment, contact your Linux software provider.

RAID Level

Your computer must have the minimum number of SATA hard disk drives installed for the supported level of RAID below:

- RAID Level 0 Striped disk array
 - Two hard disk drives minimum
 - Better performance without fault tolerance
- RAID Level 1 Mirrored disk array
 - Two hard disk drives minimum
 - Improved read performance and 100% redundancy

To install a secondary hard disk drive, refer to "Replacing the secondary hard disk drive" on page 93.

Configuring the system BIOS to enable SATA RAID functionality

This section describes how to configure the system BIOS to enable SATA RAID functionality.

Note: Use the arrow keys on the keyboard to make selections.

To enable SATA RAID functionality, do the following:

- 1. Start the Setup Utility program. See "Starting the Setup Utility program" on page 39.
- 2. Select **Devices** → **ATA Drives Setup**.
- 3. Select Configure SATA as and press Enter.
- 4. Select RAID and press Enter.
- 5. Press F10 to save the new settings and exit the Setup Utility program.

Creating RAID volumes

This section describes how to use the Intel Matrix Storage Manager option ROM configuration utility to create RAID volumes.

To create RAID volumes, do the following:

- 1. Press Ctrl+I when prompted to enter the Intel Matrix Storage Manager option ROM configuration utility during the computer startup.
- 2. Use the up and down arrow keys to select **Create RAID Volume** and press Enter.
- 3. Type a proper RAID Volume name in the Name field and press Tab.
- 4. Use the arrow keys to select a RAID level in the **RAID Level** field and press Tab.
- 5. If appropriate, use the arrow keys to select a Stripe Size in the **Stripe Size** field and press Tab.
- 6. Type a volume size in the **Capacity** field and press Tab.

- 7. Press Enter to initiate volume creation.
- 8. When prompted, press Y to accept the warning message and create the volume.
- 9. Return to step 2 on page 43 to create additional RAID volumes, or select **Exit** and press Enter.
- 10. Press Y when prompted to confirm the exit.

Deleting RAID volumes

This section describes how to use the Intel Matrix Storage Manager option ROM configuration utility to delete RAID volumes.

To delete RAID volumes, do the following:

- 1. Press Ctrl+I when prompted to enter the Intel Matrix Storage Manager option ROM configuration utility during the computer startup.
- 2. Use the up and down arrow keys to select **Delete RAID Volume** and press Enter.
- 3. Use the arrow keys to select the RAID volume to be deleted and press Delete.
- 4. When prompted, press Y to confirm the deletion of the selected RAID volume. Deleting a RAID volume will reset the hard disk drives to non-RAID.
- 5. After deleting a RAID volume, you can:
 - Return to step 2 to delete additional RAID volumes.
 - See "Creating RAID volumes" on page 43 for RAID volume creation.
 - Use the up and down arrow keys to select Exit and press Enter.
 - Use the up and down arrow keys to select Reset Disks to Non-RAID and press Enter.
 - a. Use the arrow keys and the space key to mark individual physical hard disk drives to be reset, and then press Enter to complete the selection.
 - b. When prompted, press Y to confirm the reset action.
 - c. After completing the Reset Disks to Non-RAID function, you can:
 - Return to step 2 to delete additional RAID volumes.
 - See "Creating RAID volumes" on page 43 for RAID volume creation.
 - Use the up and down arrow keys to select **Exit** and press Enter.

Chapter 8. Symptom-to-FRU Index

The Symptom-to-FRU index lists error symptoms and possible causes. The most likely cause is listed first. Always begin with Chapter 4 "General Checkout" on page 31. This index can also be used to help you decide which FRUs to have available when servicing a computer. If you are unable to correct the problem using this index, go to "Undetermined problems" on page 67.

Notes:

- If you have both an error message and an incorrect audio response, diagnose the error message first.
- If you cannot run the diagnostic tests or you get a diagnostic error code when running a test, but did receive a POST error message, diagnose the POST error message first.
- If you did not receive any error message, look for a description of your error symptoms in the first part of this index.

Hard disk drive boot error

A hard disk drive boot error can have the following causes.

Error	FRU/Action
The start-up drive is not in the boot sequence in configuration.	Check the configuration and ensure the start-up drive is in the boot sequence.
No operating system installed on the boot drive.	Install an operating system on the boot drive.
The boot sector on the start-up drive is corrupted.	The drive must be formatted. Do the following:
	Attempt to back up the data on the failing hard disk drive.
	Using the operating system programs, format the hard disk drive.
The drive is defective.	Replace the hard disk drive.

Power Supply Problems

If you suspect a power problem, use the following procedures.

Check/Verify	FRU/Action
Check the following for proper installation.	Reseat connectors
Power cord	
On/Off switch connector	
On/Off switch power supply connector	
System board power supply connectors	
Microprocessor(s) connection	
Check the power cord for continuity.	Power cord
Check the power-on switch for continuity.	Power-on switch

© Copyright Lenovo 2010, 2011

Diagnostic error codes

Refer to the following diagnostic error codes when using the diagnostic tests. See "Running tests" on page 35 for the specific type for information about the diagnostic programs.

In the following index, *X* can represent any number.

Diagnostic Error Code	FRU/Action
000-000-XXX BIOS Test Passed	No action
000-002-XXX BIOS Timeout	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. System board
000-024-XXX BIOS Addressing test failure	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. System board
000-025-XXX BIOS Checksum Value error	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. System board
000-026-XXX FLASH data error	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. System board
000-027-XXX BIOS Configuration/Setup error	Run the Setup Utility program.
	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	3. System board
000-034-XXX BIOS Buffer Allocation failure	Reboot the system.
	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	3. Run memory test
	4. System board
000-035-XXX BIOS Reset Condition detected	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. System board
000-036-XXX BIOS Register error	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. System board
000-038-XXX BIOS Extension failure	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. Adapter card
	3. System board
000-039-XXX BIOS DMI data error	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. System board
000-195-XXX BIOS Test aborted by user	Information only Restart the test, if necessary
000-196-XXX BIOS test halt, error threshold exceeded	Press F3 to review the log file.
	2. Restart the test to reset the log file.

Diagnostic Error Code	FRU/Action
000-197-XXX BIOS test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.
	Replace the component that is called out in warning statement
	4. Replace the component under test.
000-198-XXX BIOS test aborted	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	Flash the system and retest. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
000-199-XXX BIOS test failed, cause unknown	1. Go to "Undetermined problems" on page 67.
	2. Flash the system and re-test.
	Replace component under function test.
000-250-XXX BIOS APM failure	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. System board
000-270-XXX BIOS ACPI failure	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. System board
001-000-XXX System Test Passed	No action
001-00X-XXX System Error	System board
001-01X-XXX System Error	System board
001-024-XXX System Addressing test failure	System board
001-025-XXX System Checksum Value error	Flash the system. See "Updating (flashing) the RIOS" on page 105.
	BIOS" on page 165.
	2. System board
001-026-XXX System FLASH data error	
001-026-XXX System FLASH data error	System board I. Flash the system. See "Updating (flashing) the
001-026-XXX System FLASH data error 001-027-XXX System Configuration/Setup error	System board I. Flash the system. See "Updating (flashing) the BIOS" on page 165.
	System board Flash the system. See "Updating (flashing) the BIOS" on page 165. System board
	 System board Flash the system. See "Updating (flashing) the BIOS" on page 165. System board Run the Setup Utility program. Flash the system. See "Updating (flashing) the
	 System board Flash the system. See "Updating (flashing) the BIOS" on page 165. System board Run the Setup Utility program. Flash the system. See "Updating (flashing) the BIOS" on page 165.
001-027-XXX System Configuration/Setup error	 System board Flash the system. See "Updating (flashing) the BIOS" on page 165. System board Run the Setup Utility program. Flash the system. See "Updating (flashing) the BIOS" on page 165. System board
001-027-XXX System Configuration/Setup error 001-032-XXX System Device Controller failure	2. System board 1. Flash the system. See "Updating (flashing) the BIOS" on page 165. 2. System board 1. Run the Setup Utility program. 2. Flash the system. See "Updating (flashing) the BIOS" on page 165. 3. System board System board
001-027-XXX System Configuration/Setup error 001-032-XXX System Device Controller failure	 System board Flash the system. See "Updating (flashing) the BIOS" on page 165. System board Run the Setup Utility program. Flash the system. See "Updating (flashing) the BIOS" on page 165. System board Reboot the system. Flash the system.
001-027-XXX System Configuration/Setup error 001-032-XXX System Device Controller failure	 System board Flash the system. See "Updating (flashing) the BIOS" on page 165. System board Run the Setup Utility program. Flash the system. See "Updating (flashing) the BIOS" on page 165. System board Reboot the system. Flash the system. See "Updating (flashing) the BIOS" on page 165.
001-027-XXX System Configuration/Setup error 001-032-XXX System Device Controller failure	 System board Flash the system. See "Updating (flashing) the BIOS" on page 165. System board Run the Setup Utility program. Flash the system. See "Updating (flashing) the BIOS" on page 165. System board Reboot the system. Flash the system. Reboot the system. Flash the system. See "Updating (flashing) the BIOS" on page 165. Run memory test.

1. Adapter card 2. System board 3. System board 3. System board 4. Flash the system and re-test. 2. System board 3. System board 4. Power-off/on system and re-test. 2. System board 3. System board 4. Power-off/on system and re-test. 2. System board 3. Power-off/on system and re-test. 3. System board 4. Power-off/on system and re-test. 3. System board 4. Power-off/on system and re-test. 3. System board 4. Power-off/on system and re-test. 4. System board 5. Press F3 to review the log file 5. Restart the test in create the log file 5. Restart the test to reset the log file 5. Restart the test to reset the log file 5. Restart the test to reset the log file 6. Restart the test to reset the log file 7. Restart the test to reset the log file 7. Restart the test to reset the log file 7. Restart the test to reset the log file 7. Restart the test to reset the log file 7. Restart the test to reset the log file 7. Restart the test to reset the log file 7. Restart the test to reset the log file 7. Restart the test to reset the log file 7. Restart the test or reset	Diagnostic Error Code	FRU/Action
1. Flash the system. See "Updating (flashing) the BIOS" on page 165. 2. System board 1. Power-off/on system and re-test. 2. System board 1. Press F3 to review the log file 2. Restart the test to reset the log file 3. Replace the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Re-run test. 3. Replace the component under test. 4. Replace the component under test. 5. Flash the system and re-test. 6. Life System board 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Flash the system and re-test. 3. Flash the system and re-test. 4. Flash the system and re-test. 5. So to "Undetermined problems" on page 67. 5. Flash the system and re-test. 6. Go to "Undetermined problems" on page 67. 6. Flash the system and re-test. 6. System board 6. See Chapter 6 "Using the Stup Utility program" on page 67. 6. Flash the system and re-test. 6. System board 6. See Chapter 6 "Using the Setup Utility program" on page 67. 6. Flash the system and re-test. 6. See The system and re-test. 6. System board 6. See Chapter 6 "Using the Setup Utility program" on page 67. 6. Flash the system and re-test. 6. System board 6. See Chapter 6 "Using the Setup Utility program" on page 67. 6. Flash the system and re-test. 6. System board 6. See Chapter 6 "Using the Setup Utility program" on page 67. 6. Flash the system and re-test. 6. System board 6. See Chapter 6 "Using the Setup Utility program" on page 67. 6. Flash the system and re-test. 6. System board 6. See Chapter 6 "Using the Setup Utility program" on page 67. 6. Flash the system	001-038-XXX System Extension failure	1. Adapter card
BIOS" on page 165. 2. System board 1. Power-off/on system and re-test. 2. System board 1. Press F3 to review the log file 2. Restart the test to reset the log file 3. Restart the test to reset the log file 4. Restart the test to reset the log file 5. Restart the test to reset the log file 6. Restart the test to reset the log file 7. Restart the test to reset the log file 8. Resplace the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Res-run test. 3. Replace the component under test. 4. Replace the component under test. 4. Replace the component under test. 5. Flash the system and rests. See "Updating (flashing) the BIOS" on page 165. 7. Flash the system and rests. See "Updating (flashing) the BIOS" on page 165. 8. Go to "Undetermined problems" on page 67. 9. Flash the system and re-test. 9. Replace component under function test. 9. System board 1. Go to "Undetermined problems" on page 67. 9. Flash the system and re-test. 9. Replace component under function test. 9. System board 1. Device on IRQ1 2. System board 1. Device on IRQ2 2. System board 1. Device on IRQ2 2. System board 1. Device on IRQ3 2. System board 1. Device on IRQ3 2. System board 1. Device on IRQ4 2. System board		
1. Power-off/on system and re-test. 2. System board	001-039-XXX System DMI data structure error	
2. System board 1. Power-off/on system and re-test. 2. System board 1. Power-off/on system and re-test. 2. System board 1. Press F3 to review the log file 2. Restart the test to reset the log file 2. Restart the test to reset the log file 3. Replace the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Re-run test. 3. Replace the component that is called out in warning statement. 4. Replace the component under test. 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Flash the system and retest. 4. Replace the component under test. 4. Replace the component under test. 5. If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Flash the system and retest. See "Updating (flashing) the BIOS" on page 165. 3. Go to "Undetermined problems" on page 67. 4. Flash the system and retest. 5. Replace the component under function test. 5. Go to "Undetermined problems" on page 67. 5. Flash the system and re-test. 6. Replace the component under function test. 6. System board 6. System board 6. System board 6. Device on IRQ1 6. System board 6. Device on IRQ2 6. System board 6. Device on IRQ3 6. System board 6. Device on IRQ4 6. System board 6. Device on IRQ5		2. System board
1. Power-off/on system and re-test. 2. System board	001-040-XXX System IRQ failure	Power-off/on system and re-test.
2. System board 001-195-XXX System Test aborted by user 1. Press F3 to review the log file 2. Restart the test to reset the log file 3. Restart the test to reset the log file 4. Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Re-run test. 3. Replace the component that is called out in warning statement. 4. Replace the component under test. 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Flash the system and retest. See "Updating (flashing) the BIOS" on page 165. 3. Go to "Undetermined problems" on page 67. 4. Flash the system and retest. See "Updating (flashing) the BIOS" on page 165. 5. Flash the system and re-test. 5. Replace component under function test. 5. Flash the system and re-test. 5. Replace component under function test. 5. System board 6. Device on IRQ1 6. System board 6. Device on IRQ2 6. System board 6. Device on IRQ3 6. System board 6. Device on IRQ3 6. System board 6. Device on IRQ4 6. System board 6. Device on IRQ5		2. System board
Information only Restart the test, if necessary	001-041-XXX System DMA failure	Power-off/on system and re-test.
1. Press F3 to review the log file 2. Restart the test to reset the log file 3. Restart the test to reset the log file 4. Restart the test to reset the log file 5. Restart the test to reset the log file 6. Restart the test to reset the log file 7. Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 7. Replace the component that is called out in warning statement. 7. Replace the component under test. 7. If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 7. Flash the system and retest. See "Updating (flashing) the BIOS" on page 165. 7. Go to "Undetermined problems" on page 67. 7. Flash the system and retest. See "Updating (flashing) the BIOS" on page 165. 7. Replace component under function test. 7. Replace component under function test. 7. System board 7. System board 7. System board 7. System board 7. Device on IRQ1 7. Device on IRQ2 7. System board 7. Device on IRQ3 7. System board 7. Device on IRQ4 7. System board 7. Device on IRQ5		2. System board
2. Restart the test to reset the log file 001-197-XXX System test warning 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Re-run test. 3. Replace the component that is called out in warning statement. 4. Replace the component under test. 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Flash the system and retest. See "Updating (flashing) the BIOS" on page 185. 3. Go to "Undetermined problems" on page 67. 2. Flash the system and retest. See "Updating (flashing) the BIOS" on page 185. 3. Replace component under function test. 3. Replace component under function test. 901-250-XXX System ECC error 901-254-XXX 001-255-XXX 001-256-XXX 001-257-XXX System board 901-260-XXX System IRQ1 failure 1. Device on IRQ1 2. System board 901-269-XXX System IRQ2 failure 1. Device on IRQ2 2. System board 901-270-XXX System IRQ4 failure 1. Device on IRQ3 2. System board 901-271-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 901-272-XXX System IRQ5 failure 1. Device on IRQ4 2. System board 901-272-XXX System IRQ5 failure 1. Device on IRQ4 2. System board	001-195-XXX System Test aborted by user	Information only Restart the test, if necessary
1. Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Re-run test. 3. Replace the component that is called out in warning statement. 4. Replace the component under test. 5. Replace the component under test. 7. If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Flash the system and retest. See "Updating (flashing) the BIOS" on page 165. 3. Go to "Undetermined problems" on page 67. 2. Flash the system and re-test. 3. Replace component under function test. 601-259-XXX System test failed, cause unknown 601-259-XXX System ECC error 601-254-XXX 001-255-XXX 001-256-XXX 001-257-XXX System DMA error 601-269-XXX System IRQ failure 701-269-XXX System IRQ1 failure 701-269-XXX System IRQ2 failure 701-269-XXX System IRQ2 failure 701-270-XXX System IRQ3 failure 701-270-XXX System IRQ4 failure 701-270-XXX System IRQ4 failure 701-271-XXX System IRQ5 failure 71. Device on IRQ5	001-196-XXX System test halt, error threshold exceeded	1. Press F3 to review the log file
connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Re-run test. 3. Replace the component that is called out in warning statement. 4. Replace the component under test. 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Flash the system and retest. See "Updating (flashing) the BIOS" on page 165. 3. Go to "Undetermined problems" on page 67. 2. Flash the system and re-test. 3. Replace component under function test. 001-199-XXX System test failed, cause unknown 1. Go to "Undetermined problems" on page 67. 2. Flash the system and re-test. 3. Replace component under function test. 001-250-XXX System ECC error System board 001-254-XXX 001-255-XXX 001-256-XXX 001-257-XXX System DMA error 001-269-XXX System IRQ failure 1. Device on IRQ1 2. System board 001-269-XXX System IRQ2 failure 1. Device on IRQ2 2. System board 001-270-XXX System IRQ3 failure 1. Device on IRQ3 2. System board 001-271-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ5 failure 1. Device on IRQ4 2. System board		2. Restart the test to reset the log file
3. Replace the component that is called out in warning statement. 4. Replace the component under test. 001-198-XXX System test aborted 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Flash the system and retest. See "Updating (flashing) the BIOS" on page 165. 3. Go to "Undetermined problems" on page 67. 2. Flash the system and re-test. 3. Replace component under function test. 001-250-XXX System ECC error System board 001-254-XXX 001-255-XXX 001-256-XXX 001-257-XXX System DMA error 001-260-XXX 001-264-XXX System IRQ error System board 001-268-XXX System IRQ1 failure 1. Device on IRQ1 2. System board 001-269-XXX System IRQ2 failure 1. Device on IRQ2 2. System board 001-270-XXX System IRQ3 failure 1. Device on IRQ3 2. System board 001-271-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ4 failure 1. Device on IRQ4 2. System board	001-197-XXX System test warning	connected and/or enabled. See Chapter 6 "Using
statement. 4. Replace the component under test. 001-198-XXX System test aborted 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Seup Utility program" on page 39. 2. Flash the system and retest. See "Updating (flashing) the BIOS" on page 165. 3. Go to "Undetermined problems" on page 67. 001-199-XXX System test failed, cause unknown 1. Go to "Undetermined problems" on page 67. 2. Flash the system and re-test. 3. Replace component under function test. 001-250-XXX System ECC error System board 001-254-XXX 001-255-XXX 001-256-XXX 001-257-XXX System DMA error 001-260-XXX O01-264-XXX System IRQ error System board 001-269-XXX System IRQ1 failure 1. Device on IRQ1 2. System board 001-270-XXX System IRQ3 failure 1. Device on IRQ3 2. System board 001-271-XXX System IRQ4 failure 1. Device on IRQ3 2. System board 001-271-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ5 failure 1. Device on IRQ4 2. System board		2. Re-run test.
1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Flash the system and retest. See "Updating (flashing) the BIOS" on page 165. 3. Go to "Undetermined problems" on page 67. 1. Go to "Undetermined problems" on page 67. 2. Flash the system and re-test. 3. Replace component under function test. 5. System board 1. Go to "Undetermined problems" on page 67. 2. Flash the system and re-test. 3. Replace component under function test. System board 1. Device on IRQ1 2. System board 1. Device on IRQ1 2. System board 1. Device on IRQ2 2. System board 1. Device on IRQ2 2. System board 1. Device on IRQ2 2. System board 1. Device on IRQ3 2. System board 1. Device on IRQ3 2. System board 1. Device on IRQ4 2. System board		· · · · · · · · · · · · · · · · · · ·
connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39. 2. Flash the system and retest. See "Updating (flashing) the BIOS" on page 165. 3. Go to "Undetermined problems" on page 67. 1. Go to "Undetermined problems" on page 67. 2. Flash the system and re-test. 3. Replace component under function test. 3. Replace component under function test. 5. System board 5. System DMA error 6. System DMA error 7. Device on IRQ1 2. System board 6. System board 6. System board 6. Device on IRQ2 2. System board 6. Device on IRQ2 2. System board 6. Device on IRQ3 2. System board 6. Device on IRQ3 2. System board 6. Device on IRQ4 6. Device on IRQ5		Replace the component under test.
(flashing) the BIOS" on page 165. 3. Go to "Undetermined problems" on page 67. 001-199-XXX System test failed, cause unknown 1. Go to "Undetermined problems" on page 67. 2. Flash the system and re-test. 3. Replace component under function test. 001-250-XXX System ECC error System board 001-254-XXX 001-255-XXX 001-256-XXX 001-257-XXX System DMA error System board 001-260-XXX 001-264-XXX System IRQ error System board 1. Device on IRQ1 2. System board 001-269-XXX System IRQ2 failure 1. Device on IRQ2 2. System board 001-270-XXX System IRQ3 failure 1. Device on IRQ3 2. System board 001-271-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ5 failure 1. Device on IRQ4 2. System board	001-198-XXX System test aborted	connected and/or enabled. See Chapter 6 "Using
1. Go to "Undetermined problems" on page 67. 2. Flash the system and re-test. 3. Replace component under function test. 001-250-XXX System ECC error System board 001-254-XXX 001-255-XXX 001-256-XXX 001-257-XXX System DMA error System board 001-260-XXX 001-264-XXX System IRQ error System board 1. Device on IRQ1 2. System board 001-269-XXX System IRQ2 failure 1. Device on IRQ2 2. System board 001-270-XXX System IRQ3 failure 1. Device on IRQ3 2. System board 001-271-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ5 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ5 failure 1. Device on IRQ4 2. System board		
2. Flash the system and re-test. 3. Replace component under function test. 001-250-XXX System ECC error System board 001-254-XXX 001-255-XXX 001-256-XXX 001-257-XXX System DMA error System board 001-260-XXX 001-264-XXX System IRQ error System board 01-268-XXX System IRQ1 failure 1. Device on IRQ1 2. System board 001-269-XXX System IRQ2 failure 1. Device on IRQ2 2. System board 001-270-XXX System IRQ3 failure 1. Device on IRQ3 2. System board 001-271-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ5 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ5 failure 1. Device on IRQ4 2. System board		3. Go to "Undetermined problems" on page 67.
3. Replace component under function test. 001-250-XXX System ECC error System board 001-254-XXX 001-255-XXX 001-256-XXX 001-257-XXX System DMA error System board 001-260-XXX 001-264-XXX System IRQ error System board 001-268-XXX System IRQ1 failure 1. Device on IRQ1 2. System board 001-269-XXX System IRQ2 failure 1. Device on IRQ2 2. System board 001-270-XXX System IRQ3 failure 1. Device on IRQ3 2. System board 001-271-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ5 failure 1. Device on IRQ4 2. System board	001-199-XXX System test failed, cause unknown	Go to "Undetermined problems" on page 67.
001-250-XXX System ECC errorSystem board001-254-XXX 001-255-XXX 001-256-XXX 001-257-XXX System DMA errorSystem board001-260-XXX 001-264-XXX System IRQ errorSystem board001-268-XXX System IRQ1 failure1. Device on IRQ1 2. System board001-269-XXX System IRQ2 failure1. Device on IRQ2 2. System board001-270-XXX System IRQ3 failure1. Device on IRQ3 2. System board001-271-XXX System IRQ4 failure1. Device on IRQ4 2. System board001-272-XXX System IRQ5 failure1. Device on IRQ5		2. Flash the system and re-test.
O01-254-XXX 001-255-XXX 001-256-XXX 001-257-XXX System DMA error O01-260-XXX 001-264-XXX System IRQ error System board 1. Device on IRQ1 2. System board O01-269-XXX System IRQ2 failure 1. Device on IRQ2 2. System board O01-270-XXX System IRQ3 failure 1. Device on IRQ2 2. System board O01-271-XXX System IRQ4 failure 1. Device on IRQ3 2. System board O01-271-XXX System IRQ4 failure 1. Device on IRQ4 2. System board O01-272-XXX System IRQ5 failure 1. Device on IRQ4 2. System board		3. Replace component under function test.
System DMA error 001-260-XXX 001-264-XXX System IRQ error 001-268-XXX System IRQ1 failure 1. Device on IRQ1 2. System board 001-269-XXX System IRQ2 failure 1. Device on IRQ2 2. System board 001-270-XXX System IRQ3 failure 1. Device on IRQ3 2. System board 001-271-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ5 failure 1. Device on IRQ4 2. System board 1. Device on IRQ4 3. System board 1. Device on IRQ5	001-250-XXX System ECC error	System board
1. Device on IRQ1 2. System board 1. Device on IRQ2 2. System board 1. Device on IRQ2 2. System board 1. Device on IRQ2 2. System board 1. Device on IRQ3 2. System board 1. Device on IRQ3 2. System board 1. Device on IRQ3 2. System board 1. Device on IRQ4 2. System board 1. Device on IRQ4 2. System board 1. Device on IRQ4 3. System board 1. Device on IRQ4 3. System board 1. Device on IRQ5		System board
2. System board 1. Device on IRQ2 2. System board 1. Device on IRQ2 2. System board 1. Device on IRQ3 2. System board 1. Device on IRQ3 2. System board 1. Device on IRQ4 2. System board 1. Device on IRQ4 2. System board 1. Device on IRQ4 3. System board 1. Device on IRQ4 3. System board 1. Device on IRQ5	001-260-XXX 001-264-XXX System IRQ error	System board
001-269-XXX System IRQ2 failure1. Device on IRQ2001-270-XXX System IRQ3 failure1. Device on IRQ3001-271-XXX System IRQ4 failure1. Device on IRQ4001-272-XXX System IRQ5 failure1. Device on IRQ4001-272-XXX System IRQ5 failure1. Device on IRQ5	001-268-XXX System IRQ1 failure	1. Device on IRQ1
2. System board 1. Device on IRQ3 2. System board 1. Device on IRQ3 2. System board 1. Device on IRQ4 2. System board 1. Device on IRQ4 2. System board 1. Device on IRQ4 2. System board 1. Device on IRQ5		2. System board
001-270-XXX System IRQ3 failure 1. Device on IRQ3 2. System board 001-271-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 001-272-XXX System IRQ5 failure 1. Device on IRQ5	001-269-XXX System IRQ2 failure	1. Device on IRQ2
2. System board 1. Device on IRQ4 2. System board 1. Device on IRQ4 2. System board 1. Device on IRQ5		2. System board
001-271-XXX System IRQ4 failure 1. Device on IRQ4 2. System board 1. Device on IRQ5	001-270-XXX System IRQ3 failure	1. Device on IRQ3
2. System board 1. Device on IRQ5		2. System board
001-272-XXX System IRQ5 failure 1. Device on IRQ5	001-271-XXX System IRQ4 failure	1. Device on IRQ4
		2. System board
2. System board	001-272-XXX System IRQ5 failure	1. Device on IRQ5
		2. System board

Diagnostic Error Code	FRU/Action
001-273-XXX System IRQ6 (diskette drive) failure	1. Diskette Cable
	2. Diskette drive
	3. System board
001-274-XXX System IRQ7 failure	1. Device on IRQ7
	2. System board
001-275-XXX System IRQ8 failure	1. Device on IRQ8
	2. System board
001-276-XXX System IRQ9 failure	1. Device on IRQ9
	2. System board
001-277-XXX System IRQ10 failure	1. Device on IRQ10
	2. System board
001-278-XXX System IRQ11 failure	1. Device on IRQ11
	2. System board
001-279-XXX System IRQ12 failure	1. Device on IRQ12
	2. System board
001-280-XXX System IRQ13 failure	1. Device on IRQ13
	2. System board
001-281-XXX System IRQ14 (hard disk drive) failure	Hard disk drive cable
	2. Hard disk drive
	3. System board
001-282-XXX System IRQ15 failure	1. Device on IRQ15
	2. System board
001-286-XXX 001-287-XXX 001-288-XXX System Timer failure	System board
001-292-XXX System CMOS RAM error	Run the Setup Utility program and re-test.
	2. System board
001-293-XXX System CMOS Battery	CMOS Battery
	2. System board
001-298-XXX System RTC date/time update failure	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. System board
001-299-XXX System RTC periodic interrupt failure	System board
001-300-XXX System RTC Alarm failure	System board
001-301-XXX System RTC Century byte error	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. System board
005-000-XXX Video Test Passed	No action
005-00X-XXX Video error	Video card, if installed
	2. System board
005-010-XXX 005-011-XXX 005-012-XXX 005-013-XXX	Video card, if installed
Video Signal failure	2. System board

Diagnostic Error Code	FRU/Action
005-016-XXX Video Simple Pattern test failure	1. Video Ram
	2. Video card, if installed
	3. System board
005-024-XXX Video Addressing test failure	Video card, if installed
	2. System board
005-025-XXX Video Checksum Value error	Video card, if installed
	2. System board
005-027-XXX Video Configuration/Setup error	Run the Setup Utility program.
	2. Video drivers update
	3. Video card, if installed
	4. System board
005-031-XXX Video Device Cable failure	1. Video cable
	2. Monitor
	3. Video card, if installed
	4. System board
005-032-XXX Video Device Controller failure	1. Video card, if installed
	2. System board
005-036-XXX Video Register error	1. Video card, if installed
	2. System board
005-038-XXX System BIOS extension failure	1. Video card, if installed
	2. System board
005-040-XXX Video IRQ failure	1. Video card, if installed
	2. System board
005-195-XXX Video Test aborted by user	Information only Restart the test, if necessary
005-196-XXX Video test halt, error threshold exceeded	1. Press F3 to review the log file.
	2. Restart the test to reset the log file.
005-197-XXX Video test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test
	Replace the component called out in warning statement.
	4. Replace the component under test.
005-198-XXX Video test aborted	 If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
005-199-XXX Video test failed, cause unknown	1. Go to "Undetermined problems" on page 67.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Replace component under function test.

Diagnostic Error Code	FRU/Action
005-2XX-XXX 005-3XX-XXX Video subsystem error	1. Video card, if installed
	2. System board
006-000-XXX Diskette interface Test Passed	No action
006-0XX-XXX Diskette interface error	Diskette drive Cable
	2. Diskette drive
	3. System board
006-195-XXX Diskette interface Test aborted by user	Information only Restart the test, if necessary
006-196-XXX Diskette interface test halt, error threshold	1. Press F3 to review the log file.
exceeded	2. Restart the test to reset the log file.
006-197-XXX Diskette interface test warning	 If a component is called out, make sure it is connected and/or enabled.
	2. Re-run test.
	Replace the component that is called out in warning statement.
	4. Replace the component under test.
006-198-XXX Diskette interface test aborted	 If a component is called out, make sure it is connected and/or enabled.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
006-199-XXX Diskette interface test failed, cause unknown	1. Go to "Undetermined problems" on page 67.
	2. Flash the system and re-test.
	Replace component under function test.
006-25X-XXX Diskette interface Error	Diskette drive cable
	2. Diskette drive
	3. System board
011-000-XXX Serial port Interface Test Passed	No action
011-001-XXX Serial port Presence	Remove external serial device, if present.
	Run the Setup Utility program, enable port.
	3. System board
011-002-XXX 011-003-XXX Serial port Timeout/Parity error	System board
011-013-XXX 011-014-XXX Serial port Control Signal/Loopback test failure	System board
011-015-XXX Serial port External Loopback failure	1. Wrap plug
	2. System board
011-027-XXX Serial port Configuration/Setup error	run the Setup Utility program, enable port
	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	3. System board
011-03X-XXX 011-04X-XXX Serial port failure	System board
011-195-XXX Serial port Test aborted by user	Information only Restart the test, if necessary.

Diagnostic Error Code	FRU/Action
011-196-XXX Serial port test halt, error threshold exceeded	Press F3 to review the log file.
	2. Restart the test to reset the log file.
011-197-XXX Serial port test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test
	Replace the component that is called out in warning statement.
	Replace the component under test.
011-198-XXX Serial port test aborted	If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
011-199-XXX Serial port test failed, cause unknown	Go to "Undetermined problems" on page 67.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	Replace component under function test.
011-2XX-XXX Serial port signal failure	External serial device
	2. System board
014-000-XXX Parallel port Interface Test Passed	No action
014-001-XXX Parallel port Presence	Remove external parallel device, if present.
	2. Run the Setup Utility program, enable port
	3. System board
014-002-XXX 014-003-XXX Parallel port Timeout/Parity error	System board
014-013-XXX 014-014-XXX Parallel port Control Signal/Loopback test failure	System board
014-015-XXX Parallel port External Loopback failure	1. Wrap plug
	2. System board
014-027-XXX Parallel port Configuration/Setup error	Run the Setup Utility program, enable port
	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	3. System board
014-03X-XXX 014-04X-XXX Parallel port failure	System board
014-195-XXX Parallel port Test aborted by user	Information only Restart the test, if necessary.
014-196-XXX Parallel port test halt, error threshold	Press F3 to review the log file.
exceeded	2. Restart the test to reset the log file.

Diagnostic Error Code	FRU/Action
014-197-XXX Parallel port test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.
	Replace the component that is called out in warning statement.
	Replace the component under test.
014-198-XXX Parallel port test aborted	If a component is called out, make sure it is connected and/or enabled.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
014-199-XXX Parallel port test failed, cause unknown	Go to "Undetermined problems" on page 67.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	Replace component under function test.
014-2XX-XXX 014-3XX-XXX Parallel port failure	External parallel device
	2. System board
015-000-XXX USB port Interface Test Passed	No action
015-001-XXX USB port Presence	Remove USB device(s) and re-test.
	2. System board
015-002-XXX USB port Timeout	Remove USB device(s) and re-test.
	2. System board
015-015-XXX USB port External Loopback failure	Remove USB device(s) and re-test.
	2. System board
015-027-XXX USB port Configuration/Setup error	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. System board
015-032-XXX USB port Device Controller failure	System board
015-034-XXX USB port buffer allocation failure	Reboot the system
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Run memory test.
	4. System board
015-035-XXX USB port Reset condition detected	1. Remove USB device(s) and re-test.
	2. System board
015-036-XXX USB port Register error	System board
015-040-XXX USB port IRQ failure	Run the Setup Utility program and check for conflicts.
	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	3. System board
015-195-XXX USB port Test aborted by user	Information only Restart the test, if necessary.

Diagnostic Error Code	FRU/Action
015-196-XXX USB port test halt, error threshold exceeded	Press F3 to review the log file.
	2. Restart the test to reset the log file.
015-197-XXX USB port test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.
	Replace the component that is called out in warning statement.
	Replace the component under test.
015-198-XXX USB port test aborted	If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
015-199-XXX USB port test failed, cause unknown	1. Go to "Undetermined problems" on page 67.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	Replace component under function test.
018-000-XXX PCI Card Test Passed	No action
018-0XX-XXX PCI Card Failure	Riser card, if installed.
	2. System board
018-195-XXX PCI Card Test aborted by user	1. PCl card
	Information only Restart the test, if necessary
018-196-XXX PCI Card test halt, error threshold exceeded	Press F3 to review the log file
	2. Restart the test to reset the log file
018-197-XXX PCI Card test warning	 Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.
	Replace the component that is called out in warning statement.
	4. Replace the component under test.
018-198-XXX PCI Card test aborted	 If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
018-199-XXX PCI Card test failed, cause unknown	1. Go to "Undetermined problems" on page 67.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	Replace component under function test.

Diagnostic Error Code	FRU/Action
018-250-XXX PCI Card Services error	1. PCl card
	2. Riser card, if installed.
	3. System board
020-000-XXX PCI Interface Test Passed	No action
020-0XX-XXX PCI Interface error	1. PCl card
	2. Riser card, if installed.
	3. System board
020-195-XXX PCI Test aborted by user	Information only Restart the test, if necessary
020-196-XXX PCI test halt, error threshold exceeded	1. Press F3 to review the log file.
	2. Restart the test to reset the log file.
020-197-XXX PCI test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.
	Replace the component that is called out in warning statement.
	4. Replace the component under test.
020-198-XXX PCI test aborted	If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
020-199-XXX PCI test failed, cause unknown	1. Go to "Undetermined problems" on page 67.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Replace component under function test.
020-262-XXXPCI system error	1. PCl card
	2. Riser card, if installed.
	3. System board
025-000-XXXIDE interface Test Passed	No action
025-00X-XXX 025-01X-XXX IDE interface failure	IDE signal cable
	Check power supply voltages.
	3. Reseat IDE signal cable.
	4. IDE device
	5. System board
025-027-XXX IDE interface Configuration/Setup error	1. IDE signal cable
	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	3. Reseat IDE signal cable.
	4. IDE device
	5. System board

Diagnostic Error Code	FRU/Action
025-02X-XXX 025-03X-XXX 025-04X-XXX IDE Interface	1. IDE signal cable
failure	2. Check power supply.
	3. Reseat IDE signal cable.
	4. IDE device
	5. System board
025-195-XXX IDE interface Test aborted by user	Information only Restart the test, if necessary.
025-196-XXX IDE interface test halt, error threshold	Press F3 to review the log file.
exceeded	2. Restart the test to reset the log file.
025-197-XXX IDE interface test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.
	Replace the component that is called out in warning statement.
	Replace the component under test.
025-198-XXX IDE interface test aborted	If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
025-199-XXX IDE interface test failed, cause unknown	Go to "Undetermined problems" on page 67.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	Replace component under function test.
030-000-XXX SCSI interface Test Passed	No action
030-00X-XXX 030-01X-XXX SCSI interface failure	SCSI signal cable
	2. Check power supply
	3. SCSI device
	SCSI adapter card, if installed.
	5. System board
030-027-XXX SCSI interface Configuration/Setup error	SCSI signal cable
	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	3. SCSI device
	SCSI adapter card, if installed.
	5. System board
030-03X-XXX 030-04X-XXX SCSI interface error	SCSI signal cable
	2. Check power supply
	3. SCSI device
	4. SCSI adapter card, if installed.
	5. System board
030-195-XXX SCSI interface Test aborted by user	Information only Restart the test, if necessary.

Diagnostic Error Code	FRU/Action
030-196-XXX SCSI interface test halt, error threshold	1. Press F3 to review the log file.
exceeded	2. Restart the test to reset the log file.
030-197-XXX SCSI interface test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.
	Replace the component that is called out in warning statement.
	4. Replace the component under test.
030-198-XXX SCSI interface test aborted	If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
030-199-XXX SCSI interface test failed, cause unknown	1. Go to "Undetermined problems" on page 67.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Replace component under function test.
035-000-XXX RAID interface Test Passed	No action
035-0XX-XXX RAID interface Failure	1. RAID signal cable
	2. RAID device
	3. RAID adapter card, if installed
	4. System board
035-195-XXX RAID interface Test aborted by user	Information only Restart the test, if necessary.
035-196-XXX RAID interface test halt, error threshold	1. Press F3 to review the log file.
exceeded	2. Restart the test to reset the log file.
035-197-XXX RAID interface test warning	 Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.
	Replace the component that is called out in warning statement.
	4. Replace the component under test.
035-198-XXX RAID interface test aborted	If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
035-199-XXX RAID interface test failed, cause unknown	1. See "Undetermined problems" on page 67.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Replace component under function test.
071-000-XXX Audio port Interface Test Passed	No action
	L .

Diagnostic Error Code	FRU/Action
071-00X-XXX 071-01X-XXX 071-02X-XXXAudio port error	Run the Setup Utility program.
	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	3. System board
071-03X-XXX Audio port failure	1. Speakers
	2. Microphone
	3. Audio card, if installed.
	4. System board
071-04X-XXX Audio port failure	Run the Setup Utility program.
	Audio card, if installed.
	3. System board
071-195-XXX Audio port Test aborted by user	Information only Restart the test, if necessary.
071-196-XXX Audio port test halt, error threshold exceeded	Press F3 to review the log file.
	2. Restart the test to reset the log file.
071-197-XXX Audio port test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.
	Replace the component that is called out in warning statement.
	Replace the component under test.
071-198-XXX Audio port test aborted	If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
071-199-XXX Audio port test failed, cause unknown	See "Undetermined problems" on page 67.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	Replace component under function test.
071-25X-XXX Audio port failure	1. Speakers
	2. Audio card, if installed
	3. System board
080-000-XXX Game Port interface Test Passed	No action
080-XXX-XXX Game Port interface Error	Remove the game port device and re-test the system.
080-195-XXX Game Port interface Test aborted by user	Information only Restart the test, if necessary.
080-196-XXX Game Port interface test halt, error threshold exceeded	Press F3 to review the log file. Restart the test to reset the log file.
	5 -

Diagnostic Error Code	FRU/Action
080-197-XXX Game Port interface test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.
	Replace the component that is called out in warning statement.
	Replace the component under test.
080-198-XXX Game Port interface test aborted	If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
080-199-XXX Game Port interface test failed, cause	See "Undetermined problems" on page 67.
unknown	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	Replace component under function test.
086-000-XXX Mouse Port interface Test Passed	No action
086-001-XXX Mouse Port interface Presence	1. Mouse
	2. System board
086-032-XXX Mouse Port interface Device controller failure	1. Mouse
	2. System board
086-035-XXX Mouse Port interface Reset	1. Mouse
	2. System board
086-040-XXX Mouse Port interface IRQ failure	Run the Setup Utility program.
	2. Mouse
	3. System board
086-195-XXX Mouse Port interface Test aborted by user	Information only Restart the test, if necessary.
086-196-XXX Mouse Port interface test halt, error	1. Press F3 to review the log file.
threshold exceeded	Restart the test to reset the log file.
086-197-XXX Mouse Port interface test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.
	Replace the component that is called out in warning statement.
	Replace the component under test.
086-198-XXX Mouse Port interface test aborted	If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.

Diagnostic Error Code	FRU/Action
086-199-XXX Mouse Port interface test failed, cause	See "Undetermined problems" on page 67.
unknown	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Replace component under function test.
089-000-XXX Microprocessor Test Passed	No action
089-XXX-XXX Microprocessor failure	1. Microprocessor(s)
	2. System board
089-195-XXX Microprocessor Test aborted by user	Information only Restart the test, if necessary.
089-196-XXX Microprocessor test halt, error threshold	1. Press F3 to review the log file.
exceeded	Restart the test to reset the log file.
089-197-XXX Microprocessor test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.
	Replace the component that is called out in warning statement.
	4. Replace the component under test.
089-198-XXX Microprocessor test aborted	Flash the system. See "Updating (flashing) the BIOS" on page 165.
	2. Go to "Undetermined problems" on page 67.
089-199-XXX Microprocessor test failed, cause unknown	1. See "Undetermined problems" on page 67.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Replace component under function test.
170-000-XXX Voltage Sensor(s) Test Passed	No action
170-0XX-XXX Voltage Sensor(s) failure	1. Flash system
	2. System board
170-195-XXX Voltage Sensor(s) Test aborted by user	Information only Restart the test, if necessary.
170-196-XXX Voltage Sensor(s) test halt, error threshold	1. Press F3 to review the log file.
exceeded	2. Restart the test to reset the log file.
170-197-XXX Voltage Sensor(s) test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.
	Replace the component that is called out in warning statement.
	4. Replace the component under test.
170-198-XXX Voltage Sensor(s) test aborted	If a component is called out, make sure it is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.

Diagnostic Error Code	FRU/Action
170-199-XXX Voltage Sensor(s) test failed, cause unknown	 See "Undetermined problems" on page 67. Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165. Replace component under function test.
170-250-XXX 170-251-XXX Voltage Sensor(s) Voltage limit error	Power supply System board
170-254-XXX Voltage Sensor(s) Voltage Regulator Module error	Voltage Regulator Module (VRM) Microprocessor System board
175-000-XXX Thermal Sensor(s) Test Passed	No action
175-0XX-XXX Thermal Sensor(s) failure	Flash system System board
175-195-XXX Thermal Sensor(s) Test aborted by user	Information only Restart the test, if necessary.
175-196-XXX Thermal Sensor(s) test halt, error threshold exceeded	 Press F3 to review the log file. Restart the test to reset the log file.
175-197-XXX Thermal Sensor(s) test warning	Make sure the component that is called out is connected and/or enabled. See Chapter 6 "Using the Setup Utility program" on page 39.
	2. Re-run test.3. Replace the component that is called out in warning statement.
	4. Replace the component under test.
175-198-XXX Thermal Sensor(s) test aborted	If a component is called out, make sure it is connected and/or enabled .
	Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	3. Go to "Undetermined problems" on page 67.
175-199-XXX Thermal Sensor(s) test failed, cause unknown	 See "Undetermined problems" on page 67. Flash the system and re-test. See "Updating (flashing) the BIOS" on page 165.
	Replace component under function test.
175-250-XXX 175-251-XXX Thermal Sensor(s) limit error	 Check fans Check power supply voltages. Microprocessor System board
185-000-XXX Asset Security Test Passed	No action
185-XXX-XXX Asset Security failure	Flash system System board
185-278-XXX Asset Security Chassis Intrusion	Assure Asset Security Enabled C2 Cover Switch System board
201-000-XXX System Memory Test Passed	No action
-	•

Diagnostic Error Code	FRU/Action
201-XXX-XXX System Memory error	Replace the memory module called out by the test.
	2. System board
202-000-XXX System Cache Test Passed	No action
202-XXX-XXX System Cache error	1. Cache, if removable
	2. System board
	3. Microprocessor
206-000-XXX Diskette Drive Test Passed	No action
206-XXX-XXX Diskette Drive error	1. Diskette Drive Cable
	2. Check power supply voltages
	3. Diskette drive
	4. System board
215-000-XXX CD-ROM Drive Test Passed	No action
215-XXX-XXX CD-ROM Drive error	1. CD-ROM Drive Cable
	2. Check power supply voltages
	3. CD-ROM drive
	4. System board
217-000-XXX Hard Disk Drive Test Passed	No action
217-25X-XXX 217-26X-XXX Hard Disk Drive (IDE) error	1. Hard Disk Drive Cable
	2. Check power supply voltages
	3. Reseat the hard disk drive cable
	4. Hard Disk drive (IDE)
	5. System board
217-28X-XXX 217-29X-XXX Hard Disk Drive (SCSI) error	1. Hard Disk Drive Cable
	2. Check power supply voltages
	3. Reseat the hard disk drive cable
	4. Hard Disk drive (SCSI)
	5. SCSI adapter card
	6. System board
220-000-XXX Hi-Capacity Cartridge Drive Test Passed	No action
220-XXX-XXX Hi-Capacity Cartridge Drive error	Remove the Hi-Capacity Cartridge Drive and re-test the system.
301-XXX-XXX Keyboard error	1. Keyboard
	2. Check and test mouse.
	3. System board
301-000-XXX Keyboard Test Passed	No action
302-000-XXX Mouse Test Passed	No action
302-XXX-XXX Mouse error	1. Mouse
	2. Check and test Keyboard.
	3. System board
303-000-XXX Joystick Test Passed	No action
303-XXX-XXX Joystick error	Remove the Joystick and re-test the system.
<u> </u>	

Diagnostic Error Code	FRU/Action
305-000-XXX Monitor DDC Test Passed	No action
305-250-XXX Monitor DDC self test failure	Run the Setup Utility program to enable DDC.
	2. Cable
	3. Monitor
	4. Video card
	5. System board
415-000-XXXModem Test Passed	No action
415-XXX-XXX Modem error	Remove the Modem and re-test the system.

Beep symptoms

Beep symptoms are tones or a series of tones separated by pauses (intervals without sound) during POST.

The following tables describes beep symptoms.

Beep Symptom	FRU/Action
2 short beeps CMOS setting error	Perform the following actions in order.
	Start the Setup Utility program and press F10 to Save and exit. See Chapter 6 "Using the Setup Utility program" on page 39.
	Start the Setup Utility program and press F7 to load defaults and then press F10 to Save and exit.
	Perform a Boot block recovery. See "Recovering from a POST/BIOS update failure" on page 166.
1 long and 2 short beeps Monitor or video adapter card	Perform the following actions in order.
error	Make sure the monitor is properly connected to the computer.
	Replace the video adapter card (if present).
	3. Replace the system board.
1 long and 3 short beeps Keyboard error	Perform the following actions in order.
	Make sure the keyboard is properly connected to the keyboard connector.
	Replace the keyboard.
	3. Replace the system board.
1 long and 9 short beeps BIOS ROM error	Perform the following actions in order.
	 Start the Setup Utility program and press F7 to load defaults and then press F10 to Save and exit. See Chapter 6 "Using the Setup Utility program" on page 39.
	Perform a Boot block recovery. See "Recovering from a POST/BIOS update failure" on page 166.
	3. Replace the system board.
Continuos long beeps DRAM memory error	Perform the following actions in order.
	Make sure the memory module(s) are properly seated in the connector(s).
	2. Replace the memory module(s).
	3. Replace the system board.

POST error codes

Each time you power-on the system, it performs a series of tests that check the operation of the system and some options. This series of tests is called the *Power-On Self-Test*, or *POST*. POST does the following operations.

- Checks some basic system-board operations
- Checks the memory operation
- Starts the video operation
- · Verifies that the boot drive is working

If the POST detects a problem, an error message appears on the screen. A single problem can cause several error messages to appear. When you correct the cause of the first error message, the other error messages probably will not appear on the screen the next time you turn on the system.

POST Error Message	Description/Action
CMOS battery failed	The CMOS battery is no longer functional.
	Replace the battery.
CMOS checksum error - defaults loaded	Checksum of CMOS is incorrect.
	The computer loads the default configuration settings. This error might indicate that CMOS has become corrupt due to a weak CMOS battery.
CPU at nnnn	nnnn is the running speed of the microprocessor.
Press Esc to skip memory test	Pressing Esc skips the full memory test
HARD DISK INSTALL FAILURE	Cannot find or initialize the hard disk drive controller or the drive.
	Make sure the hard disk drive is correctly installed.
	If no hard disk drives are installed, make sure the hard disk drive selection in Setup is set to NONE.
Keyboard error or no keyboard present	Cannot initialize the keyboard.
	Make sure the keyboard is properly connected to the computer and that no keys are held pressed during POST.
	To purposely configure the computer without a keyboard, set the error halt condition in Setup to HALT ON ALL, BUT KEYBOARD. The BIOS then ignores the missing keyboard during POST.
Memory Test:	This message displays during a full memory test, counting down the memory areas being tested.
Memory test fail	If POST detects an error during memory testing, additional information appears. This information gives specifics about the type and location of the memory error.

POST Error Message	Description/Action
Press TAB to show POST screen	Pressing the TAB key permits the user to toggle between the default POST display screen and a custom POST display screen.
Error: Non-System disk or disk error Replace and press any key when ready	The BIOS was unable to find a suitable boot device. Make sure the boot drive is properly connected to the computer. Make sure you have bootable media.

Miscellaneous error messages

Message/Symptom	FRU/Action
Changing display colors	Display/Monitor
Computer will <i>not</i> power-off. See "Hard disk drive boot error" on page 45.	1. Power Switch
	2. System Board
	3. Riser card, if installed.
Computer will not RPL from server	 Ensure that network is in startup sequence as first device or first device after diskette.
	2. Ensure that network adapter is enabled for RPL.
	Network adapter (Advise network administrator of new MAC address)
Computer will <i>not</i> perform a Wake On LAN® (if applicable)	 Check power supply and signal cable connections to network adapter.
	Ensure that the operating system settings are set to enable Wake on LAN.
	 Ensure Wake On LAN feature is enabled in Setup/Configuration (see "Starting the Setup Utility program" on page 39)
	 Ensure network administrator is using correct MAC address.
	5. Ensure no interrupt or I/O address conflicts.
	Network adapter (advise network administrator of new MAC address)
Dead computer. See "Hard disk drive boot error" on page 45.	1. Power Supply
	2. System Board
Diskette drive in-use light remains on or does not light when drive is active.	1. Diskette Drive
	2. System Board
	3. Diskette Drive Cable
Blank screen except for flashing cursor.	1. System Board
	2. Primary Hard Disk Drive
	3. Hard Disk Drive Cable
Incorrect memory size during POST	1. Run the Memory tests.
	2. Memory Module
	3. System Board

Message/Symptom	FRU/Action
"Insert a Diskette" icon appears with a known-good diagnostics diskette in the first 3.5-inch diskette drive.	1. System Board
	2. Diskette Drive Cable
	3. Network Adapter
Intensity or color varies from left to right of characters	1. Display
and color bars	2. Video adapter (if present)
	3. System Board
No power or fan not running	See "Hard disk drive boot error" on page 45.
Non-system disk or disk error-type message with a known-good diagnostic diskette.	Diskette Drive
	2. System Board
	3. Diskette Drive Cable
Other display symptoms not listed above (including blank or illegible display)	1. Display
	2. System Board
Power-on indicator or hard disk drive in-use light not on, but computer works correctly	Power switch/LED assembly
	2. System Board
Printer problems	1. Printer
	2. System Board
Program loads from the hard disk with a known-good diagnostics diskette in the first 3.5-inch diskette drive	Run the Setup Utility program and check Startup sequence.
	2. Diskette Drive
	3. Diskette Drive Cable
	4. System Board
	5. Power Supply
RPL computer cannot access programs from its own hard disk.	 If network administrator is using LCCM Hybrid RPL, check startup sequence:
	a. First device - network
	b. Second device - hard disk
	2. Hard disk drive
RPL computer does not RPL from server	Check startup sequence.
	2. Check the network adapter LED status.
Serial or parallel port device failure (system board port)	External Device Self-Test OK?
	2. External Device
	3. Cable
	4. System Board
Serial or parallel port device failure (adapter port)	External Device Self-Test OK?
	2. External Device
	3. Cable
	4. Alternate Adapter
	5. System Board
Some or all keys on the keyboard do not work	1. Keyboard
	2. Keyboard Cable
	3. System Board

Undetermined problems

This section provides instructions on how to find out the failing devices or adapters.

- 1. Power-off the computer.
- 2. Remove or disconnect the following components (if installed) one at a time.
 - a. External devices (modem, printer, or mouse)
 - b. Any adapters
 - c. Memory modules
 - d. Extended video memory
 - e. External Cache
 - f. External Cache RAM
 - g. Hard disk drive
 - h. Diskette drive
- 3. Power-on the computer to re-test the system.
- 4. Repeat steps 1 through 3 until you find the failing device or adapter.

If all devices and adapters have been removed, and the problem continues, replace the system board.

Chapter 9. Replacing FRUs

This chapter provides step-by-step instructions for replacing major FRUs.

Important

Be sure to read and understand the Chapter 2 "Safety information" on page 3 before replacing any FRU. These precautions and guidelines will help you work safely.

FRU replacements are to be done only by trained service technicians.

Locations

Locating connectors on the front of your computer

Front connector locations shows the locations of the connectors on the front of your computer.

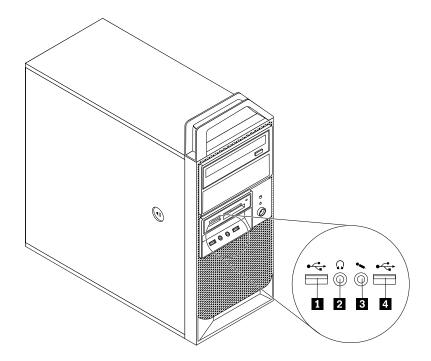


Figure 1. Front connector locations

1 USB connector3 Microphone connector2 Headphone connector4 USB connector

Locating connectors on the rear of your computer

Rear connector locations shows the locations of the connectors on the rear of your computer. Some connectors on the rear of your computer are color-coded to help you determine where to connect the cables on your computer.

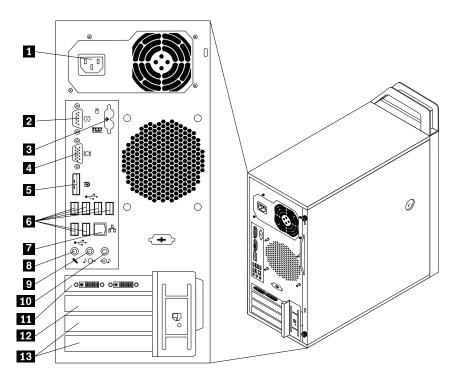


Figure 2. Rear connector locations

- 1 Power cord connector
- 2 Serial port
- 3 PS/2® keyboard and mouse connectors (optional)
- 4 VGA monitor connector (not applicable on some models)
- 5 DisplayPort connector (not applicable on some models)
- 6 USB connectors (6)
- 7 Ethernet connector

- 8 Microphone connector
- 9 Audio line-out connector
- 10 Audio line-in connector
- 11 PCI Express x16 graphics card slot
- 12 PCI Express x1 card slot
- 13 PCI card slots (2)

Locating components

Figure 3 "Component locations" on page 71 shows the locations of the various components in your computer. To remove the computer cover, see "Removing the computer cover" on page 73.

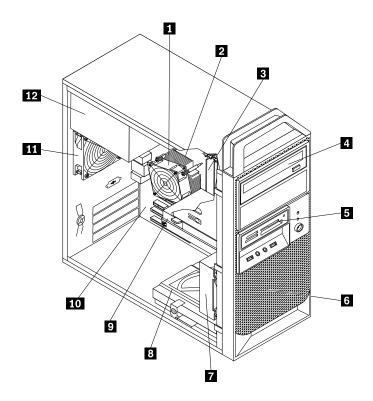


Figure 3. Component locations

- 1 Heat sink
- 2 Microprocessor
- 3 Memory module
- 4 Optical drive
- 5 Card reader (installed in some models)
- 6 Front bezel assembly

- 7 Front system fan
- 8 Secondary hard disk drive (installed in some models)
- 9 Primary hard disk drive
- 10 System board
- 11 Rear fan assembly
- 12 Power supply

Locating parts on the system board

Figure 4 "System board part locations" on page 72 shows the locations of the parts on the system board.

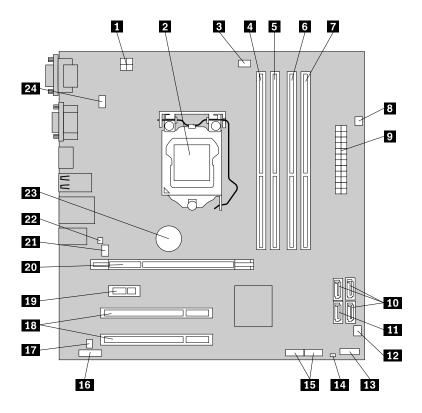


Figure 4. System board part locations

- 1 4-pin power connector
- 2 Microprocessor
- 3 Microprocessor fan connector
- 4 DIMM 2
- 5 DIMM 1
- 6 DIMM 4
- **7** DIMM 3
- 8 Thermal sensor connector
- 9 24-pin power connector
- 10 SATA connectors (3)
- 11 eSATA connector
- 12 Power fan connector

- 13 Front panel connector
- 14 Clear CMOS (Complementary Metal Oxide Semiconductor) /Recovery jumper
- 15 Front USB connectors (2)
- 16 Front audio connector
- 17 Internal speaker connector
- 18 PCI card slots (2)
- 19 PCI Express x1 card slot
- 20 PCI Express x16 graphics card slot
- 21 System fan connector
- 22 Cover presence switch connector (Intrusion switch connector)
- 23 Battery
- 24 PS/2 keyboard and mouse connector

Locating internal drives

Internal drives are devices that your computer uses to read and store data. You can add drives to your computer to increase storage capacity and enable your computer to read other types of media. Your computer comes with the following factory-installed drives:

- · A Serial Advanced Technology Attachment (SATA) optical drive in bay 1
- A 3.5-inch card reader in bay 3 (installed in some models)
- A 3.5-inch SATA hard disk drive in bay 5

Internal drives are installed in bays. In this manual, the bays are referred to as bay 1, bay 2, and so on. Figure 5 "Drive bay locations" on page 73 shows the locations of the drive bays.

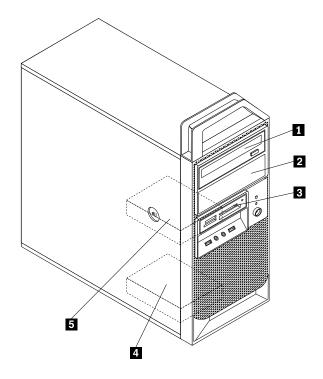


Figure 5. Drive bay locations

The following list describes the type and size of the drive that you can install in each bay:

1 Bay 1 - Maximum height: 43.0 mm (1.7 inches)	Optical drive
2 Bay 2 - Maximum height: 43.0 mm (1.7 inches)	Optical drive
3 Bay 3 - Maximum height: 25.8 mm (1.0 inch)	3.5-inch card reader (installed in some models)
4 Bay 4 - Maximum height: 25.8 mm (1.0 inch)	3.5-inch secondary SATA hard disk drive (installed in some models)
5 Bay 5 - Maximum height: 25.8 mm (1.0 inch)	3.5-inch primary SATA hard disk drive

Removing the computer cover

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the ThinkStation Safety and Warranty Guide that came with your computer. To obtain a copy of the ThinkStation Safety and Warranty Guide, go to: http://www.lenovo.com/support

This section provides instructions on how to remove the computer cover.

CAUTION:

Turn off the computer and wait three to five minutes to let the computer cool before removing the computer cover.

To remove the computer cover, do the following:

- 1. Remove any media from the drives and turn off all attached devices and the computer.
- 2. Disconnect all power cords from electrical outlets.
- 3. Disconnect the power cords, Input/Output (I/O) cables, and any other cables that are connected to the computer. See "Locating connectors on the front of your computer" on page 69 and "Locating connectors on the rear of your computer" on page 69.
- 4. Remove any locking device that secures the computer cover, such as a padlock or an integrated cable lock.
- 5. Remove any thumbscrews that secure the computer cover.
- 6. Press the cover-release button on the side of the computer and slide the cover to the rear of the computer to remove the cover.

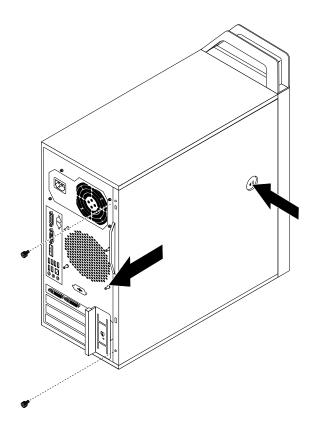


Figure 6. Removing the computer cover

Removing and reinstalling the front bezel

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the ThinkStation Safety and Warranty Guide that came with your computer. To obtain a copy of the ThinkStation Safety and Warranty Guide, go to: http://www.lenovo.com/support

This section provides instructions on how to remove and reinstall the front bezel.

To remove and reinstall the front bezel, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. Remove the front bezel by releasing the three plastic tabs on the left side and pivoting the front bezel outward.

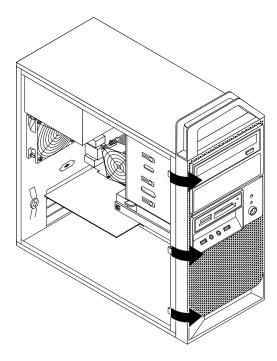


Figure 7. Removing the front bezel

- 4. To reinstall the front bezel, align the three plastic tabs on the right side of the front bezel with the corresponding holes in the chassis, then pivot the front bezel inwards until it snaps into position on the left side.
- 5. To complete the installation, go to "Completing the FRU replacement" on page 103.

Installing or replacing a PCI card

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the ThinkStation Safety and Warranty Guide that came with your computer. To obtain a copy of the ThinkStation Safety and Warranty Guide, go to: http://www.lenovo.com/support

This section provides instructions on how to install or replace a PCI card. Your computer has two standard PCI card slots, one PCI Express x1 card slot, and one PCI Express x16 graphics card slot.

To install or replace a PCI card, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. At the rear of the computer, press the release button 1 to open the card latch 2.

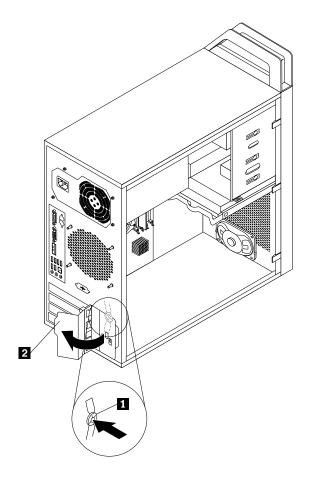


Figure 8. Opening the PCI card latch

4. If you are installing a PCI card, remove the appropriate metal slot cover. If you are replacing an old PCI card, grasp the old card that is currently installed and gently pull it out of the slot.

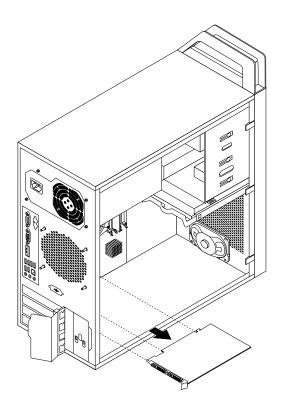


Figure 9. Removing a PCI card

Note: The card fits tightly into the card slot. If necessary, alternate moving each side of the card a small amount until it is removed from the card slot.

- 5. Remove the new PCI card from its static-protective package.
- 6. Install the new PCI card into the appropriate slot on the system board. See "Locating parts on the system board" on page 71.

Note: If you are installing a PCI Express x16 graphics card, make sure the memory slot retaining clips are closed before you install the graphics card.

7. Pivot the card latch to the closed position to secure the PCI card.

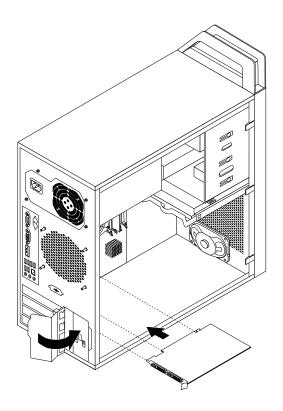


Figure 10. Installing a PCI card

8. To complete the installation or replacement, go to "Completing the FRU replacement" on page 103.

Installing or replacing a memory module

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the *ThinkStation Safety and Warranty Guide* that came with your computer. To obtain a copy of the *ThinkStation Safety and Warranty Guide*, go to: http://www.lenovo.com/support

This section provides instructions on how to install or replace a memory module.

Your computer has four slots for installing or replacing memory modules that provide up to a maximum of 16 GB system memory. When installing or replacing a memory module, use the following guidelines:

- Use either DDR3 ECC UDIMMs or DDR3 Non-ECC UDIMMs for your computer. Do not install both DDR3 ECC UDIMMs and DDR3 Non-ECC UDIMMs in the same computer.
- Use 1 GB, 2 GB, or 4 GB memory modules in any combination up to a maximum of 16 GB.
- Install memory modules in the sequence of DIMM 1, DIMM 3, DIMM 2, and DIMM 4. See "Locating parts on the system board" on page 71.

To install or replace a memory module, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.

- 3. Locate the memory slots. See "Locating parts on the system board" on page 71.
- 4. Remove any parts that might prevent your access to the memory slots. Depending on your computer model, you might need to remove the PCI Express x16 graphics card for easier access to the memory slots. See "Installing or replacing a PCI card" on page 75.
- 5. Open the retaining clips.

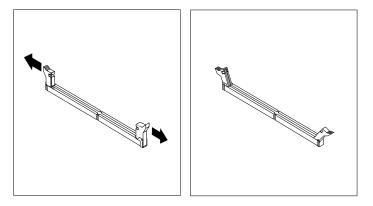


Figure 11. Opening the retaining clips

If you are replacing an old memory module, open the retaining clips and gently pull the memory module out of the memory slot.

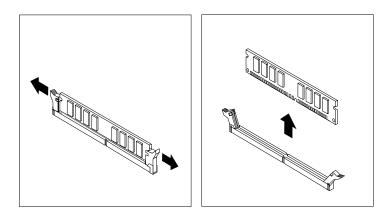


Figure 12. Removing a memory module

6. Position the new memory module over the memory slot. Make sure that the notch 1 on the memory module aligns correctly with the slot key 2 on the system board. Push the memory module straight down into the slot until the retaining clips close.

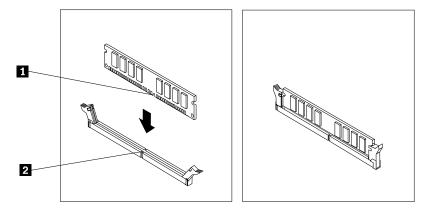


Figure 13. Installing a memory module

- 7. Reinstall the PCI Express x16 graphics card if you have removed it.
- 8. To complete the installation or replacement, go to "Completing the FRU replacement" on page 103.

Installing or replacing the optical drive

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the *ThinkStation Safety and Warranty Guide* that came with your computer. To obtain a copy of the *ThinkStation Safety and Warranty Guide*, go to: http://www.lenovo.com/support

This section provides instructions on how to install or replace the optical drive.

To install or replace an optical drive, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. Remove the front bezel. See "Removing and reinstalling the front bezel" on page 74.
- 4. Depending on whether you are installing or replacing an optical drive, do one of the following:
 - If you are installing a secondary optical drive, remove the plastic panel in the front bezel for the
 drive bay you want to use. If there is a metal static shield installed in the drive bay, remove the
 metal static shield.
 - If you are replacing an optical drive, disconnect the signal cable and the power cable from the rear
 of the optical drive, press the blue release button, and then slide the optical drive out of the front
 of the computer.

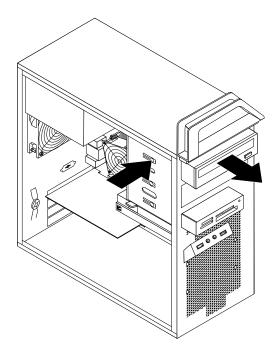


Figure 14. Removing the optical drive

5. Install the optical drive retainer on the side of the new optical drive.




Figure 15. Installing the optical drive retainer

6. Slide the new optical drive into the drive bay from the front of the computer until the optical drive snaps into position.

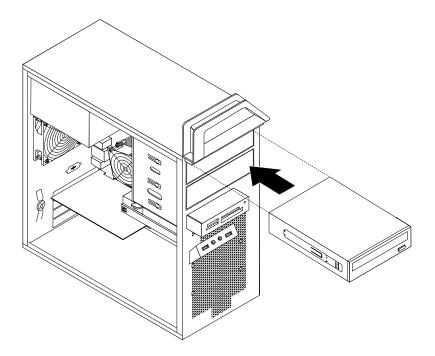


Figure 16. Installing the optical drive

7. Connect the signal cable and the power cable to the new optical drive.

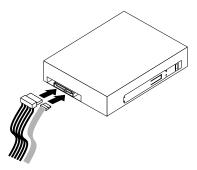


Figure 17. Connecting the optical drive

- 8. Reinstall the front bezel. See "Removing and reinstalling the front bezel" on page 74.
- 9. To complete the installation or replacement, go to "Completing the FRU replacement" on page 103.

Replacing the power supply assembly

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the ThinkStation Safety and Warranty Guide that came with your computer. To obtain a copy of the ThinkStation Safety and Warranty Guide, go to: http://www.lenovo.com/support

This section provides instructions on how to replace the power supply assembly.

To replace the power supply assembly, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. Disconnect the power supply assembly cables from the system board and all drives. See "Locating parts on the system board" on page 71.
- 4. Release the power supply assembly cables from the cable clips and ties in the chassis.
- 5. Lay the computer on its side and remove the four screws at the rear of the chassis that secure the power supply assembly.

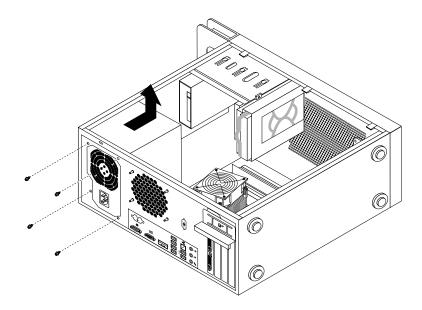


Figure 18. Removing the screws for the power supply assembly

- 6. Slide the power supply assembly to the front of the computer and then lift it out of the chassis.
- 7. Ensure that the new power supply assembly is the correct replacement.
- 8. Install the new power supply assembly into the chassis so that the screw holes in the power supply assembly align with those in the chassis.
- 9. Install and tighten the four screws to secure the power supply assembly.

Note: Use only screws provided by Lenovo.

- 10. Reconnect the power supply assembly cables to the system board and each of the drives.
- 11. Secure the power supply assembly cables with the cable clips and ties in the chassis.
- 12. To complete the replacement, go to "Completing the FRU replacement" on page 103.

Replacing the battery

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the *ThinkStation Safety and Warranty Guide* that came with your computer. To obtain a copy of the *ThinkStation Safety and Warranty Guide*, go to: http://www.lenovo.com/support

This section provides instructions on how to replace the battery.


Your computer has a special type of memory that maintains the date, time, and settings for built-in features, such as parallel-port assignments (configuration). A battery keeps this information active when you turn off the computer.

The battery normally requires no charging or maintenance throughout its life; however, no battery lasts forever. If the battery fails, the date, time, and configuration information (including passwords) are lost. An error message is displayed when you turn on the computer.

Refer to the "Lithium battery notice" in the *ThinkStaion Safety and Warranty Guide* for information about replacing and disposing of the battery.

To replace the battery, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. Locate the battery. See "Locating parts on the system board" on page 71.
- 4. Remove any parts that may prevent your access to the battery.
- 5. Remove the old battery.

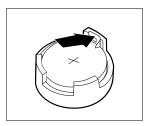

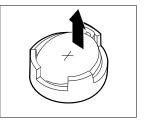
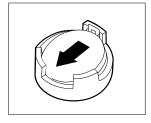


Figure 19. Removing the old battery

6. Install a new battery.



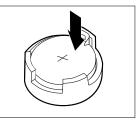


Figure 20. Installing a new battery

- 7. Reinstall any internal parts that have been removed.
- 8. Reinstall the computer cover and reconnect the cables. See "Completing the FRU replacement" on page 103.
- 9. Turn on the computer and all attached devices.

Note: When the computer is turned on for the first time after replacing the battery, an error message might be displayed. This is normal after replacing the battery.

10. Use the Setup Utility program to set the date, time, and any passwords. See Chapter 6 "Using the Setup Utility program" on page 39.

Replacing the heat sink and fan assembly

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the *ThinkStation Safety and Warranty Guide* that came with your computer. To obtain a copy of the *ThinkStation Safety and Warranty Guide*, go to: http://www.lenovo.com/support

This section provides instructions on how to replace the heat sink and fan assembly.

CAUTION:

The heat sink and fan assembly might be very hot. Turn off the computer and wait three to five minutes to let the computer cool before removing the computer cover.

To replace the heat sink and fan assembly, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. Lay the computer on its side for easier access to the system board.
- 4. Locate the heat sink and fan assembly. See "Locating parts on the system board" on page 71.
- 5. Disconnect the heat sink and fan assembly cable from the microprocessor fan connector on the system board. See "Locating parts on the system board" on page 71.
- 6. Follow this sequence to remove the four screws that secure the heat sink and fan assembly to the system board:
 - a. Partially remove screw 1, then fully remove screw 2, and then fully remove screw 1.
 - b. Partially remove screw 3, then fully remove screw 4, and then fully remove screw 3.

Note: Carefully remove the four screws from the system board to avoid any possible damage to the system board. The four screws cannot be removed from the heat sink and fan assembly.

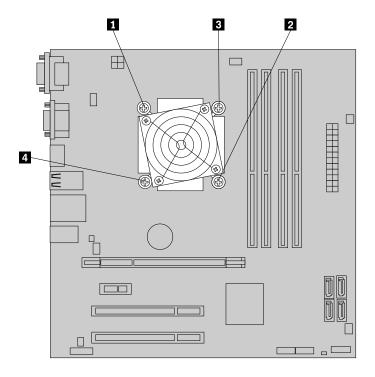


Figure 21. Removing the heat sink and fan assembly

7. Lift the failing heat sink and fan assembly off the system board.

Notes:

- a. You might have to gently twist the heat sink and fan assembly to free it from the microprocessor.
- b. Do not touch the thermal grease while handling the heat sink and fan assembly.
- 8. Position the new heat sink and fan assembly on the system board so that the four screws are aligned with the corresponding holes in the system board and the heat sink and fan assembly cable can be easily connected to the microprocessor fan connector on the system board.
- 9. Follow this sequence to install the four screws to secure the heat sink and fan assembly, as shown in Removing the heat sink and fan assemblyFigure 21 on page 86.
 - a. Partially tighten screw 1, then fully tighten screw 2, and then fully tighten screw 1.
 - b. Partially tighten screw 3, then fully tighten screw 4, and then fully tighten screw 3.
- 10. Connect the heat sink and fan assembly cable to the microprocessor fan connector on the system board. See "Locating parts on the system board" on page 71.
- 11. To complete the replacement, go to "Completing the FRU replacement" on page 103.

Replacing the microprocessor

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the *ThinkStation Safety and Warranty Guide* that came with your computer. To obtain a copy of the *ThinkStation Safety and Warranty Guide*, go to: http://www.lenovo.com/support


This section provides instructions on how to replace the microprocessor.

CAUTION:

The heat sink and microprocessor might be very hot. Turn off the computer and wait three to five minutes to let the computer cool before removing the computer cover.

To replace the microprocessor, do the following:


- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. Lay the computer on its side to get easier access to the system board.
- 4. Remove the heat sink and fan assembly from the system board. See "Replacing the heat sink and fan assembly" on page 85.
- 5. Lift the small handle 1 and open the retainer 2 to access the microprocessor 3.

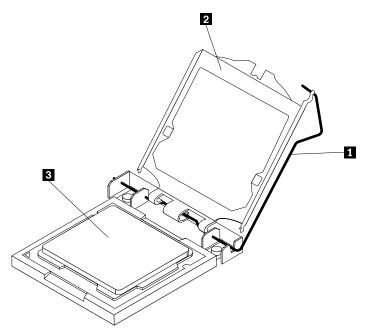

6. Lift the microprocessor straight up and out of the socket.

Notes:

- a. Your microprocessor and socket might look different from the one illustrated.
- b. Note the orientation of the microprocessor in the socket. You can either look for the small triangle 1 on one corner of the microprocessor or note the orientation of the notches 2 on the microprocessor. This is important when installing the new microprocessor on the system board.

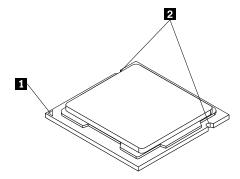

c. Touch only the sides of the microprocessor. Do not touch the gold contacts on the bottom.

d. Do not drop anything onto the microprocessor socket while it is exposed. The socket pins must be kept as clean as possible.

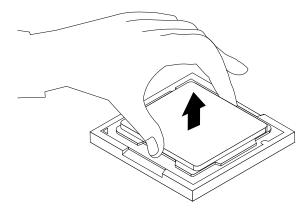


Figure 22. Removing the microprocessor

- 7. Make sure that the small handle is in the raised position and the microprocessor retainer is fully open.
- 8. Hold the new microprocessor and align the notches on it with the alignment keys in the microprocessor socket, or align the small triangle on one corner of the new microprocessor with the corresponding beveled corner of the microprocessor socket.
- 9. Lower the new microprocessor straight down into the microprocessor socket on the system board.
- 10. Close the microprocessor retainer and lock it into position with the small handle to secure the new microprocessor in the socket.
- 11. Reinstall the heat sink and fan assembly. See "Replacing the heat sink and fan assembly" on page 85.
- 12. Reinstall any other parts or reconnect any other cables you removed.
- 13. To complete the replacement, go to "Completing the FRU replacement" on page 103.

Replacing the system board

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the *ThinkStation Safety and Warranty Guide* that came with your computer. To obtain a copy of the *ThinkStation Safety and Warranty Guide*, go to: http://www.lenovo.com/support

This section provides instructions on how to replace the system board.

CAUTION:

The heat sink and microprocessor might be very hot. Turn off the computer and wait three to five minutes to let the computer cool before removing the computer cover.

Note: When replacing the system board, you must order a new retention module for the new system board. Make sure you have a retention module for the new system board before continuing this procedure.

To replace the system board, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.

- 3. Lay the computer on its side for easier access to the system board.
- 4. Remove all memory modules and PCI cards that are currently installed. See "Installing or replacing a memory module" on page 78 and "Installing or replacing a PCI card" on page 75.
- 5. Remove the secondary hard disk drive. See "Replacing the secondary hard disk drive" on page 93.
- 6. Remove the heat sink and fan assembly from the failing system board. See "Replacing the heat sink and fan assembly" on page 85.
- 7. Remove the microprocessor from the failing system board. See "Replacing the microprocessor" on page 86.
- 8. Remove the battery from the failing system board. See "Replacing the battery" on page 83.
- 9. Note the location of all cable connections on the system board and disconnect all cables. See "Locating parts on the system board" on page 71.
- 10. Remove the eight screws that secure the system board to the chassis, following the sequence shown in the illustration:

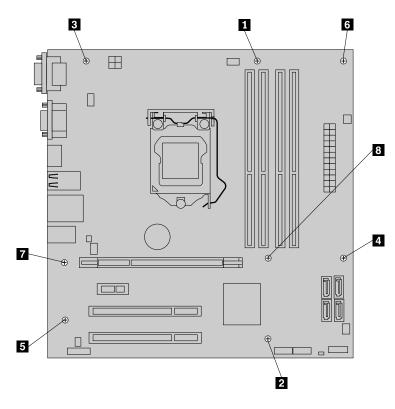


Figure 23. Removing the system board

- 11. Carefully lift the failing system board out of the chassis.
- 12. Position the new system board into the chassis so that the screw holes in the new system board are aligned with those in the chassis. Install the screws that secure the system board following the sequence shown in Removing the system boardFigure 23 on page 89.
- 13. Remove the microprocessor socket cover from the new system board.
- 14. Install the memory modules, PCI cards, battery, microprocessor, and heat sink and fan assembly that you removed from the failing system board to the new system board.
- 15. Reinstall the secondary hard disk drive. See "Replacing the secondary hard disk drive" on page 93.
- 16. Connect all cables to the system board. See "Locating parts on the system board" on page 71.
- 17. Go to "Completing the FRU replacement" on page 103.

The failing system board must be returned with a microprocessor socket cover to protect the pins during shipping and handling.

To install the microprocessor socket cover:

- 1. Remove the microprocessor from the microprocessor socket. See "Replacing the microprocessor" on page 86.
- 2. Align the notches 1 on the microprocessor socket cover with the alignment keys 2 in the microprocessor socket.
- 3. Install one side of the socket cover into the microprocessor socket as shown.

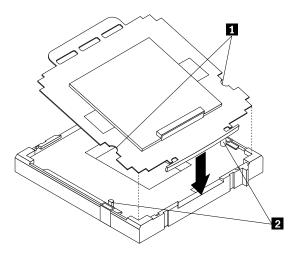


Figure 24. Installing the socket cover

Note: Your microprocessor socket and socket cover might look slightly different from the illustration.

4. Carefully press the other side of the socket cover downward until the socket cover snaps into place.

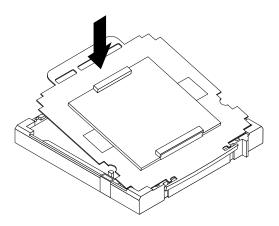


Figure 25. Securing the socket cover

- 5. Carefully check the corners of the socket cover to make sure that the cover is secured in the microprocessor socket.
- 6. Lower the microprocessor retainer and then lower the lever to secure the retainer. Make sure the lever is locked into position.

Replacing the primary hard disk drive

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the *ThinkStation Safety and Warranty Guide* that came with your computer. To obtain a copy of the *ThinkStation Safety and Warranty Guide*, go to: http://www.lenovo.com/support

This section provides instructions on how to replace the primary hard disk drive.

To replace the primary hard disk drive, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. Locate the primary hard disk drive. See "Locating internal drives" on page 72.
- 4. Disconnect the signal cable and the power cable from the hard disk drive.
- 5. Press the blue release tab 1 down, slide the hard disk drive cage 2 to the rear of the computer, and then pivot it outward.

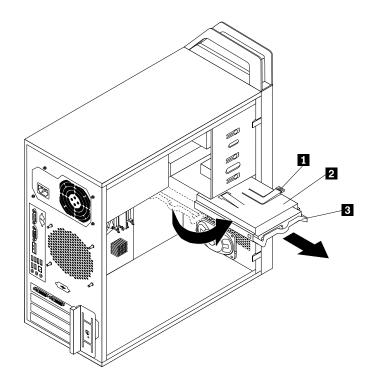


Figure 26. Removing the primary hard disk drive

- 6. Remove the hard disk drive cage from the chassis by sliding it outward.
- 7. Pull on the blue handle 3 to release and remove the hard disk drive from the drive cage.
- 8. Flex the sides of the blue bracket to remove the hard disk drive from the bracket.
- 9. To install a new hard disk drive into the blue bracket, flex the bracket and align pin 1, pin 2, pin 3, and pin 4 on the bracket with the corresponding holes in the hard disk drive. Do not touch the circuit board 5 on the bottom of the hard disk drive.

Note: If you are installing a 2.5-inch hard disk drive, install the hard disk drive into a 2.5-inch to 3.5-inch hard disk drive tray first and then install the tray into the blue bracket.

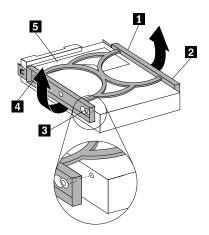


Figure 27. Installing the hard disk drive into the bracket

- 10. Slide the new hard disk drive into the drive cage until it snaps into position.
- 11. Align the pivot pin on the hard disk drive cage with the slot 11 in the upper drive cage, as shown in Installing the primary hard disk driveFigure 28 on page 93. Then, slide the drive cage with the new hard disk drive into the chassis.
- 12. Connect the signal cable and the power cable to the new hard disk drive.
- 13. Press down on the metal latch 2 and pivot the drive cage into place. Then, slide the drive cage to the front of the computer until it snaps into position.

Note: There are two arrows, one on the upper drive cage and one on the hard disk drive cage. The arrows are aligned when the hard disk drive is in the proper position.

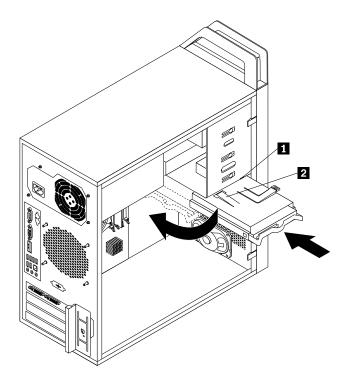


Figure 28. Installing the primary hard disk drive

14. To complete the replacement, go to "Completing the FRU replacement" on page 103.

Replacing the secondary hard disk drive

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the *ThinkStation Safety and Warranty Guide* that came with your computer. To obtain a copy of the *ThinkStation Safety and Warranty Guide*, go to: http://www.lenovo.com/support

This section provides instructions on how to replace the secondary hard disk drive. Not all computers have the secondary hard disk drive.

To replace the secondary hard disk drive, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. Locate the secondary hard disk drive. See "Locating internal drives" on page 72.
- 4. Disconnect the signal cable and the power cable from the hard disk drive.
- 5. Press the blue release button to release the hard disk drive cage and then lift the hard disk drive cage out of the chassis.

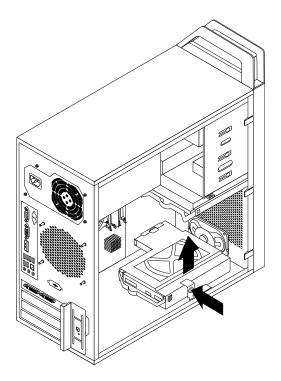


Figure 29. Removing the secondary hard disk drive

- 6. Pull on the blue handle to release and remove the hard disk drive from the hard disk drive cage.
- 7. Flex the sides of the blue bracket to remove the hard disk drive from the bracket.
- 8. To install a new hard disk drive into the blue bracket, flex the bracket and align pin 1, pin 2, pin 3, and pin 4 on the bracket with the corresponding holes in the hard disk drive. Do not touch the circuit board 5 on the bottom of the hard disk drive.

Note: If you are installing a 2.5-inch hard disk drive, install the hard disk drive into a 2.5-inch to 3.5-inch hard disk drive tray first and then install the tray into the blue bracket.

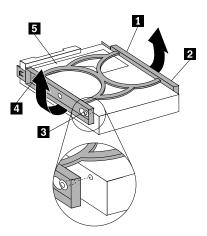


Figure 30. Installing the hard disk drive into the bracket

9. Slide the new hard disk drive into the hard disk drive cage until it snaps into position.

10. Slide the hard disk drive cage with the new hard disk drive into the chassis until it is directly underneath the metal tab.

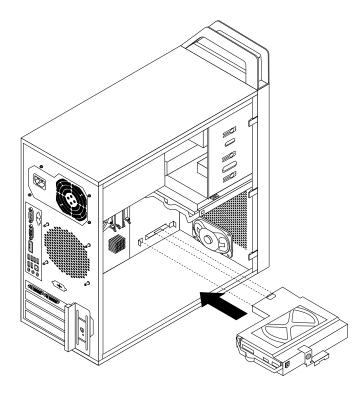


Figure 31. Installing the secondary hard disk drive

- 11. Press the hard disk drive cage downward until it snaps into position.
- 12. Connect the signal cable and the power cable to the new hard disk drive.
- 13. To complete the replacement, go to "Completing the FRU replacement" on page 103.

Replacing the card reader

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the ThinkStation Safety and Warranty Guide that came with your computer. To obtain a copy of the ThinkStation Safety and Warranty Guide, go to: http://www.lenovo.com/support

This section provides instructions on how to replace the card reader.

To replace the card reader, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. Remove the front bezel. See "Removing and reinstalling the front bezel" on page 74.
- 4. Disconnect the card reader cable from the front USB connector on the system board. See "Locating parts on the system board" on page 71.

Note: If your computer has a secondary hard disk drive installed, remove the secondary hard disk drive to get easier access to the front USB connector on the system board.

5. Press the blue release button and slide the card reader out of the front of the computer.

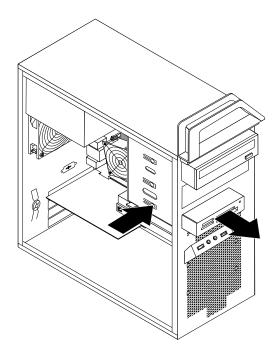


Figure 32. Removing the card reader

6. Install the card reader retainer on the side of the new card reader.



Figure 33. Installing the card reader retainer

- 7. Slide the new card reader into the drive bay until it snaps into position.
- 8. Connect the card reader cable to the available front USB connector on the system board. See "Locating parts on the system board" on page 71.
- 9. Reinstall the front bezel. See "Removing and reinstalling the front bezel" on page 74.
- 10. To complete the replacement, go to "Completing the FRU replacement" on page 103.

Replacing the front fan assembly

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the *ThinkStation Safety and Warranty Guide* that came with your computer. To obtain a copy of the *ThinkStation Safety and Warranty Guide*, go to: http://www.lenovo.com/support

This section provides instructions on how to replace the front fan assembly.

Note: Not all computers have the front fan assembly.

To replace the front fan assembly, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. Remove the front bezel. See "Removing and reinstalling the front bezel" on page 74.
- 4. Disconnect the front fan assembly cable from the power fan connector on the system board. See "Locating parts on the system board" on page 71.

Note: If your computer has a secondary hard disk drive installed, remove the secondary hard disk drive to get easier access to the power fan connector on the system board. See "Replacing the secondary hard disk drive" on page 93.

5. Release the two tabs 1 that attach the front fan assembly to the chassis as shown and then completely remove the front fan from the chassis.

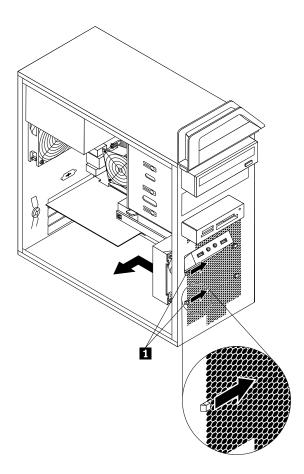


Figure 34. Removing the front fan assembly

6. Insert the two tabs 2 of the new front fan assembly into the corresponding holes in the chassis, and press the other two tabs 1 through the holes until the front fan assembly is secured in place.

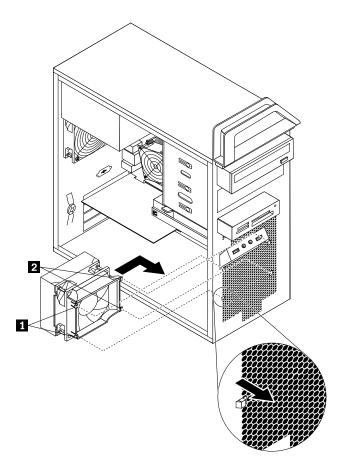


Figure 35. Installing the front fan assembly

- 7. Connect the front fan assembly cable to the power fan connector on the system board.
- 8. Reinstall the secondary hard disk drive if removed. See "Replacing the secondary hard disk drive" on page 93.
- 9. To complete the replacement, go to "Completing the FRU replacement" on page 103.

Replacing the rear fan assembly

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the *ThinkStation Safety and Warranty Guide* that came with your computer. To obtain a copy of the *ThinkStation Safety and Warranty Guide*, go to: http://www.lenovo.com/support

This section provides instructions on how to replace the rear fan assembly.

To replace the rear fan assembly, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. Locate the rear fan assembly. See "Locating components" on page 70.

- 4. Disconnect the rear fan assembly cable from the system fan connector on the system board. See "Locating parts on the system board" on page 71.
- 5. The rear fan assembly is attached to the chassis by four rubber mounts. Remove the rear fan assembly by cutting the rubber mounts and gently pulling the rear fan assembly out of the chassis.

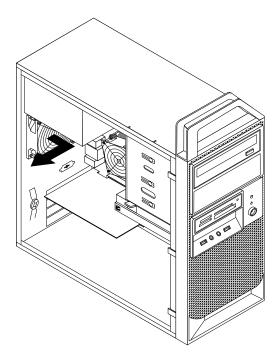


Figure 36. Removing the rear fan assembly

6. Install the new rear fan assembly by aligning the new rubber mounts that came with the new rear fan assembly with the corresponding holes in the rear of the chassis, and then push the rubber mounts through the holes.

Note: The new rear fan assembly will have four new rubber mounts attached.

7. Pull on the tips of the rubber mounts until the rear fan assembly is secured in place.

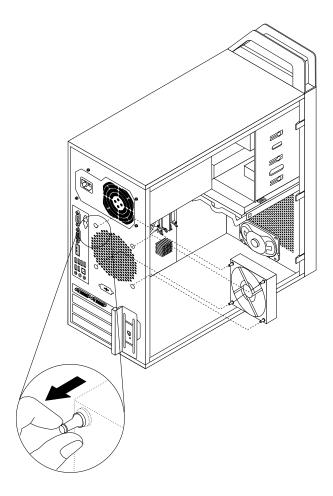


Figure 37. Installing the rear fan assembly

- 8. Connect the rear fan assembly cable to the system fan connector on the system board.
- 9. To complete the replacement, go to "Completing the FRU replacement" on page 103.

Replacing the front audio and USB assembly

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the ThinkStation Safety and Warranty Guide that came with your computer. To obtain a copy of the ThinkStation Safety and Warranty Guide, go to: http://www.lenovo.com/support

This section provides instructions on how to replace the front audio and USB assembly.

To replace the front audio and USB assembly, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. Remove the front bezel. See "Removing and reinstalling the front bezel" on page 74.
- 4. Locate the front audio and USB assembly. See "Locating components" on page 70.

5. Disconnect the front audio and USB assembly cables from the system board. See "Locating parts on the system board" on page 71.

Note: Make sure you note the locations of the cables when you disconnect the cables from the system board.

6. Remove the screw that secures the front audio and USB assembly to the chassis.

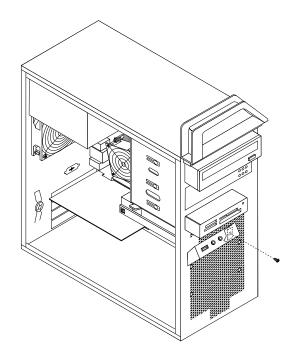


Figure 38. Removing the securing screw of the front audio and USB assembly

- 7. Remove the front audio and USB assembly from the chassis.
- 8. Install a new front audio and USB assembly into the chassis and align the screw hole in the front audio and USB assembly with the hole in the chassis.
- 9. Install the screw to secure the new front audio and USB assembly to the chassis.
- 10. Reconnect the front audio and USB assembly cables to the front audio connector and the front USB connector on the system board. See "Locating parts on the system board" on page 71.
- 11. To complete the installation or replacement, go to "Completing the FRU replacement" on page 103.

Replacing the internal speaker

Attention

Do not open your computer or attempt any repair before reading and understanding the "Important safety information" in the ThinkStation Safety and Warranty Guide that came with your computer. To obtain a copy of the ThinkStation Safety and Warranty Guide, go to:http://www.lenovo.com/support

This section provides instructions on how to replace the internal speaker.

Note: Not all computers have the internal speaker.

To replace the internal speaker, do the following:

- 1. Remove all media from the drives and turn off all attached devices and the computer. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the computer.
- 2. Remove the computer cover. See "Removing the computer cover" on page 73.
- 3. Locate the internal speaker connector on the system board. See "Locating parts on the system board" on page 71.
- 4. Disconnect the internal speaker cable from the system board.
- 5. Push the metal tab 1 on the top of the internal speaker outward and slide the internal speaker upward to completely remove it from the chassis.

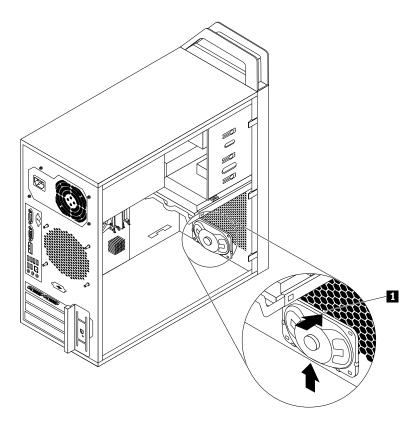


Figure 39. Removing the old internal speaker

6. Position the new internal speaker into the four metal clips 1 and push downward on the internal speaker until it is secured in place.

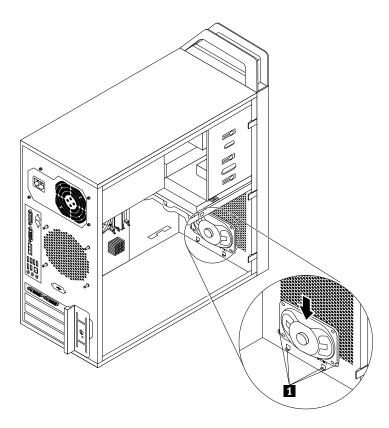


Figure 40. Installing a new internal speaker

- 7. Connect the internal speaker cable to the system board. See "Locating parts on the system board" on page 71.
- 8. To complete the installation or replacement, go to "Completing the FRU replacement" on page 103.

Completing the FRU replacement

This section provides instructions on how to complete the FRU replacement.

After replacing the FRUs, you need to reinstall any removed parts, reconnect and route any internal cables, reinstall the computer cover, and reconnect any external cables, such as power cords. Depending on the FRUs replaced, you might need to confirm the updated information in the Setup Utility program, see Chapter 6 "Using the Setup Utility program" on page 39.

Note: When the power cord is first plugged in, the computer might appear to turn on for a few seconds and then turn off. This is a normal sequence to enable the computer to initialize.

To reinstall the computer cover and reconnect cables to your computer:

- 1. Ensure that all components have been reassembled correctly and that no tools or loose screws are left inside your computer. See "Locating components" on page 70 for the location of the various components.
- 2. If you have removed the front bezel, reinstall it. See "Removing and reinstalling the front bezel" on page 74.
- Make sure that the cables are routed correctly before reinstalling the computer cover. Keep cables clear of the hinges and sides of the computer chassis to avoid interference with reinstalling the computer cover.

4. Position the computer cover on the chassis so that the rail guides on the bottom of the computer cover engage the rails on the chassis. Then, push the cover to the front of the computer until it snaps into position.

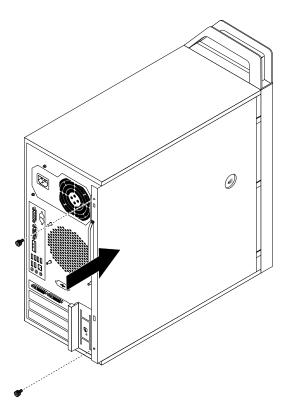


Figure 41. Reinstalling the computer cover

- 5. If the computer cover is secured with thumbscrews, install them.
- 6. If there is a padlock available, lock the computer cover.
- 7. If there is an integrated cable lock available, lock the computer.
- 8. Reconnect the external cables and power cords to the computer. See "Locating connectors on the rear of your computer" on page 69.
- 9. If you have replaced the system board, you must update (flash) the BIOS. See "Updating (flashing) the BIOS" on page 165.
- 10. Some FRU replacements require the configuration to be updated. See Chapter 6 "Using the Setup Utility program" on page 39.


Chapter 10. FRU lists

Attention: Read "Important information about replacing RoHS compliant FRUs" on page 1 before replacing any FRUs.

Note: In the following tables, a CRU (Customer Replaceable Unit) is identified as "1", "2", or "N" in the CRU column. "N" means that the part is not a CRU, "1" means that the part is a Self-service CRU, and "2" means that the part is an Optional-service CRU.

Overall: MT 4215, 4219, 4220, 4221, and 4222

The following replaceable components are available for the 4215, 4219, 4220, 4221, and 4222 machine type models.

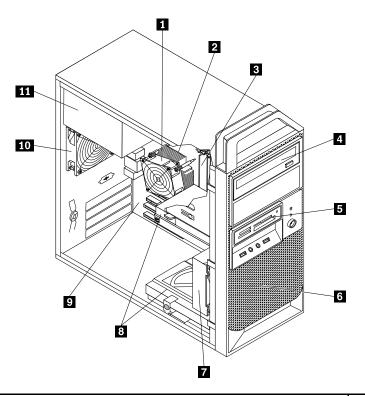

Item #	FRUs	FRU #	CRU
	Heat sink, 73/95 Watt		
	MT 4215: all models		N
1	MT 4219: all models	43N9700	
'	MT 4220: all models		
	MT 4221: all models		
	MT 4222: all models		
	Microprocessor, Xeon - Lynnfield X3430 / 2.40GHz		
2	• MT 4215: CTO	64Y8425	N
	• MT 4219: CTO		

© Copyright Lenovo 2010, 2011 **105**

Item #	FRUs	FRU #	CRU
	MT 4220: 22M 22J 24J 25J 18G 36U 36F 36S 41A 41Q 41T 41K 41R 42A 42Q 42T 42K 42R 59A CTO 69J 72J 73J 96A A1C A4U A4F B3B B3H		
	• MT 4221: CTO		
	MT 4222: 41B 41H 41V 23M 24M 29J 32J 33J 44A 44Q 44T 44K 44R 43B 43H 43V 47C CTO 54G 58G 71J 73M 74M 86J 91C A8C		
	Microprocessor, Xeon - Lynnfield X3440 / 2.53GHz		
	• MT 4215: CTO		
	• MT 4219: CTO		
2	MT 4220: 47H 61A CTO 82U 82F 82S 82L 82D 82Y 82G 82M 82A 82Q 82T 82C 82B 82H 82V 82K 82R 82E 82J 83U 83F 83S 83L 83D 83Y 83G 83M 83A 83Q 83T 83C 83B 83H 83V 83K 83R 83E 83J A5U A5F A5S A5P A5L A5D A5Y A5G A5M A5A A5Q A5T A5C A5B A5H A5V A5K A5R A5E A5J A6U A6F A6S A6P A6L A6D A6Y A6G A6M A6A A6Q A6T A6C A6B A6H A6V A6K A6R A6E A6J B4B B4H	64Y8426	N
	• MT 4221: CTO		
	• MT 4222: 25M 21G 51A CTO 75M A2G A4M		
	Microprocessor, Xeon - Lynnfield X3450 / 2.67GHz		
	• MT 4215: CTO		
0	• MT 4219: CTO	64Y8427	N
2	• MT 4220: 26J 21G 62A 63A CTO 64G 74J B2G B6J	0410421	IN
	• MT 4221: CTO		
	• MT 4222: 34J 14G CTO 54G 65S 57G 87J 99J		
	Microprocessor, Xeon - Lynnfield X3460 / 2.80GHz		
	• MT 4215: CTO		
2	• MT 4219: CTO	64Y8428	N
2	• MT 4220: 14G CTO	0410420	IN
	• MT 4221: CTO		
	• MT 4222: CTO		
	Microprocessor, Xeon - Lynnfield X3470 / 2.93GHz		
	• MT 4215: CTO		
	• MT 4219: CTO		
2	MT 4220: 31J 17G CTO 77J 78J 79J 84U 84F 84S 84L 84D 84Y 84G 84M 84A 84Q 84T 84C 84B 84H 84V 84K 84R 84E 84J 97A 98A 99A A7U A7F A7S A7P A7L A7D A7Y A7G A7M A7A A7Q A7T A7C A7B A7H A7V A7K A7R A7E A7J	64Y8429	N
	• MT 4221: CTO		
	• MT 4222: CTO 59G		
	Microprocessor, X3480 (Lynnfield / 3.06GHz / 4C / 8T / 8M / 1333 / 95w / T)		
	• MT 4215: CTO		
2	• MT 4219: CTO	03T7027	N
	• MT 4220: CTO 94J		
	• MT 4221: CTO		
	• MT 4222: CTO 78G 82J 89J A1J A5M		

Item #	FRUs	FRU #	CRU
	Microprocessor, Clarkdale - Celeron Pentuim G6950 / 2.80GHz		
	• MT 4215: CTO		
2	• MT 4219: CTO	71Y5303	N
2	• MT 4220: 49C CTO	7113303	IN
	• MT 4221: 13C 13B 13H 13V CTO		
	• MT 4222: CTO		
	Microprocessor, Core i3-530 (2.93GHz / 2C / 4T / 4M / 1333 / 73w / iG 733)		
	• MT 4215: CTO		
2	• MT 4219: CTO	71Y6960	N
	• MT 4220: CTO 81J		
	• MT 4221: CTO		
	• MT 4222: CTO		
	Microprocessor, Clarkdale - Core i3-540 / 2.93GHz		
	• MT 4215: CTO		
2	• MT 4219: CTO	71Y5304	N
	• MT 4220: 53A 53Q 53K CTO	7113304	IN
	• MT 4221: CTO		
	MT 4222: 41H 41V 49A 49Q 49K CTO 67U 67F		
	Microprocessor, Clarkdale - Core i5-650 / 3.20GHz		
	• MT 4215: CTO		
	• MT 4219: CTO		
2	 MT 4220: 44C 45H 46B 52C 54A 54Q 54K 55A CTO 85U 85F 85S 85L 85D 85Y 85G 85M 85A 85Q 85T 85C 85B 85H 85V 85K 85R 85E 85J 86U 86F 86S 86L 86D 86Y 86G 86M 86A 86Q 86T 86C 86B 86H 86V 86K 86R 86E 86J 88U 88F 88S 88L 88D 88Y 88G 88M 88A 88Q 88T 88C 88B 88H 88V 88K 88R 88E 88J 95A A2C A8U A8F A8S A8P A8L A8D A8Y A8G A8M A8A A8Q A8T A8C A8B A8H A8V A8K A8R A8E A8J A9U A9F A9S A9P A9L A9D A9Y A9G A9M A9A A9Q A9T A9C A9B A9H A9V A9K A9R A9E A9J B5C 	71Y6961	N
	• MT 4221: CTO		
	MT 4222: 42B 42H 42V CTO 53G 61G 8U 68F 81U 81F 92C A3G		
	Microprocessor, Clarkdale - Core i5-660 / 3.33GHz		
	• MT 4215: CTO		
2	• MT 4219: CTO	71Y6962	N
	• MT 4220: 56A 57A CTO	1110302	IN
	• MT 4221: CTO		
	MT 4222: CTO 69U 69F 72M 96U 96F 97U 97F A6J		

Item #	FRUs	FRU #	CRU
	Microprocessor, Clarkdale - Core i5-670 / 3.46GHz		
	• MT 4215: CTO		
	• MT 4219: CTO		
2	MT 4220: 58K 58R CTO 87U 87F 87S 87L 87D 87Y 87G 87M 87A 87Q 87T 87C 87B 87H 87V 87K 87R 87E 87J B1U B1F B1S B1P B1L B1D B1Y B1G B1M B1A B1Q B1T B1C B1B B1H B1V B1K B1R B1E B1J	71Y6963	Ν
	• MT 4221: CTO		
	MT 4222: 27M 46A 46Q 46K 46J CTO 67U 67F 67S 64J		
	Microprocessor, Core i3-550 (3.2GHz/ 2C / 4T / 4M / 1333 / 73w / iG 733)		
	• MT 4215: CTO		
2	• MT 4219: CTO	89Y9195	N
2	MT 4220: CTO 93J A3U A3F	0919195	IN
	• MT 4221: CTO		
	• MT 4222: CTO 76G 85J 93U 93F 94U 94F 95U 95F		
	Microprocessor, Core i3-560 (3.33GHz/ 2C / 4T / 4M / 1333 / 73w / iG 733)		
	• MT 4215: CTO		
2	• MT 4219: CTO	03T7035	N
	• MT 4220: CTO		
	• MT 4221: CTO		
	• MT 4222: CTO		
	Microprocessor, Core i5-680 (3.6GHz / 2C / 4T / 4M / 1333 / 73w / T / iG 733)		
	• MT 4215: CTO		
2	• MT 4219: CTO	89Y9196	N
	• MT 4220: CTO 91U 91F 92J		
	• MT 4221: CTO		
	• MT 4222: CTO 77G 83J 84J 98J A7J		
	Memory module, DDR3 ECC PC3-10600 1GB UDIMM (1333)		
	• MT 4215: CTO		
	• MT 4219: CTO		
3	MT 4220: 41A 41Q 41T 41K 41R 42A 42Q 42T 42K 42R 51C 52C 53A 53Q 53K 57A 58A 58Q 58K 58R 59A 61A 62A 63A CTO 69J 72J 73J 81J 93J 95A 96A 98A A1C A2C	46R6026	1
	• MT 4221: CTO		
	MT 4222: 41B 41H 41V 42B 42H 42V 43B 43H 43V 17G 144A 44Q 44T 44K 44R 45A 45Q 45T 45K 45R 47C 48C 49A 49Q 49K 51A CTO 71J 85J 86J 91C 92C		

Item #	FRUs	FRU #	CRU
3	 Memory module, DDR3 ECC PC3-10600 2GB UDIMM (1333) MT 4215: CTO MT 4219: CTO MT 4220: 22M 22J 24J 25J 26M 26J 31J 12G 13G 15G 16G 17G 18G 21G 35U 35F 35S 36U 36F 36S 37U 37F 37S 41A 41Q 41T 41K 41R 42A 42Q 42T 42K 42R 46B 47H 49C 52C 53A 53Q 53K 54A 54Q 54K 55A 56A 57A 58A 58Q 58K 58R 59A 61A 62A 63A CTO 64G 69J 72J 73J 74J 78J 82U 82F 82S 82L 82D 82Y 82G 82M 82A 82Q 82T 82C 82B 82H 82V 82K 82R 82E 82J 83U 83F 83S 83L 83D 83Y 83G 83M 83A 83Q 83T 83C 83B 83H 83V 83K 83R 83E 83J 84U 84F 84S 84L 84D 84Y 84G 84M 84A 84Q 84T 84C 84B 84H 84V 84K 84R 84E 84J 85U 85F 85S 85L 85D 85Y 85G 85M 85A 85Q 85T 85C 85B 85H 85V 85K 85R 85E 85J 86U 86F 86S 86L 86D 86Y 86G 86M 86A 86Q 86T 86C 86B 86H 86V 86K 86R 86E 86J 87U 87F 87S 87L 87D 87Y 87G 87M 87A 87Q 87T 87C 87B 87H 87V 87K 87R 87E 87J 88U 88F 88S 88L 88D 88Y 88G 88M 88A 88Q 88T 88C 88B 88H 88V 88K 88R 88E 8BJ 91U 91F 92J 93J 94J 95A 96A 97A 98A 99A A1C A2C A3U A3F A4U A4F A5U A5F A5S A5P A5L A5D A5Y A5G A5M A5A A5Q A5T A5C A5B A5H A5V A5K A5R A5E A5J A6U A6F A6S A6P A6L A6D A6Y A6G A6M A6A A6Q A6T A6C A6B A6H A6V A6K A6R A6E A6J A7U A7F A7S A7P A7L A7D A7Y A7G A7M A7A A7Q A7T A7C A7B A7H A7V A7K A7R A7E A7J A8U A8F A8S A8P A8L A8D A8Y A8G A8M A8A A8Q A8T A8C A8B A8H A8V A8K A8R A8E A8J B1H B1V B1K B1R B1E B1J B2G B3B B3H B4B B4H B5C B6J MT 4221: CTO MT 4221: CTO MT 4221: CTO MT 4221: CTO MT 4221: AB 41H 41V 42B 42H 42V 43B 43H 43V 23M 24M 25M 27M 29J 32J 33J 34J 21G 1G 12G 13G 14G 16G 35U 35F 35S 37U 37F 37S 44A 44Q 44T 44K 44R 45A 45Q 45T 45K 45F 47C 48C 46A 46Q 46K 46J 49A 49Q 49K 51A CTO 53G 54G 55G 67U 67F 67S 57G 58G 59G 61G 67U 67F 68U 68F 69U 69F 71J 72M 73M 74M 75M 76G 77G 78G 81U 81F 82J 83J 84J 85J 86J 87J 89J 91C 92C 98J 99J A1J 93U 93F 94U 94F 95U 95F 96U 96F 97U 97F A2G A3G A4M A5M A6J A7J A8C 	46R6027	1
3	Memory module, DDR3 ECC PC3-10600 4GB UDIMM (1333) • MT 4215: CTO • MT 4219: CTO • MT 4220: CTO • MT 4221: CTO • MT 4222: CTO 78G	64Y9570	1
3	Memory module, DDR3 non-ECC PC3-10600 1GB UDIMM (1333) • MT 4215: CTO • MT 4219: CTO • MT 4220: 22M 22J 24J 25J 33J 49C CTO • MT 4221: 13C 13B 13H 13V CTO • MT 4222: 29J 32J 33J 46A 46Q 46K 46J CTO	64Y6648	1

Item #	FRUs	FRU #	CRU
	Memory module, DDR3 non-ECC PC3-10600 2GB UDIMM (1333)		
	• MT 4215: CTO		
	• MT 4219: CTO		
3	MT 4220: 26M 26J 31J 32J 35U 35F 35S CTO B4B B4H	64Y6649	1
_	• MT 4221: CTO		
	MT 4222: 23M 24M 25M 27M 34J 35U 35F 35S 36U 36F 36S 37U 37F 37S CTO 53G 54G 55G 72M 73M 74M 75M 76G 77G 81U 81F 93U 93F 94U 94F 95U 95F 96U 96F 97U 97F A4M A5M		
	Optical drive, DVD-ROM Drive - 16x/48x (SATA)		
	• MT 4215: CTO		
	• MT 4219: CTO		
4	• MT 4220: 45H CTO	71Y5543	1
	• MT 4221: 13C 13B 13H 13V CTO		
	• MT 4222: CTO		
	Optical drive, DVD Burner/CD-RW Rambo 8 (SATA)		
	• MT 4215: CTO		
	• MT 4219:		
4	 MT 4220: 12G 15G 16G 17G 18G 21G 34U 34F 34S 35U 35F 35S 36U 36F 36S 37U 37F 37S 44C 45H 46B 47H 49C 51C 52C 55A 56A 59A 62A 63A CTO 64G 82U 82F 82S 82L 82D 82Y 82G 82M 82A 82Q 82T 82C 82B 82H 82V 82K 82R 82E 82J 83U 83F 83S 83L 83D 83Y 83G 83M 83A 83Q 83T 83C 83B 83H 83V 83K 83R 83E 83J 84U 84F 84S 84L 84D 84Y 84G 84M 84A 84Q 84T 84C 84B 84H 84V 84K 84R 84E 84J 85U 85F 85S 85L 85D 85Y 85G 85M 85A 85Q 85T 85C 85B 85H 85V 85K 85R 85E 85J 86U 86F 86S 86L 86D 86Y 86G 86M 86A 86Q 86T 86C 86B 86H 86V 86K 86R 86E 86J 87U 87F 87S 87L 87D 87Y 87G 87M 87A 87Q 87T 87C 87B 87H 87V 87K 87R 87E 87J 88U 88F 88S 88L 88D 88Y 88G 88M 88A 88Q 88T 88C 88B 88H 88V 88K 88R 88E 88J 91U 91F 97A 98A 99A A1C A2C A3U A3F A4U A4F A5U A5F A5S A5P A5L A5D A5Y A5G A5M A5A A5Q A5T A5C A5B A5H A5V A5K A5R A5E A5J A6U A6F A6S A6P A6L A6D A6Y A6G A6M A6A A6Q A6T A6C A6B A6H A6V A6K A6R A6E A6J A7U A7F A7S A7P A7L A7D A7Y A7G A7M A7A A7Q A7T A7C A7B A7H A7V A7K A7R A7E A7J A8U A8F A8S A8P A8L A8D A8Y A8G A8M A8A A8Q A8T A8C A8B A8H A8V A8K A8R A8E A8J A9U A9F A9S A9P A9L A9D A9Y A9G A9M A9A A9Q A9T A9C A9B A9H A9V A9K A9R A9E A9J B1U B1F B1S B1P B1L B1D B1Y B1G B1M B1A B1Q B1T B1C B1B B1H B1V B1K B1R B1E B1J B2G B3B B3H B4B B4H B5C 	71Y5545	1
	 MT 4221: CTO MT 4222: 21G 16G 36U 36F 36S 37U 37F 37S CTO 52G 53G 54G 55G 66U 66F 66S 67U 67F 67S 57G 58G 59G 61G 64J 67U 67F 68U 68F 69U 69F 72M 73M 74M 75M 76G 77G 89J 91C 92C A1J 93U 93F 95U 95F 96U 96F 97U 97F A2G A3G A4M A8C 		
	Optical drive, Blu-Ray DVD Burner (SATA)		
	• MT 4215: CTO		
	• MT 4219: CTO	74\////	_
4	• MT 4220: CTO	71Y5547	1
	• MT 4221: CTO		
	• MT 4222: CTO		

Item #	FRUs	FRU #	CRU
	Optical drive, Blu-Ray DVD Burner (SATA)		
	• MT 4215: CTO		
	• MT 4219: CTO	74\/7000	4
4	• MT 4220: CTO	71Y7266	1
	• MT 4221: CTO		
	• MT 4222: CTO		
	Card reader, 3.5" 25-in-1 USB media card reader (w/GPIO detect)		
	• MT 4215: CTO		
	• MT 4219: CTO		
5	MT 4220: 49C 52C 53A 53Q 53K 54A 54Q 54K 55A 56A 57A 58A 58Q 58K 58R 59A 61A 62A 63A CTO	45R8139	1
	• MT 4221: CTO		
	• MT 4222: 47C 46A 46Q 46K 46J 49A 49Q 49K 51A CTO		
	Front bezel assembly		
	MT 4215: all models		
6	MT 4219: all models	45K2300	1
0	MT 4220: all models		ı
	MT 4221: all models		
	MT 4222: all models		
	Front fan assembly including mount and baffle		
	MT 4215: all models		
7	MT 4219: all models	45K2306	N
,	MT 4220: all models	45112500	IV
	MT 4221: all models		
	MT 4222: all models		
	Hard disk drive, 250GB SATA - 7200 rpm, 3 Gb/s, 8MB cache, 3.5"		
	• MT 4215: CTO		
	• MT 4219: CTO		
8	 MT 4220: 22M 22J 24J 25J 26M 26J 31J 33M 33J 41A 41Q 41T 41K 41R 42A 42Q 42T 42K 42R 53A 53Q 53K 54A 54Q 54K 57A 58A 58Q 58K 58R 61A CTO 68J 69J 72J 73J 74J 78J 81J 92J 93J 94J 95A 96A B6J 	45K0408	1
	• MT 4221: 13C 13B 13H 13V CTO		
	MT 4222: 41B 41H 41V 42B 42H 42V 43B 43H 43V 23M 24M 25M 26M 27M 28J 29J 32J 33J 34J 35U 35F 35S 44A 44Q 44T 44K 44R 45A 45Q 45T 45K 45R 47C 48C 46A 46Q 46K 46J 49A 49Q 49K 51A CTO 71J 79G 81U 81F 82J 83J 84J 85J 86J 87J 98J 99J 94U 94F A6J		

Item #	FRUs	FRU #	CRU
8	 Hard disk drive, 500GB SATA - 7200 rpm, 3 Gb/s, 16MB cache, 3.5" MT 4215: CTO MT 4219: CTO MT 4220: 12G 15G 16G 17G 18G 21G 34U 34F 34S 35U 35F 35S 36U 36F 36S 37U 37F 37S 44C 45H 46B 47H 49C 51C 52C 55A 56A 59A 62A 63A CTO 64G 82U 82F 82S 82L 82D 82Y 82G 82M 82A 82Q 82T 82C 82B 82H 82V 82K 82R 82E 82J 83U 83F 83S 83L 83D 83Y 83G 83M 83A 83Q 83T 83C 83B 83H 83V 83K 83R 83E 83J 84U 84F 84S 84L 84D 84Y 84G 84M 84A 84Q 84T 84C 84B 84H 84V 84K 84R 84E 84J 85U 85F 85S 85L 85D 85Y 85G 85M 85A 85Q 85T 85C 85B 85H 85V 85K 85R 85E 85J 86U 86F 86S 86L 86D 86Y 86G 86M 86A 86Q 86T 86C 86B 86H 86V 86K 86R 86E 86J 87U 87F 87S 87L 87D 87Y 87G 87M 87A 87Q 87T 87C 87B 87H 87V 87K 87R 87E 87J 88U 88F 88S 88L 88D 88Y 88G 88M 88A 88Q 88T 88C 88B 88H 88V 88K 88R 88E 88J 91U 91F 97A 98A 99A A1C A2C A3U A3F A4U A4F A5U A5F A5S A5P A5L A5D A5Y A5G A5M A5A A5Q A5T A5C A5B A5H A5V A5K A5R A6C A6B A6H A6V A6K A6R A6E A6J A7U A7F A7S A7P A7L A7D A7Y A7G A7M A7A A7Q A7T A7C A7B A7H A7V A7K A7R A7E A7J A8U A8F A8S A8P A8L A8D A8Y A8G A8M A8A A8Q A8T A8C A8B A8H A8V A8K A8R A8E A8J A9U A9F A9S A9P A9L A9D A9Y A9G A9M A9A A9Q A9T A9C A9B A9H A9V A9K A9R A9E A9J B1U B1F B1S B1P B1L B1D B1Y B1G B1M B1A B1Q B1T B1C B1B B1H B1V B1K B1R B1E B1J B2G B3B B3H B4B B4H B5C MT 4221: CTO MT 4222: 21G 16G 36U 36F 36S 37U 37F 37S CTO 52G 53G 54G 55G 66U 66F 66S 67U 67F 67S 57G 58G 59G 61G 64J 67U 67F 68U 68F 69U 69F 72M 73M 74M 75M 76G 77G 89J 91C 92C A1J 93U 93F 95U 95F 96U 96F 97U 97F A2G A3G A4M A8C 	41X5582	1
8	 Hard disk drive, 500GB SATA - 7200 rpm, 3 Gb/s, 16MB cache, 3.5" MT 4215: CTO MT 4219: CTO MT 4220: 12G 15G 16G 17G 18G 21G 34U 34F 34S 35U 35F 35S 36U 36F 36S 37U 37F 37S 44C 45H 46B 47H 49C 51C 52C 55A 56A 59A 62A 63A CTO 64G 82U 82F 82S 82L 82D 82Y 82G 82M 82A 82Q 82T 82C 82B 82H 82V 82K 82R 82E 82J 83U 83F 83S 83L 83D 83Y 83G 83M 83A 83Q 83T 83C 83B 83H 83V 83K 83R 83E 83J 84U 84F 84S 84L 84D 84Y 84G 84M 84A 84Q 84T 84C 84B 84H 84V 84K 84R 84E 84J 85U 85F 85S 85L 85D 85Y 85G 85M 85A 85Q 85T 85C 85B 85H 85V 85K 85R 85E 85J 86U 86F 86S 86L 86D 86Y 86G 86M 86A 86Q 86T 86C 86B 86H 86V 86K 86R 86E 86J 87U 87F 87S 87L 87D 87Y 87G 87M 87A 87Q 87T 87C 87B 87H 87V 87K 87R 87E 87J 88U 88F 88S 88L 88D 88Y 88G 88M 88A 88Q 88T 88C 88B 88H 88V 88K 88R 88E 88J 91U 91F 97A 98A 99A A1C A2C A3U A3F A4U A4F A5U A5F A5S A5P A5L A5D A5Y A5G A5M A5A A5Q A5T A5C A5B A5H A5V A5K A5R A5E A5J A6U A6F A6S A6P A6L A6D A6Y A6G A6M A6A A6Q A6T A6C A6B A6H A6V A6K A6R A6E A6J A7U A7F A7S A7P A7L A7D A7Y A7G A7M A7A A7Q A7T A7C A7B A7H A7V A7K A7R A7E A7J A8U A8F A8S A8P A8L A8D A8Y A8G A8M A8A A8Q A8T A8C A8B A8H A8V A8K A8R A8E A8J A9U A9F A9S A9P A9L A9D A9Y A9G A9M A9A A9Q A9T A9C A9B A9H A9V A9K A9R A9E A9J B1U B1F B1S B1P B1L B1D B1Y B1G B1M B1A B1Q B1T B1C B1B B1H B1V B1K B1R B1E B1J B2G B3B B3H B4B B4H B5C MT 4221: CTO 	45K0410	1

Item #	FRUs	FRU #	CRU
	MT 4222: 21G 16G 36U 36F 36S 37U 37F 37S CTO 52G 53G 54G 55G 66U 66F 66S 67U 67F 67S 57G 58G 59G 61G 64J 67U 67F 68U 68F 69U 69F 72M 73M 74M 75M 76G 77G 89J 91C 92C A1J 93U 93F 95U 95F 96U 96F 97U 97F A2G A3G A4M A8C		
8	 Hard disk drive, 1TB SATA - 7200 rpm, 3 Gb/s, 32MB cache, 3.5" MT 4215: CTO MT 4219: CTO MT 4220: 13G CTO MT 4221: CTO MT 4222: CTO 78G A5M 	45C5973	1
8	Hard disk drive, 1TB SATA - 7200 rpm, 3 Gb/s, 32MB cache, 3.5" • MT 4215: CTO • MT 4219: CTO • MT 4220: 13G CTO • MT 4221: CTO • MT 4222: CTO 78G A5M	45K0412	1
8	Hard disk drive, 1TB SATA - 7200 rpm, 3 Gb/s, 32MB cache, 3.5" • MT 4215: CTO • MT 4219: CTO • MT 4220: CTO • MT 4221: CTO • MT 4222: CTO 78G A5M	46R6031	1
8	Hard disk drive, 150GB SATA - 10000 rpm, 3 Gb/s, 16MB cache, 2.5" • MT 4215: CTO • MT 4219: CTO • MT 4220: CTO • MT 4221: CTO • MT 4222: CTO	46R6400	1
8	Hard disk drive, 300GB SATA - 10000 rpm, 3 Gb/s, 16MB cache, 2.5" • MT 4215: CTO • MT 4219: CTO • MT 4220: CTO • MT 4221: CTO • MT 4222: CTO	46R6401	1
8	Hard disk drive, 128GB solid state drive (SSD) - MLC HDD, 1.8" • MT 4215: CTO • MT 4219: CTO • MT 4220: CTO • MT 4221: CTO • MT 4222: CTO	45N7953	1

Item #	FRUs	FRU #	CRU
	Hard disk drive, 128GB solid state drive (SSD) - MLC HDD, 1.8"		
	• MT 4215: CTO		
8	• MT 4219: CTO	45N8203	1
0	• MT 4220: CTO	43110203	'
	• MT 4221: CTO		
	• MT 4222: CTO		
	Hard disk drive, 80GB solid state drive (SSD) - MLC HDD, 2.5"		
	• MT 4215: CTO		
8	• MT 4219: CTO	45K0615	1
· ·	• MT 4220: CTO	10110010	
	• MT 4221: CTO		
	• MT 4222: CTO		
	Hard disk drive, 160GB solid state drive (SSD) - MLC HDD, 2.5"		
	• MT 4215: CTO		
8	• MT 4219: CTO	45K0616	1
J	• MT 4220: CTO	451(0010	
	• MT 4221: CTO		
	• MT 4222: CTO		
	System board, Orkney system board (TPM enabled)		
	• MT 4215: CTO		
	• MT 4219: CTO		
9	 MT 4220: 22M 22J 24J 25J 26M 26J 27J 31J 12G 13G 15G 16G 17G 18G 21G 35U 35F 35S 36U 36F 36S 37U 37F 37S 41A 41Q 41T 41K 41R 42A 42Q 42T 42K 42R 45H 46B 47H 49C 52C 53A 53Q 53K 54A 54Q 54K 55A 56A 57A 58A 58Q 58K 58R 59A 61A 62A 63A CTO 64G 69J 72J 73J 74J 78J 82U 82F 82S 82L 82D 82Y 82G 82M 82A 82Q 82T 82C 82B 82H 82V 82K 82R 82E 82J 83U 83F 83S 83L 83D 83Y 83G 83M 83A 83Q 83T 83C 83B 83H 83V 83K 83R 83E 83J 84U 84F 84S 84L 84D 84Y 84G 84M 84A 84Q 84T 84C 84B 84H 84V 84K 84R 84E 84J 85U 85F 85S 85L 85D 85Y 85G 85M 85A 85Q 85T 85C 85B 85H 85V 85K 85R 85E 85J 86U 86F 86S 86L 86D 86Y 86G 86M 86A 86Q 86T 86C 86B 86H 86V 86K 86R 86E 86J 87U 87F 87S 87L 87D 87Y 87G 87M 87A 87Q 87T 87C 87B 87H 87V 87K 87R 87E 87J 88U 88F 88S 88L 88D 88Y 88G 88M 88A 88Q 88T 88C 88B 88H 88V 88K 88R 88E 88J 91U 91F 92J 93J 94J 95A 96A 97A 98A 99A A1C A2C A3U A3F A4U A4F A5U A5F A5S A5P A5L A5D A5Y A5G A5M A5A A5Q A5T A5C A5B A5H A5V A5K A5R A5E A5J A6U A6F A6S A6P A6L A6D A6Y A6G A6M A6A A6Q A6T A6C A6B A6H A6V A6K A6R A6E A6J A7U A7F A7S A7P A7L A7D A7Y A7G A7M A7A A7Q A7T A7C A7B A7H A7V A7K A7R A7E A7J A8U A8F A8S A8P A8L A8D A8Y A8G A8M A8A A8Q A8T A8C A8B A8H A8V A8K A8R A8E A8J A9U A9F A9S A9P A9L A9D A9Y A9G A9M A9A A9Q A9T A9C A9B A9H A9V A9K A9R A9E A9J B1U B1F B1S B1P B1L B1D B1Y B1G B1M B1A B1Q B1T B1C B1B B1H B1V B1K B1R B1E B1J B2G B3B B3H B4B B4H B5C B6J 	64Y8423	N
	• MT 4221: 13C 13B 13H 13V CTO		
	 MT 4222: 41B 41H 41V 42B 42H 42V 43B 43H 43V 23M 24M 25M 27M 29J 32J 33J 34J 21G 22G 16G 35U 35F 35S 37U 37F 37S 44A 44Q 44T 44K 44R 45A 45Q 45T 45K 45R 47C 46A 46Q 46K 46J 49A 		

Item #	FRUs	FRU #	CRU
	49Q 49K 51A CTO 53G 54G 55G 65U 65F 65S 67U 67F 67S 57G 58G 59G 61G 66U 66F 67U 67F 68U 68F 69U 69F 71J 72M 73M 74M 75M 76G 77G 78G 81U 81F 82J 83J 84J 85J 86J 87J 89J 91C 92C 98J 99J A1J 93U 93F 94U 94F 95U 95F 96U 96F 97U 97F A2G A3G A4M A5M A6J A7J A8C		
9	 System board, Orkney system board (TPM disabled - Russia only) MT 4215: CTO MT 4219: CTO MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G B2G MT 4221: CTO MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 76G 77G 78G A2G A3G 	64Y8424	Ν
10	Rear fan assembly, with fan grill, 0 to 20%, 750 RPM MT 4215: all models MT 4219: all models MT 4220: all models MT 4221: all models MT 4222: all models	45K2324	2
11	 Power supply, 280 Watt power supply (85 plus) (WW,Robust,JP) MT 4215: CTO MT 4219: CTO MT 4220: 22M 22J 24J 25J 26M 26J 31J 12G 13G 15G 16G 17G 18G 21G 34U 34F 34S 35U 35F 35S 36U 36F 36S 37U 37F 37S 41A 41Q 41T 41K 41R 42A 42Q 42T 42K 42R 45H 46B 47H 49C 52C 53A 53Q 53K 54A 54Q 54K 55A 56A 57A 58A 58Q 58K 58R 59A 61A 62A 63A CTO 64G 69J 72J 73J 74J 78J 82U 82F 82S 82L 82D 82Y 82G 82M 82A 82Q 82T 82C 82B 82H 82V 82K 82R 82E 82J 82U 82F 82S 82L 82D 82Y 82G 82M 82A 82Q 82T 82C 82B 82H 82V 82K 82R 82E 82J 83U 82F 82S 82L 82D 83Y 83G 83B 83H 83V 83K 83R 83E 83J 83H 83P 83S 83L 83D 83Y 83G 83M 83A 83Q 83T 83C 83B 83H 83V 83K 83R 83E 83J 84U 84F 84S 84L 84D 84Y 84G 84M 84A 84Q 84T 84C 84B 84H 84V 84K 84R 84E 84J 85U 85F 85S 85L 85D 85Y 85G 85M 85A 85Q 85T 85C 85B 85H 85V 85K 85R 85E 85J 86U 86F 86S 86L 86D 86Y 86G 86M 86A 86Q 86T 86C 86B 86H 86V 86K 86R 86E 86J 87U 87F 87S 87L 87D 87Y 87G 87M 87A 87Q 87T 87C 87B 87H 87V 87K 87R 87E 87J 88U 88F 88S 88L 88D 88Y 88G 88M 88A 88Q 88T 88C 88B 88H 88V 88K 88R 88E 88J 91U 91F 92J 93J 94J 95A 96A 97A 98A 99A A1C A2C A3U A3F A4U A4F A5U A5F A5S A5P A5L A5D A5Y A5G A6P A6L A6D A6Y A6G A6M A6A A6Q A6T A6C A6B A6H A6V A6K A6R A6E A6J A7U A7F A7S A7P A7L A7D A7Y A7G A7M A7A A7Q A7T A7C A7B A7H A7V A7K A7R A7E A7J A8U A8F A8S A8P A8L A8D A8Y A8G A8M A8A A8Q A8T A8C A8B A8H A8V A8K A8R A8E A8J A9U A9F A9S A9P A9L A9D A9Y A9G A9M A9A A9Q A9T A9C A9B A9H A9V A9K A9R A9E A9J B1U B1F B1S B1P B1L B1D B1Y B1G B1M B1A B1Q B1T B1C B1B B1H B1V B1K B1R B1E B1J B2G B3B B3H B4B B4H B5C B6J MT 4221: 13C 13B 13H 13V CTO MT 4222: 41B 41H 41V 42B 42H 42V 43B 43H 43V 23M 24M 25M 27M 28J 29J 32J 33J 34J 21G 16G 35U 35F 35S 37U 37F 37S 44A 44Q 44T 44K 44R 45A 45Q 45T 45K 45R 47C 48C 46A 46Q 46K 46J 49A 49Q 49K 51A CTO 53G 54G 55G 67U 67F 67S 57G 58G 59G 61G 67U 67F 68U 68F 69U 69F 71J 72M 73M 74M 75M 75G 77G 78G 81U 	45J9431	2

It	em #	FRUs	FRU #	CRU
		81F 82J 83J 84J 85J 86J 87J 89J 91C 92C 98J 99J A1J 93U 93F 94U 94F 95U 95F 96U 96F 97U 97F A2G A3G A4M A5M A6J A7J A8C		

Mechanical FRUs

The FRUs listed in the following tables are not illustrated.

FRUs	FRU #	CRU
FRU, front and rear handle assembly, no handle cover		
MT 4215: all models		
MT 4219: all models	45K2301	2
MT 4220: all models	45N2301	2
MT 4221: all models		
MT 4222: all models		
FRU, ODD/FDD cover, retainer and shield assembly		
MT 4215: all models		
MT 4219: all models	45K2302	1
MT 4220: all models	45N23U2	ı
MT 4221: all models		
MT 4222: all models		
FRU, chassis assembly		
MT 4215: all models		
MT 4219: all models	45K2303	N
MT 4220: all models	45N23U3	IN
MT 4221: all models		
MT 4222: all models		
FRU, side panel assembly		
MT 4215: all models		
MT 4219: all models	45K2304	2
MT 4220: all models	45N23U4	2
MT 4221: all models		
MT 4222: all models		
FRU, miscellaneous kit	_	
MT 4215: all models		
MT 4219: all models	45K2307	2
MT 4220: all models	45NZ3U/	2
MT 4221: all models		
MT 4222: all models		

FRUs	FRU #	CRU
FRU, speaker cable_R_9*5_400mm		
MT 4215: all models		
MT 4219: all models	43N9091	2
MT 4220: all models	43119091	۷
MT 4221: all models		
MT 4222: all models		
FRU, EMC shield		
MT 4215: all models		
MT 4219: all models	41N8080	2
MT 4220: all models	7110000	2
MT 4221: all models		
MT 4222: all models		
FRU, cabel-SATA 457mm (RoHS)		
MT 4215: all models		
MT 4219: all models	43N9013	2
MT 4220: all models	40110010	۷
MT 4221: all models		
MT 4222: all models		
FRU, FDD EMI shield		
MT 4215: all models		
MT 4219: all models	41N8078	2
MT 4220: all models	1110070	_
MT 4221: all models		
MT 4222: all models		
FRU, optional HDD bracket assembly, without 4 pin cable		
MT 4215: all models		
MT 4219: all models	41R6106	1
MT 4220: all models		
MT 4221: all models		
MT 4222: all models		
FRU, temperature sense cable (6 pin 460 mm) kit with bracket		
MT 4215: all models		
MT 4219: all models	45J9495	2
MT 4220: all models		
MT 4221: all models		
MT 4222: all models		

FRUs	FRU #	CRU
FRU, Intrusion switch assembly		
MT 4215: all models		
MT 4219: all models	41R6116	2
MT 4220: all models	4160110	2
MT 4221: all models		
MT 4222: all models		
FRU, cable-SATA 250mm (RoHS)		
MT 4215: all models		
MT 4219: all models	43N9012	2
MT 4220: all models	43119012	2
MT 4221: all models		
MT 4222: all models		
FRU, HDD Tray		
MT 4215: all models		
MT 4219: all models	41R6291	1
MT 4220: all models	410291	Į
MT 4221: all models		
MT 4222: all models		
FRU, rear I/O shield, ATX, Q57, FOF, with USB number		
MT 4215: all models		
MT 4219: all models	43N9846	2
MT 4220: all models	43119640	۷
MT 4221: all models		
MT 4222: all models		
FRU, cable-SATA 120mm RoHS used for 2nd HDD		
MT 4215: all models		
MT 4219: all models	41R3328	2
MT 4220: all models	410320	۷
MT 4221: all models		
MT 4222: all models		
FRU, rear USB 2 ports II HP		
MT 4215: all models		
MT 4219: all models	42Y8005	2
MT 4220: all models	4210000	
MT 4221: all models		
MT 4222: all models		

FRUs	FRU #	CRU
FRU, PS2 cable_R_170mm_knock out (with screw)		
MT 4215: all models		
MT 4219: all models	43N9149	2
MT 4220: all models	43119149	2
MT 4221: all models		
MT 4222: all models		
FRU, eSATA cable - FH		
MT 4215: all models		
MT 4219: all models	41R3308	2
MT 4220: all models	410000	2
MT 4221: all models		
MT 4222: all models		
FRU, 1.8 SSD to 3.5 HDD conversion kit with PCB		
MT 4215: all models		
MT 4219: all models	43N9593	2
MT 4220: all models	40119090	۷
MT 4221: all models		
MT 4222: all models		
FRU, SATA cable, 250mm, 2 latching for device, RoHS.		
MT 4215: all models		
MT 4219: all models	54Y9929	2
MT 4220: all models	3419929	۷
MT 4221: all models		
MT 4222: all models		
FRU, Grandsun SATA cable, 120mm, 2 latching		
MT 4215: all models		
MT 4219: all models	54Y9925	2
MT 4220: all models	3419923	2
MT 4221: all models		
MT 4222: all models		
FRU, front panel USB/audio cable assembly with bracket		
MT 4215: all models		
MT 4219: all models	45K2305	2
MT 4220: all models	70112000	۷.
MT 4221: all models		
MT 4222: all models		

Keyboard and Mouse

Keyboard (Lenovo Preferred Pro USB without hub)	FRU #	CRU
US English		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 22M 26M 33M 12G 13G 14G 15G 16G 17G 18G 21G 34U 35U 36U 37U 41A 41Q 41R 42A 42Q 42R 45H 47H 48H 53A 53Q 54A 54Q 55A 56A 57A 58A 58Q 58R 59A 61A 62A 63A CTO 64G 82U 82L 82G 82M 82A 82Q 82H 82R 82E 83U 83L 83G 83M 83A 83Q 83H 83R 83E 84U 84L 84G 84M 84A 84Q 84H 84R 84E 85U 85L 85G 85M 85A 85Q 85H 85R 85E 86U 86L 86G 86M 86A 86Q 86H 86R 86E 87U 87L 87G 87M 87A 87Q 87H 87R 87E 88U 88L 88G 88M 88A 88Q 88H 88R 88E 91U 95A 96A 97A 98A 99A A3U A4U A5U A5L A5G A5M A5A A5Q A5H A5R A5E A6U A6L A6G A6M A6A A6Q A6H A6R A6E A7U A7L A7G A7M A7A A7Q A7H A7R A7E A8U A8L A8G A8M A8A A8Q A8H A8R A8E A9U A9L A9G A9M A9A A9Q A9H A9R A9E B1U B1L B1G B1M B15A B1Q B1H B1R B1E B2G B3H B4H	41A5289	1
• MT 4221: 13H CTO		
MT 4222: 41H 42H 43H 23M 24M 25M 27M 21G 16G 35U 37U 44A 44Q 44R 45A 45Q 45R 46A 46Q 49A 49Q 51A CTO 53G 54G 55G 67U 68U 68F 69U 72M 73M 74M 75M 76G 77G 78G 81U 93U 94U 95U 96U 97		
Arabic		
• MT 4215: 11G CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5290	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
A/F		
• MT 4215: CTO		
• MT 4219: CTO	41A5291	1
• MT 4220: CTO	71/10/201	'
• MT 4221: CTO		
• MT 4222: CTO		
B/F		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5292	1
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Lenovo Preferred Pro USB without hub)	FRU #	CRU
Belgium English		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5293	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Brazilian Portuguese		
• MT 4215: CTO		
• MT 4219: CTO	44.05004	4
• MT 4220: CTO	41A5294	1
• MT 4221: CTO		
• MT 4222: CTO		
Bulgarian		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5295	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Chinese/US		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 46B CTO 82B 82V 83B 83V 84B 84V 85B 85V 86V 87V 88V A5B A5V A6B A6V A7B A7V A8B A8V A9B A9V B1B B1V B3B B4B 	41A5296	1
• MT 4221: 13C 13B 13V CTO		
• MT 4222: CTO		
Czech (ABB)		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5297	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Danish		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5298	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		

Keyboard (Lenovo Preferred Pro USB without hub)	FRU #	CRU
Dutch		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5299	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
French		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5300	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
French Canadian		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 35F 36F 37F CTO 65F 82F 83F 84F 85F 86F 87F 88F 91F A3F A4F A5F A6F A7F A8F A9F B1F 	41A5301	1
• MT 4221: CTO		
• MT 4222: 35F 37F CTO 67F 68F 69F 81F 93F 94F 95F 96F 97F		
French Canadian		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 35F 36F 37F CTO 65F 82F 83F 84F 85F 86F 87F 88F 91F A3F A4F A5F A6F A7F A8F A9F B1F 	41A5302	1
• MT 4221: CTO		
• MT 4222: 35F 37F CTO 67F 68F 69F 81F 93F 94F 95F 96F 97F		
German		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5303	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G		
Greek		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5304	1
• MT 4221: CTO		
• MT 4222: 35F 37F CTO 67F 68F 69F 81F		

Keyboard (Lenovo Preferred Pro USB without hub)	FRU #	CRU
Greek/US		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5305	1
• MT 4221: CTO		
• MT 4222: 35F 37F CTO 67F 68F 69F 81F		
Hebrew		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5306	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Hungarian		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5307	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Iceland		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5308	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Italy		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5309	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Japanese		
• MT 4215: CTO		
• MT 4219: CTO		
• MT 4220: 22J 24J 25J 26J 31J CTO 69J 72J 73J 74J 78J 82J 83J 84J 85J 86J 87J 88J 92J 93J 94J A5J A6J A7J A8J A9J B1J B6J	41A5310	1
• MT 4221: CTO		
• MT 4222: 29J 32J 33J 34J 46J CTO 71J 82J 83J 84J 85J 86J 87J 89J 98J 99J A1J A6J A7J		

Keyboard (Lenovo Preferred Pro USB without hub)	FRU #	CRU
Korean		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 41K 42K 53K 54K 58K CTO 82K 83K 84K 85K 86K 87K 88K A5K A6K A7K A8K A9K B1K 	41A5311	1
• MT 4221: CTO		
• MT 4222: 46K 49K CTO		
LA Spanish		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 35S 36S 37S CTO 82S 82D 82Y 83S 83D 83Y 84S 84D 84Y 85S 85D 85Y 86S 86D 86Y 87S 87D 87Y 88S 88D 88Y A5S A5D A5Y A6S A6DA6Y A7S A7D A7Y A8S A8D A8Y A9S A9D A9Y B1S B1D B1Y 	41A5312	1
• MT 4221: CTO		
• MT 4222: 35S 37S		
Norwegian		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5313	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Polish		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5314	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Portuguese		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5315	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Romanian		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5317	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		

Keyboard (Lenovo Preferred Pro USB without hub)	FRU #	CRU
Romanian		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5316	1
• MT 4221: CTO		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Russian/Cyrillic		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5318	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Serbian/Cyrillic		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	41A5319	1
• MT 4221: CTO		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Slovak		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5320	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Spanish		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5321	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Swedish/Finnish		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5322	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		

Keyboard (Lenovo Preferred Pro USB without hub)	FRU #	CRU
SF/G		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5323	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Thailand		
• MT 4215: CTO		
• MT 4219: CTO	41 05004	4
MT 4220: 41T 42T CTO 82T 83T 84T 85T 86T 87T 88T A5T A6T A7T A8T A9TB1T	41A5324	1
• MT 4221: CTO		
• MT 4222: 44T 45T CTO		
Turkish		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5325	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Turkish		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5326	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
UK English		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5327	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		

Keyboard (Lenovo Preferred Pro USB without hub)	FRU #	CRU
US European		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5328	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Slovenian		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41A5329	1
• MT 4221: CTO		
• MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		

Keyboard (Preferred Pro Full Size PS/2)	FRU #	CRU
PS/2US English		
• MT 4215: CTO		
• MT 4219: CTO	41A5039	1
• MT 4220: CTO	41/2009	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Arabic		
• MT 4215: CTO		
• MT 4219: CTO	41A5040	1
• MT 4220: CTO	41A3040	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2A/F		
• MT 4215: CTO		
• MT 4219: CTO	41A5041	1
• MT 4220: CTO	41/2041	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2B/F		
• MT 4215: CTO		
• MT 4219: CTO	41A5042	1
• MT 4220: CTO	41/2042	'
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Preferred Pro Full Size PS/2)	FRU #	CRU
PS/2Belgium English		
• MT 4215: CTO		
• MT 4219: CTO	41A5043	1
• MT 4220: CTO	41/3043	1
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Brazilian Portuguese		
• MT 4215: CTO		
• MT 4219: CTO	41A5044	1
• MT 4220: CTO	41/3044	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Bulgarian		
• MT 4215: CTO		
• MT 4219: CTO	41A5045	1
• MT 4220: CTO	41/3043	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Chinese/US		
• MT 4215: CTO		
• MT 4219: CTO	41A5046	1
• MT 4220: CTO	41710040	
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Czech (ABB)		
• MT 4215: CTO		
• MT 4219: CTO	41A5047	1
• MT 4220: CTO	41/3047	•
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Danish		
• MT 4215: CTO		
• MT 4219: CTO	41A5048	1
• MT 4220: CTO	71/3040	ı
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Preferred Pro Full Size PS/2)	FRU #	CRU
PS/2Dutch		
• MT 4215: CTO		
• MT 4219: CTO	41A5049	1
• MT 4220: CTO	41A3049	ı
• MT 4221: CTO		
• MT 4222: CTO		
PS/2French		
• MT 4215: CTO		
• MT 4219: CTO	41A5050	1
• MT 4220: CTO	41A3030	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2French Canadian		
• MT 4215: CTO		
• MT 4219: CTO	41A5051	1
• MT 4220: CTO	41A3031	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2French Canadian		
• MT 4215: CTO		
• MT 4219: CTO	41A5052	1
• MT 4220: CTO	41A3032	1
• MT 4221: CTO		
• MT 4222: CTO		
PS/2German		
• MT 4215: CTO		
• MT 4219: CTO	41A5053	1
• MT 4220: CTO	41/3000	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Greek		
• MT 4215: CTO		
• MT 4219: CTO	41A5054	1
• MT 4220: CTO	71/3034	'
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Preferred Pro Full Size PS/2)	FRU #	CRU
PS/2Greek/US		
• MT 4215: CTO		
• MT 4219: CTO	41A5080	1
• MT 4220: CTO	41A3060	ļ.
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Hebrew		
• MT 4215: CTO		
• MT 4219: CTO	41A5055	1
• MT 4220: CTO	41A3033	1
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Hungarian		
• MT 4215: CTO		
• MT 4219: CTO	41A5056	1
• MT 4220: CTO	41A3030	,
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Iceland		
• MT 4215: CTO		
• MT 4219: CTO	41A5057	1
• MT 4220: CTO	41/3037	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Italy		
• MT 4215: CTO		
• MT 4219: CTO	41A5058	1
• MT 4220: CTO	41/3030	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Japanese		
• MT 4215: CTO		
• MT 4219: CTO	41A5059	1
• MT 4220: CTO	4173033	'
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Preferred Pro Full Size PS/2)	FRU #	CRU
PS/2Korean		
• MT 4215: CTO		
• MT 4219: CTO	41A5060	1
• MT 4220: CTO	41A3000	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2LA Spanish		
• MT 4215: CTO		
• MT 4219: CTO	41A5061	1
• MT 4220: CTO	41A3001	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Norwegian		
• MT 4215: CTO		
• MT 4219: CTO	41A5062	1
• MT 4220: CTO	41A3062	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Polish		
• MT 4215: CTO		
• MT 4219: CTO	41A5063	1
• MT 4220: CTO	41A3003	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Portuguese		
• MT 4215: CTO		
• MT 4219: CTO	41A5064	1
• MT 4220: CTO	41A3004	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Romanian		
• MT 4215: CTO		
• MT 4219: CTO	/1 A E O G E	4
• MT 4220: CTO	41A5065	1
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Preferred Pro Full Size PS/2)	FRU #	CRU
PS/2Russian/Cyrillic		
• MT 4215: CTO		
• MT 4219: CTO	41A5066	1
• MT 4220: CTO	41A3000	1
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Serbian/Cyrillic		
• MT 4215: CTO		
• MT 4219: CTO	41A5067	1
• MT 4220: CTO	41A3007	1
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Slovak		
• MT 4215: CTO		
• MT 4219: CTO	41A5068	1
• MT 4220: CTO	41A3000	1
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Spanish		
• MT 4215: CTO		
• MT 4219: CTO	41A5069	1
• MT 4220: CTO	41A3009	,
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Swedish/Finnish		
• MT 4215: CTO		
• MT 4219: CTO	41A5070	1
• MT 4220: CTO	41/3070	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2SF/G		
• MT 4215: CTO		
• MT 4219: CTO	41A5071	1
• MT 4220: CTO	41/100/1	'
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Preferred Pro Full Size PS/2)	FRU #	CRU
PS/2Thailand		
• MT 4215: CTO		
• MT 4219: CTO	41A5072	1
• MT 4220: CTO	41A3072	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Turkish		
• MT 4215: CTO		
• MT 4219: CTO	41A5073	1
• MT 4220: CTO	41/3073	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Turkish		
• MT 4215: CTO		
• MT 4219: CTO	41A5074	1
• MT 4220: CTO	41/3074	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2UK English		
• MT 4215: CTO		
• MT 4219: CTO	41A5075	1
• MT 4220: CTO	41/3073	'
• MT 4221: CTO		
• MT 4222: CTO		
PS/2US European		
• MT 4215: CTO		
• MT 4219: CTO	41A5076	1
• MT 4220: CTO	417.0070	
• MT 4221: CTO		
• MT 4222: CTO		
PS/2Slovenian		
• MT 4215: CTO		
• MT 4219: CTO	41A5077	1
• MT 4220: CTO	117.0077	.
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Enhanced Performance)	FRU #	CRU
EnhancedUS English		
• MT 4215: CTO		
• MT 4219: CTO	41A4961	4
• MT 4220: CTO	41A4901	1
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedArabic		
• MT 4215: CTO		
• MT 4219: CTO	41A4962	1
• MT 4220: CTO	41A4902	Į.
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedA/F		
• MT 4215: CTO		
• MT 4219: CTO	41A4963	1
• MT 4220: CTO	4184303	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedB/F		
• MT 4215: CTO		
• MT 4219: CTO	41A4964	1
• MT 4220: CTO	41/4504	,
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedBelgium English		
• MT 4215: CTO		
• MT 4219: CTO	41A4965	1
• MT 4220: CTO	4174303	1
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedBrazilian Portuguese		
• MT 4215: CTO		
• MT 4219: CTO	41A4966	1
• MT 4220: CTO	4174300	1
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Enhanced Performance)	FRU #	CRU
EnhancedBulgarian		
• MT 4215: CTO		
• MT 4219: CTO	41A4967	1
• MT 4220: CTO	41A4901	ļ
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedChinese/US		
• MT 4215: CTO		
• MT 4219: CTO	41A4968	1
• MT 4220: CTO	41A4900	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedCzech (ABB)		
• MT 4215: CTO		
• MT 4219: CTO	44.4.4000	4
• MT 4220: CTO	41A4969	1
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedDanish		
• MT 4215: CTO		
• MT 4219: CTO	41A4970	1
• MT 4220: CTO	41A4970	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedDutch		
• MT 4215: CTO		
• MT 4219: CTO	41A4971	1
• MT 4220: CTO	41A4911	1
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedFrench		
• MT 4215: CTO		
• MT 4219: CTO	41A4972	1
• MT 4220: CTO	4174316	'
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Enhanced Performance)	FRU #	CRU
EnhancedFrench Canadian		
• MT 4215: CTO		
• MT 4219: CTO	41A4973	1
• MT 4220: CTO	41A4973	ı ı
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedFrench Canadian		
• MT 4215: CTO		
• MT 4219: CTO	41A4974	1
• MT 4220: CTO	41A4974	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedGerman		
• MT 4215: CTO		
• MT 4219: CTO	41 4 4075	4
• MT 4220: CTO	41A4975	1
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedGreek		
• MT 4215: CTO		
• MT 4219: CTO	41A4976	1
• MT 4220: CTO	4184970	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedGreek/US		
• MT 4215: CTO		
• MT 4219: CTO	41A5078	1
• MT 4220: CTO	41A3076	1
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedHebrew		
• MT 4215: CTO		
• MT 4219: CTO	41A4977	1
• MT 4220: CTO	41/43//	1
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Enhanced Performance)	FRU #	CRU
EnhancedHungarian		
• MT 4215: CTO		
• MT 4219: CTO	41A4978	1
• MT 4220: CTO	41A4970	Į
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedIceland		
• MT 4215: CTO		
• MT 4219: CTO	41A4979	1
• MT 4220: CTO	4184373	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedItaly		
• MT 4215: CTO		
• MT 4219: CTO	41A4980	1
• MT 4220: CTO	41A4900	ļ
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedJapanese		
• MT 4215: CTO		
• MT 4219: CTO	41A4981	1
• MT 4220: CTO	41/4301	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedKorean		
• MT 4215: CTO		
• MT 4219: CTO	41A4982	1
• MT 4220: CTO	41714302	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedLA Spanish		
• MT 4215: CTO		
• MT 4219: CTO	41A4983	1
• MT 4220: CTO	7 1A+300	'
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Enhanced Performance)	FRU #	CRU
EnhancedNorwegian		
• MT 4215: CTO		
• MT 4219: CTO	41A4984	1
• MT 4220: CTO	4184304	1
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedPolish		
• MT 4215: CTO		
• MT 4219: CTO	41A4985	1
• MT 4220: CTO	41A4303	1
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedPortuguese		
• MT 4215: CTO		
• MT 4219: CTO	41A4986	1
• MT 4220: CTO	41A4900	Į.
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedRomanian		
• MT 4215: CTO		
• MT 4219: CTO	41A4987	1
• MT 4220: CTO	41A4901	ı
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedRussian/Cyrillic		
• MT 4215: CTO		
• MT 4219: CTO	41A4988	1
• MT 4220: CTO	4174300	1
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedSerbian/Cyrillic		
• MT 4215: CTO		
• MT 4219: CTO	41A4989	1
• MT 4220: CTO	4174303	1
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Enhanced Performance)	FRU #	CRU
EnhancedSlovak		
• MT 4215: CTO		
• MT 4219: CTO	41A4990	1
• MT 4220: CTO	41/4990	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedSpanish		
• MT 4215: CTO		
• MT 4219: CTO	41A4991	1
• MT 4220: CTO	4174991	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedSwedish/Finnish		
• MT 4215: CTO		
• MT 4219: CTO	41A4992	1
• MT 4220: CTO	41/4332	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedSF/G		
• MT 4215: CTO		
• MT 4219: CTO	41A4993	1
• MT 4220: CTO	41/4333	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedThailand		
• MT 4215: CTO		
• MT 4219: CTO	41A4994	1
• MT 4220: CTO	417(4554	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedTurkish		
• MT 4215: CTO		
• MT 4219: CTO	41A4995	1
• MT 4220: CTO	71717333	'
• MT 4221: CTO		
• MT 4222: CTO		

Keyboard (Enhanced Performance)	FRU #	CRU
EnhancedTurkish		
• MT 4215: CTO		
• MT 4219: CTO	41A4996	1
• MT 4220: CTO	4184330	1
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedUK English		
• MT 4215: CTO		
• MT 4219: CTO	41A4997	1
• MT 4220: CTO	41/4331	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedUS European		
• MT 4215: CTO		
• MT 4219: CTO	41A4998	1
• MT 4220: CTO	+1A4330	'
• MT 4221: CTO		
• MT 4222: CTO		
EnhancedSlovenian		
• MT 4215: CTO		
• MT 4219: CTO	41A4999	1
• MT 4220: CTO	+174333	'
• MT 4221: CTO		
• MT 4222: CTO		

Mice	FRU #	CRU
Optical wheel mouse (400 DPI), USB - red wheel		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 22M 22J 24J 25J 26M 26J 31J 12G 13G 15G 16G 17G 18G 21G 35U 35F 35S 36U 36F 36S 37U 37F 37S 41A 41Q 41T 41K 41R 42A 42Q 42T 42K 42R 45H 46B 47H 48H 49C 52C 53A 53Q 53K 54A 54Q 54K 55A 56A 57A 58A 58Q 58K 58R 59A 61A 62A 63A CTO 64G 69J 72J 73J 74J 76J 78J 82U 82F 82S 82L 82D 82Y 82G 82M 82A 82Q 82T 82C 82B 82H 82V 82K 82R 82E 82J 83U 83F 83S 83L 83D 83Y 83G 83M 83A 83Q 83T 83C 83B 83H 83V 83K 83R 83E 83J 84U 84F 84S 84L 84D 84Y 84G 84M 84A 84Q 84T 84C 84B 84H 84V 84K 84R 84E 84J 85U 85F 85S 85L 85D 85Y 85G 85M 85A 85Q 85T 85C 85B 85H 85V 85K 85R 85E 85J 86U 86F 86S 86L 86D 86Y 86G 86M 86A 86Q 86T 86C 86B 86H 86V 86K 86R 86E 86J 87U 87F 87S 87L 87D 87Y 87G 87M 87A 87Q 87T 87C 87B 87H 87V 87K 87R 87E 87J 88U 88F 88S 88L 88D 88Y 88G 88M 88A 88Q 88T 88C 88B 88H 88V 88K 88R 88E 88J 91U 91F 92J 93J 94J 95A 96A 97A 98A 99A A1C A2C A3U A3F A4U A4F A5U A5F A5S A5P A5L A5D A5Y A5G A5M A5A A5Q A5T A5C A5B A5H A5V A5K A5R A5E A5J A6U A6F A6S A6P A6L A6D A6Y A6G A6M A6A A6Q A6T A6C A6B A6H A6V A6K A6R A6E A6J A7U A7F A7S A7P A7L A7D A7Y A7G A7M A7A A7Q A7T A7C A7B A7H A7V A7K A7R A7E A7J A8U A8F A8S A8P A8L A8D A8Y A8G A8M A8A A8Q A8T A8C A8B A8H A8V A8K A8R A8E A8J A9U A9F A9S A9P A9L A9D A9Y A9G A9M A9A A9Q A9T A9C A9B A9H A9V A9K A9R A9E A9J B1U B1F 	41U3013	1

Mice	FRU #	CRU
B1S B1P B1L B1D B1Y B1G B1M B1A B1Q B1T B1C B1B B1H B1V B1K B1R B1E B1J B2G B3B B3H B4B B4H B5C B6J		
• MT 4221: 13C 14A 13B 13H 13V CTO		
 MT 4222: 41B 41H 41V 42B 42H 42V 43B 43H 43V 23M 24M 25M 27M 29J 32J 33J 34J 21G 16G 35U 35F 35S 37U 37F 37S 44A 44Q 44T 44K 44R 45A 45Q 45T 45K 45R 47C 46A 46Q 46K 46J 49A 49Q 49K 51A CTO 53G 54G 55G 67U 67F 67S 57G 58G 59G 61G 67U 67F 68U 68F 69U 69F 71J 72M 73M 74M 75M 76G 77G 78G 81U 81F 82J 83J 84J 85J 86J 87J 89J 91C 92C 98J 99J A1J 93U 93F 94U 94F 95U 95F 96U 96F 97U 97F A2G A3G A4M A5M A6J A7J A8C 		
Optical wheel mouse (400 DPI), USB - red wheel		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 22M 22J 24J 25J 26M 26J 31J 12G 13G 15G 16G 17G 18G 21G 35U 35F 35S 36U 36F 36S 37U 37F 37S 41A 41Q 41T 41K 41R 42A 42Q 42T 42K 42R 45H 46B 47H 48H 49C 52C 53A 53Q 53K 54A 54Q 54K 55A 56A 57A 58A 58Q 58K 58R 59A 61A 62A 63A CTO 64G 69J 72J 73J 74J 76J 78J 82U 82F 82S 82L 82D 82Y 82G 82M 82A 82Q 82T 82C 82B 82H 82V 82K 82R 82E 82J 83U 83F 83S 83L 83D 83Y 83G 83M 83A 83Q 83T 83C 83B 83H 83V 83K 83R 83E 83J 84U 84F 84S 84L 84D 84Y 84G 84M 84A 84Q 84T 84C 84B 84H 84V 84K 84R 84E 84J 85U 85F 85S 85L 85D 85Y 85G 85M 85A 85Q 85T 85C 85B 85H 85V 85K 85R 85E 85J 86U 86F 86S 86L 86D 86Y 86G 86M 86A 86Q 86T 86C 86B 86H 86V 86K 86R 86E 86J 87U 87F 87S 87L 87D 87Y 87G 87M 87A 87Q 87T 87C 87B 87H 87V 87K 87R 87E 87J 88U 88F 88S 88L 88D 88Y 88G 88M 88A 88Q 88T 88C 88B 88H 88V 88K 88R 88E 88J 91U 91F 92J 93J 94J 95A 96A 97A 98A 99A A1C A2C A3U A3F A4U A4F A5U A5F A5S A5P A5L A5D A5Y A5G A5M A5A A5Q A5T A5C A5B A5H A5V A5K A5R A5E A5J A6U A6F A6S A6P A6L A6D A6Y A6G A6M A6A A6Q A6T A6C A6B A6H A6V A6K A6R A6E A6J A7U A7F A7S A7P A7L A7D A7Y A7G A7M A7A A7Q A7T A7C A7B A7H A7V A7K A7R A7E A7J A8U A8F A8S A8P A8L A8D A8Y A8G A8M A8A A8Q A8T A8C A8B A8H A8V A8K A8R A8E A8J A9U A9F A9S A9P A9L A9D A9Y A9G A9M A9A A9Q A9T A9C A9B A9H A9V A9K A9R A9E A9J B1U B1F B1S B1P B1L B1D B1Y B1G B1M B1A B1Q B1T B1C B1B B1H B1V B1K B1R B1E B1J B2G B3B B3H B4B B4H B5C B6J 	41U3030	1
 MT 4221: 13C 14A 13B 13H 13V CTO MT 4222: 41B 41H 41V 42B 42H 42V 43B 43H 43V 23M 24M 25M 27M 29J 32J 33J 34J 21G 16G 35U 35F 35S 37U 37F 37S 44A 44Q 44T 44K 44R 45A 45Q 45T 45K 45R 47C 46A 46Q 46K 46J 49A 49Q 49K 51A CTO 53G 54G 55G 67U 67F 67S 57G 58G 59G 61G 67U 67F 68U 68F 69U 69F 71J 72M 73M 74M 75M 76G 77G 78G 81U 81F 82J 83J 84J 85J 86J 87J 89J 91C 92C 98J 99J A1J 93U 93F 94U 94F 95U 95F 96U 96F 97U 97F A2G A3G A4M A5M A6J A7J A8C 		

Adapters and miscellaneous FRUs

Adapters and miscellaneous FRUs	FRU #	CRU
256MB NVIDIA NVS295 (2xDP)	46R2782	
• MT 4215: CTO		
• MT 4219: CTO		1
• MT 4220: 25J 45H 53A 53Q 53K 59A 61A CTO 73J 95A		ı
• MT 4221: 13C 13B 13H 13V CTO		
• MT 4222: 24M 51A CTO 73M		
512MB NVIDIA NVS450 (4xDP)	64Y9895	1
• MT 4215: CTO	0110000	,

Adapters and miscellaneous FRUs	FRU #	CRU
• MT 4219: CTO		
• MT 4220: 24J CTO 72J		
• MT 4221: CTO		
• MT 4222: 32J CTO		
256MB NVIDIA FX380 (2xDVI)		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 22M 22J 13G 35U 35F 35S 46B 49C 54A 54Q 54K 57A 58A 58Q 58K 58R 62A CTO 69J 97A A1C A2C A3U A3F 	71Y6863	1
• MT 4221: CTO		
 MT 4222: 23M 29J 13G 35U 35F 35S 45A 45Q 45T 45K 45R 47C 48C CTO 66U 66F 66S 71J 74M 91C 92C 93U 93F A3G 		
512MB NVIDIA FX580 (DVI + DP + DP)		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 26J 18G 36U 36F 36S 42A 42Q 42T 42K 42R 47H 52C 56A 63A CTO 74J 82U 82F 82S 82L 82D 82Y 82G 82M 82A 82Q 82T 82C 82B 82H 82V 82K 82R 82E 82J 85U 85F 85S 85L 85D 85Y 85G 85M 85A 85Q 85T 85C 85B 85H 85V 85K 85R 85E 85J 96A 	46R2786	1
• MT 4221: CTO		
 MT 4222: 43B 43H 43V 25M 34J 37U 37F 37S 44A 44Q 44T 44K 44R CTO 67U 67F 75M 		
768MB NVIDIA FX1800 (2xDP, 1xDVI)		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 31J 14G 15G 16G 17G 37U 37F 37S 41A 41Q 41T 41K 41R 48H CTO 78J 81J 83U 83F 83S 83L 83D 83Y 83G 83M 83A 83Q 83T 83C 83B 83H 83V 83K 83R 83E 83J 84U 84F 84S 84L 84D 84Y 84G 84M 84A 84Q 84T 84C 84B 84H 84V 84K 84R 84E 84J 86U 86F 86S 86L 86D 86Y 86G 86M 86A 86Q 86T 86C 86B 86H 86V 86K 86R 86E 86J 87U 87F 87S 87L 87D 87Y 87G 87M 87A 87Q 87T 87C 87B 87H 87V 87K 87R 87E 87J 92J 94J 98A 99A 	46R2788	1
• MT 4221: CTO		
 MT 4222: 41B 41H 41V 42B 42H 42V 14G 15G 46A 46Q 46K 46J CTO 67U 67F 67S 64J 68U 68F 82J 83J 		
DVI to VGA Dongle		
• MT 4215: CTO		
• MT 4219: CTO	45C7816	2
• MT 4220: CTO	400/610	2
• MT 4221: CTO		
• MT 4222: CTO		

Adapters and miscellaneous FRUs	FRU #	CRU
DVI to VGA Dongle	_	
• MT 4215: CTO		
• MT 4219: CTO	40Y7611	2
• MT 4220: CTO	4017611	۷
• MT 4221: CTO		
• MT 4222: CTO		
DP to DVI dongle		
• MT 4215: CTO		
• MT 4219: CTO	43N9160	2
• MT 4220: CTO	43119100	2
• MT 4221: CTO		
• MT 4222: CTO		
DP to VGA dongle		
• MT 4215: CTO		
• MT 4219: CTO	45J9524	2
• MT 4220: CTO	4509524	۷
• MT 4221: CTO		
• MT 4222: CTO		
IEEE 1394 firewire adapter		
• MT 4215: CTO		
• MT 4219: CTO	41D2781	1
• MT 4220: CTO	4102101	ı
• MT 4221: CTO		
• MT 4222: CTO		
1GB NVIDIA Quadro 2000 (1 x DVI-I, 2 x DP)		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: CTO A5U A5F A5S A5P A5L A5D A5Y A5G A5M A5A A5Q A5T A5C A5B A5H A5V A5K A5R A5E A5J A7U A7F A7S A7P A7L A7D A7Y A7G A7M A7A A7Q A7T A7C A7B A7H A7V A7K A7R A7E A7J A9U A9F A9S A9P A9L A9D A9Y A9G A9M A9A A9Q A9T A9C A9B A9H A9V A9K A9R A9E A9J B1U B1F B1S B1P B1L B1D B1Y B1G B1M B1A B1Q B1T B1C B1B B1H B1V B1K B1R B1E B1J B2G	89Y8856	1
• MT 4221: CTO		
MT 4222: CTO 98J A1J 97U 97F A5M		
1GB NVIDIA Quadro 600 (1 x DVI-I, 1 x DP)		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: CTO A4U A4F A6U A6F A6S A6P A6L A6D A6Y A6G A6M A6A A6Q A6T A6C A6B A6H A6V A6K A6R A6E A6J A8U A8F A8S A8P A8L A8D A8Y A8G A8M A8A A8Q A8T A8C A8B A8H A8V A8K A8R A8E A8J B3B B3H B4B B4H B5C B6J	03T8009	1
• MT 4221: CTO		
MT 4222: CTO 98J A1J 95U 95F 96U 96F A2G A4M A8C		

Power Cords

Power Cordsprimary	FRU #	CRU
Line Cord - US		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 35U 35F 35S 36U 36F 36S 37U 37F 37S 41A 42A 53A 54A 55A 56A 57A 58A 59A 61A 62A 63A CTO 82U 82F 82S 82L 82D 82A 82T 83U 83F 83S 83L 83D 83A 83T 84U 84F 84S 84L 84D 84A 84T 85U 85F 85S 85L 85D 85A 85T 86U 86F 86S 86L 86D 86A 86T 87U 87F 87S 87L 87D 87A 87T 88U 88F 88S 88L 88D 88A 88T 91U 91F 95A 96A 97A 98A 99A A3U A3F A4U A4F A5U A5F A5S A5L A5D A5A A5T A6U A6F A6S A6L A6D A6A A6T A7U A7F A7S A7L A7D A7A A7T A8U A8F A8S A8L A8D A8A A8T A9U A9F A9S A9L A9D A9A A9T B1U B1F B1S B1L B1D B1A B1T	41R3184	1
• MT 4221: CTO		
MT 4222: 35U 35F 35S 37U 37F 37S 44A 44Q 45A 45Q 46A 49A 51A CTO 67U 67F 67S 65U 65F 7U 67F 68U 68F 68F 69U 81U 81F 93U 93F 94U 94F 95U 95F 96U 96F 97U 97F		
Line Cord - China		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 49C 51C 52C CTO 82C 83C 84C 85C 86C 87C 88C A1C A2C A5C A6C A7C A8C A9C B1C B5C	41R3256	1
• MT 4221: 13C CTO		
• MT 4222: 47CCTO 91C 92C A8C		
Line Cord - Japan		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 22J 24J 25J 26J 31J CTO 69J 71J 72J 73J 74J 78J 82J 83J 84J 85J 86J 87J 88J 92J 93J 94J A5J A6J A7J A8J A9J B1J B6J	41R3248	1
• MT 4221: CTO		
MT 4222: 29J 31J 32J 33J 34J 46J CTO 63J 64J 71J 82J 83J 84J 85J 86J 87J 89J 98J 99J A1J A6J A7J		
Line Cord - Brazil		
• MT 4215: CTO		
• MT 4219: CTO	41R3270	1
MT 4220: CTO A5P A6P A7P AP8 A9P B1P	11110270	
• MT 4221: CTO		
• MT 4222: CTO		
Line Cord - LA High Volt (APU)		
• MT 4215: CTO		
• MT 4219: CTO	44.004.70	د ا
MT 4220: CTO 82Y 82L 83Y 83L 84Y 84L 85Y 85L 86Y 86L 87Y 87L 88L A5Y A5L A6Y A6L A7Y A7L A8Y A8L A9Y A9L B1Y B1L	41R3176	1
• MT 4221: CTO		
• MT 4222: CTO		

Power Cordsprimary	FRU #	CRU
Line Cord-Australia / New Zealand		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 22M 26M 33M CTO 82M 83M 84M 85M 86M 87M 88M A5M A6M A7M A8M A9M B1M	41R3196	1
• MT 4221: CTO		
MT 4222: 23M 24M 25M 27M CTO 72M 73M 74M 75M A4M A5M		
Line Cord - Korea		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 41K 41R 42K 42R 53K 54K 58K 58R CTO 82K 82R 83K 83R 84K 84R 85K 85R 86K 86R 87K 87R 88K 88R A5K A5R A6K A6R A7K A7R A8K A8R A9K A9R B1K B1R	41R3260	1
• MT 4221: CTO		
• MT 4222: 44K 44R 45K 45R 46K 49K CTO		
Line Cord - Hong Kong, UK, Ireland, Singapore, Malaysia, Brunei, Hong Kong		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G 45H 46B 47H 46B 53A 54A 55A 56A 57A 58A 59A 61A 62A 63A CTO 82B 82H 82G 82A 83B 83H 83G 83A 84B 84H 84G 84A 85B 85H 85G 85A 86B 86H 86G 86A 87B 87H 87G 87A 88B 88H 88G 88A 95A 96A 97A 98A 99A A5G A5A A6G A6A A7G A7A A8G A8A A9G A9A B1G B1A B2G B3B B3H B4B B4H 	41R3224	1
• MT 4221: 11G 13B 13H CTO		
• MT 4222: 41B 41H 42B 42H 43B 43H 46A 49A 51A CTO A2G A3G		
Line Cord - Taiwan		
• MT 4215: CTO		
• MT 4219: CTO	41R3278	1
MT 4220: CTO 82V 83V 84V 85V 86V 87V 88V A5V A6V A7V A8V A9V B1V	4103276	'
• MT 4221: CTO		
• MT 4222: 41V 42V 43V CTO		
Line Cord - Italy		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G 35S 36S 37S CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41R3232	1
• MT 4221: CTO		
MT 4222: 21G 16G 35S 36S 37S CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		

Power Cordsprimary	FRU #	CRU
Line Cord - A models		
• MT 4215: CTO		
• MT 4219: CTO		
• MT 4220: 53A 54A 55A 56A 57A 58A 59A 61A 62A 63A CTO 82A 83A 84A 85A 86A 87A 88A 95A 96A 97A 98A 99A A5A A6A A7A A8A A9A B1A	41R3208	1
• MT 4221: CTO		
• MT 4222: 46A 49A 51A CTO		
Line Cord - Denmark		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G 35S 36S 37S CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41R3212	1
• MT 4221: CTO		
MT 4222: 21G 16G 35S 36S 37S CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Line Cord - Switzerland		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G 35S 36S 37S CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41R3228	1
• MT 4221: CTO		
MT 4222: 21G 16G 35S 36S 37S CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Line Cord - Israel		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G 35S 36S 37S CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41R3236	1
• MT 4221: CTO		
MT 4222: 21G 22G 15G 16G CTO 52G 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G 79G A2G A3G		
Line Cord - South Africa		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 22M 26M 33M 12G 13G 15G 16G 17G 18G 21G 53A 54A 55A 56A 57A 58A 59A 61A 62A 63A CTO 64G 82M 82G 83M 83G 84M 84G 85M 85G 86M 86G 87M 87G 88M 88G 95A 96A 97A 98A 99A A5M A5G A5A A6M A6G A6A A7M A7G A7A A8M A8G A8A A9M A9G A9A B1M B1G B1A B2G	41R3220	1
• MT 4221: CTO		
MT 4222: 23M 24M 25M 27M 21G 16G 46A 49A 51A CTO 53G 54G 55G 57G 58G 59G 61G 72M 73M 74M 75M 76G 77G 78G A2G A3G A4M A5M		

Power Cordsprimary	FRU #	CRU
Line Cord - India		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 41Q 42Q 53Q 54Q CTO 82Q 83Q 84Q 85Q 86Q 87Q 88Q A5Q A6Q A7Q A8Q A9Q B1Q	41R3341	1
• MT 4221: CTO		
• MT 4222: 46Q CTO		
Line Cord - Thailand		
• MT 4215: CTO		
• MT 4219: CTO	43N9029	1
MT 4220: 41T 42T CTO 82T 83T 84T 85T 86T 87T 88T A5T A6T A7T A8T A9T B1T	43119029	ļ
• MT 4221: CTO		
• MT 4222: 44T 45T CTO		

Power Cordssecondary	FRU #	CRU
Line Cord - US		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 35U 35F 35S 36U 36F 36S 37U 37F 37S 41A 42A 53A 54A 55A 56A 57A 58A 59A 61A 62A 63A CTO 82U 82F 82S 82L 82D 82A 82T 83U 83F 83S 83L 83D 83A 83T 84U 84F 84S 84L 84D 84A 84T 85U 85F 85S 85L 85D 85A 85T 86U 86F 86S 86L 86D 86A 86T 87U 87F 87S 87L 87D 87A 87T 88U 88F 88S 88L 88D 88A 88T 91U 91F 95A 96A 97A 98A 99A A3U A3F A4U A4F A5U A5F A5S A5L A5D A5A A5T A6U A6F A6S A6L A6D A6A A6T A7U A7F A7S A7L A7D A7A A7T A8U A8F A8S A8L A8D A8A A8T A9U A9F A9S A9L A9D A9A A9T B1U B1F B1S B1L B1D B1A B1T 	41R3185	1
• MT 4221: CTO		
MT 4222: 35U 35F 35S 37U 37F 37S 44A 44Q 45A 45Q 46A 49A 51A CTO 67U 67F 67S 65U 65F 7U 67F 68U 68F 68F 69U 81U 81F 93U 93F 94U 94F 95U 95F 96U 96F 97U 97F		
Line Cord - China		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 49C 51C 52C CTO 82C 83C 84C 85C 86C 87C 88C A1C A2C A5C A6C A7C A8C A9C B1C B5C 	41R3257	1
• MT 4221: 13C CTO		
• MT 4222: 47CCTO 91C 92C A8C		
Line Cord - Japan		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 22J 24J 25J 26J 31J CTO 69J 71J 72J 73J 74J 78J 82J 83J 84J 85J 86J 87J 88J 92J 93J 94J A5J A6J A7J A8J A9J B1J B6J 	41R3249	1
• MT 4221: CTO		
 MT 4222: 29J 31J 32J 33J 34J 46J CTO 63J 64J 71J 82J 83J 84J 85J 86J 87J 89J 98J 99J A1J A6J A7J 		

Power Cordssecondary	FRU #	CRU
Line Cord - Brazil		
• MT 4215: CTO		
• MT 4219: CTO	44.00074	
MT 4220: CTO A5P A6P A7P AP8 A9P B1P	41R3271	1
• MT 4221: CTO		
• MT 4222: CTO		
Line Cord - LA High Volt (APU)		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: CTO 82Y 82L 83Y 83L 84Y 84L 85Y 85L 86Y 86L 87Y 87L 88L A5Y A5L A6Y A6L A7Y A7L A8Y A8L A9Y A9L B1Y B1L 	41R3177	1
• MT 4221: CTO		
• MT 4222: CTO		
Line Cord-Australia / New Zealand		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 22M 26M 33M CTO 82M 83M 84M 85M 86M 87M 88M A5M A6M A7M A8M A9M B1M 	41R3197	1
• MT 4221: CTO		
• MT 4222: 23M 24M 25M 27M CTO 72M 73M 74M 75M A4M A5M		
Line Cord - Korea		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 41K 41R 42K 42R 53K 54K 58K 58R CTO 82K 82R 83K 83R 84K 84R 85K 85R 86K 86R 87K 87R 88K 88R A5K A5R A6K A6R A7K A7R A8K A8R A9K A9R B1K B1R 	41R3261	1
• MT 4221: CTO		
• MT 4222: 44K 44R 45K 45R 46K 49K CTO		
Line Cord - Hong Kong, UK, Ireland, Singapore, Malaysia, Brunei, Hong Kong		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G 45H 46B 47H 46B 53A 54A 55A 56A 57A 58A 59A 61A 62A 63A CTO 82B 82H 82G 82A 83B 83H 83G 83A 84B 84H 84G 84A 85B 85H 85G 85A 86B 86H 86G 86A 87B 87H 87G 87A 88B 88H 88G 88A 95A 96A 97A 98A 99A A5G A5A A6G A6A A7G A7A A8G A8A A9G A9A B1G B1A B2G B3B B3H B4B B4H 	41R3225	1
• MT 4221: 3B 13H CTO		
MT 4222: 41B 41H 42B 42H 43B 43H 46A 49A 51A CTO A2G A3G		
Line Cord - Taiwan		
• MT 4215: CTO		
• MT 4219: CTO	41R3279	1
• MT 4220: CTO 82V 83V 84V 85V 86V 87V 88V A5V A6V A7V A8V A9V B1V	71110213	'
• MT 4221: CTO		
• MT 4222: 41V 42V 43V CTO		

Power Cordssecondary	FRU #	CRU
Line Cord - Italy		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G 35S 36S 37S CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41R3233	1
• MT 4221: CTO		
MT 4222: 21G 16G 35S 36S 37S CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Line Cord - A models		
• MT 4215: CTO		
• MT 4219: CTO		
• MT 4220: 53A 54A 55A 56A 57A 58A 59A 61A 62A 63A CTO 82A 83A 84A 85A 86A 87A 88A 95A 96A 97A 98A 99A A5A A6A A7A A8A A9A B1A	41R3209	1
• MT 4221: CTO		
• MT 4222: 46A 49A 51A CTO		
Line Cord - Denmark		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G 35S 36S 37S CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41R3213	1
• MT 4221: CTO		
MT 4222: 21G 16G 35S 36S 37S CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Line Cord - Switzerland		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G 35S 36S 37S CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41R3229	1
• MT 4221: CTO		
MT 4222: 21G 16G 35S 36S 37S CTO 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G A2G A3G		
Line Cord - Israel		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21G 35S 36S 37S CTO 64G 82G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	41R3237	1
• MT 4221: CTO		
MT 4222: 21G 22G 15G 16G CTO 52G 53G 54G 55G 57G 58G 59G 61G 76G 77G 78G 79G A2G A3G		

Power Cordssecondary	FRU #	CRU
Line Cord - South Africa		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 22M 26M 33M 12G 13G 15G 16G 17G 18G 21G 53A 54A 55A 56A 57A 58A 59A 61A 62A 63A CTO 64G 82M 82G 83M 83G 84M 84G 85M 85G 86M 86G 87M 87G 88M 88G 95A 96A 97A 98A 99A A5M A5G A5A A6M A6G A6A A7M A7G A7A A8M A8G A8A A9M A9G A9A B1M B1G B1A B2G 	41R3221	1
• MT 4221: CTO		
MT 4222: 23M 24M 25M 27M 21G 16G 46A 49A 51A CTO 53G 54G 55G 57G 58G 59G 61G 72M 73M 74M 75M 76G 77G 78G A2G A3G A4M A5M		
Line Cord - India		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 41Q 42Q 53Q 54Q CTO 82Q 83Q 84Q 85Q 86Q 87Q 88Q A5Q A6Q A7Q A8Q A9Q B1Q	41R3175	1
• MT 4221: CTO		
• MT 4222: 46Q CTO		
Line Cord - Thailand		
• MT 4215: CTO		
• MT 4219: CTO	43N9030	1
MT 4220: 41T 42T CTO 82T 83T 84T 85T 86T 87T 88T A5T A6T A7T A8T A9T B1T	HOINDUOU	1
• MT 4221: CTO		
• MT 4222: 44T 45T CTO		

Recovery discs

Windows Vista Business 32 Recovery CD

Windows Vista Business 32	FRU #	CRU
US English		
• MT 4215: CTO		
• MT 4219: CTO	89Y1262	1
• MT 4220: CTO	0311202	'
• MT 4221: CTO		
• MT 4222: CTO		
English for India		
• MT 4215: CTO		
• MT 4219: CTO	89Y1344	1
• MT 4220: CTO	0311044	'
• MT 4221: CTO		
• MT 4222: CTO		

Windows 7 Professional 64 Recovery CD

Windows 7 Professional 64	FRU #	CRU
US English		
• MT 4215: CTO		
• MT 4219:		
MT 4220: 26M 12G 13G 15G 16G 17G 18G 21G 35U 36U 37U 41A 41T 41R 42A 42T 42R 45H 46B 47H 53A 54A 55A 56A 57A 58A 58R 61A 62A 63A CTO 64G 82U 82L 82G 82M 82A 82Q 82H 82R 82E 83U 83L 83G 83M 83A 83Q 83H 83R 83E 84U 84L 84G 84M 84A 84Q 84H 84R 84E 85U 85L 85G 85M 85A 85Q 85H 85R 85E 86U 86L 86G 86M 86A 86Q 86H 86R 86E 87U 87L 87G 87M 87A 87Q 87H 87R 87E 88U 88L 88G 88M 88A 88Q 88H 88R 88E 91U 95A 96A 97A 98A 99A A3U A4U A5U A5L A5G A5M A5A A5Q A5H A5R A5E A6U A6L A6G A6M A6A A6Q A6H A6R A6E A7U A7L A7G A7M A7A A7Q A7H A7R A7E A8U A8L A8G A8M A8A A8Q A8H A8R A8E A9U A9L A9G A9M A9A A9Q A9H A9R A9E B1U B1L B1G B1M B1A B1Q B1H B1R B1E B2G B3H B4H	03W2735	1
• MT 4221: 13H CTO		
 MT 4222: 41H 42H 43H 23M 24M 25M 27M 21G 16G 35U 37U 44A 44R 45A 45R 46A 49A 51A CTO 53G 54G 55G 66U 67U 57G 58G 59G 61G 62G 65U 67U 68U 68U 69U 72M 73M 74M 75M 76G 77G 78G 81U 93U 94U 95U 96U 97U A2G A3G A4M A5M 		
French		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G 35F 36F 37F CTO 64G 82F 82G 83F 83G 84F 84G 85F 85G 86F 86G 87F 87G 88G 91F A3F A4F A5F A5G A6F A6G A7F A7G A8F A8G A9F A9G B1F B1G B2G 	03W2718	1
• MT 4221: CTO		
MT 4222: 21G16G 35F 37F CTO 53G 54G 55G 67F 57G 58G 59G 61G 62G 65F 67F 68F 69F 76G 77G 78G 81F 93F 94F 95F 96F 97F A2G A3G		
German		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2720	1
• MT 4221: CTO		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G		
Italian		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2723	1
• MT 4221: CTO		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G		

Windows 7 Professional 64	FRU #	CRU
Czech		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2716	1
• MT 4221: CTO		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G		
Polish		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2726	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Russian		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2729	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Turkish		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2734	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Hungarian		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2722	1
• MT 4221:		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		

Windows 7 Professional 64	FRU #	CRU
Greek		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2719	1
• MT 4221: CTO		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G		
Korean		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 41K 42K 53K 54K 58K CTO 82K 83K 84K 85K 86K 87K 88K A5K A6K A7K A8K A9K B1K 	03W2725	1
• MT 4221:		
• MT 4222: 44K 45K 46K 49K CTO		
Slovenian		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2731	1
• MT 4221: CTO		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G		
Russian English		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2727	1
• MT 4221: CTO		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G		
Romanian		_
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2728	1
• MT 4221:		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G		

Windows 7 Professional 64	FRU #	CRU
Sebian- Latin		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2733	1
• MT 4221:		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Slovakian		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2730	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Arabic Localized		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2713	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Japanese		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 22J 24J 25J 26J 31J CTO 69J 71J 72J 73J 74J78J 82J 83J 84J 85J 86J 87J 88J 92J 93J 94J A5J A6J A7J A8J A9J B1J B6J 	03W2724	1
• MT 4221: CTO		
 MT 4222: 28J 29J 32J 33J 34J 46J CTO 71J 82J 83J 84J 85J 86J 87J 89J 98J 99J A1J A6J A7J 		
Simplified Chinese		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: CTO 82C 83C 84C 85C 86C 87C 88C A1C A2C A5C A6C A7C A8C A9C B1C B5C 	03W2714	1
• MT 4221: CTO		
• MT 4222: CTO 91C 92C		

Windows 7 Professional 64	FRU #	CRU
Traditional Chinese		
• MT 4215: CTO		
• MT 4219: CTO	00\\\0715	4
MT 4220: CTO 82V 83V 84V 85V 86V 87V 88V A5V A6V A7V A8V A9V B1V	03W2715	1
• MT 4221: CTO		
• MT 4222: CTO		
India English		
• MT 4215: CTO		
• MT 4219: CTO	001410747	
• MT 4220: 41Q 42Q 53Q 54Q 58Q CTO 82Q 83Q 84Q 85Q 86Q 87Q 88Q	03W2717	1
• MT 4221: CTO		
• MT 4222: 44Q 45Q 46Q 49Q CTO		
Hong Kong		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: CTO 82B 83B 84B 85B 86B 87B 88B A5B A6B A7B A8B A9B B1B B3B	03W2721	1
B4B		
• MT 4221: CTO		
• MT 4222: CTO A8C		
Spanish		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2732	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
C&L1 Nordics: DK/FI/SV/NO/EN		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2736	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
C&L2 EMEA: NL/FR/GR/IT/EN		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2737	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		

Windows 7 Professional 64 Office 2010 Starter Recovery CD

Windows 7 Professional 64 Office 2010 Starter	FRU #	CRU
US English		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 26M 12G 13G 15G 16G 17G 18G 21G 35U 36U 37U 41A 41T 41R 42A 42T 42R 45H 46B 47H 53A 54A 55A 56A 57A 58A 58R 61A 62A 63A CTO 64G 82U 82L 82G 82M 82A 82Q 82H 82R 82E 83U 83L 83G 83M 83A 83Q 83H 83R 83E 84U 84L 84G 84M 84A 84Q 84H 84R 84E 85U 85L 85G 85M 85A 85Q 85H 85R 85E 86U 86L 86G 86M 86A 86Q 86H 86R 86E 87U 87L 87G 87M 87A 87Q 87H 87R 87E 88U 88L 88G 88M 88A 88Q 88H 88R 88E 91U 95A 96A 97A 98A 99A A3U A4U A5U A5L A5G A5M A5A A5Q A5H A5R A5E A6U A6L A6G A6M A6A A6Q A6H A6R A6E A7U A7L A7G A7M A7A A7Q A7H A7R A7E A8U A8L A8G A8M A8A A8Q A8H A8R A8E A9U A9L A9G A9M A9A A9Q A9H A9R A9E B1U B1L B1G B1M B1A B1Q B1H B1R B1E B2G 	03W2761	1
• MT 4221: 13H CTO		
 MT 4222: 41H 42H 43H 23M 24M 25M 27M 21G 16G 35U 37U 44A 44R 45A 45R 46A 49A 51A CTO 53G 54G 55G 66U 67U 57G 58G 59G 61G 62G 65U 67U 68U 68U 69U 72M 73M 74M 75M 76G 77G 78G 81U 93U 94U 95U 96U 97U A2G A3G A4M A5M 		
French		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21G 35F 36F 37F CTO 64G 82F 82G 83F 83G 84F 84G 85F 85G 86F 86G 87F 87G 88G 91F A3F A4F A5F A5G A6F A6G A7F A7G A8F A8G A9F A9G B1F B1G B2G 	03W2744	1
• MT 4221: CTO		
 MT 4222: 21G16G 35F 37F CTO 53G 54G 55G 67F 57G 58G 59G 61G 62G 65F 67F 68F 69F 76G 77G 78G 81F 93F 94F 95F 96F 97F A2G A3G 		
German		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2746	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Italian		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2749	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		

Windows 7 Professional 64 Office 2010 Starter	FRU #	CRU
Czech		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2742	1
• MT 4221: CTO		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G		
Polish		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2751	1
• MT 4221: CTO		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G		
Portuguese		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2752	1
• MT 4221: CTO		
• MT 4222:		
Russian		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2755	1
• MT 4221: CTO		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G		
Turkish		
• MT 4215: CTO		
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G	03W2760	1
• MT 4221: CTO		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G		

Windows 7 Professional 64 Office 2010 Starter	FRU #	CRU
Hungarian		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2748	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Greek		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2745	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Korean		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 41K 42K 53K 54K 58K CTO 82K 83K 84K 85K 86K 87K 88K A5K A6K A7K A8K A9K B1K 	03W2750	1
• MT 4221: CTO		
• MT 4222: 44K 45K 46K 49K CTO		
Slovenia		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2757	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Russian English		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2753	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		

Windows 7 Professional 64 Office 2010 Starter	FRU #	CRU
Romanian		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2754	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Sebian- Latin		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2759	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Slovakian		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2756	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Arabic Localized		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2738	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
Brazil Portuguese		
• MT 4215: CTO		
• MT 4219: CTO	03/4/0720	1
• MT 4220:	03W2739	1
• MT 4221: CTO		
• MT 4222:		

Windows 7 Professional 64 Office 2010 Starter	FRU #	CRU
Simplified Chinese		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: CTO 82C 83C 84C 85C 86C 87C 88C A1C A2C A5C A6C A7C A8C A9C B1C B5C 	03W2740	1
• MT 4221: CTO		
• MT 4222: CTO 91C 92C		
Traditional Chinese		
• MT 4215: CTO		
• MT 4219: CTO	02\\\2741	1
• MT 4220: CTO 82V 83V 84V 85V 86V 87V 88V A5V A6V A7V A8V A9V B1V	03W2741	ı
• MT 4221: CTO		
• MT 4222: CTO		
India English		
• MT 4215: CTO		
• MT 4219: CTO	0014/07/40	
• MT 4220: 41Q 42Q 53Q 54Q 58Q CTO 82Q 83Q 84Q 85Q 86Q 87Q 88Q	03W2743	1
• MT 4221: CTO		
• MT 4222: 44Q 45Q 46Q 49Q CTO		
Hong Kong		
• MT 4215: CTO		
• MT 4219: CTO	03W2747	1
• MT 4220: CTO 82B 83B 84B 85B 86B 87B 88B A5B A6B A7B A8B A9B B1B B3B B4B	03002141	I
• MT 4221: CTO		
• MT 4222: CTO A8C		
Spanish		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2758	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
C&L1 Nordics: DK/FI/SV/NO/EN		
• MT 4215: CTO		
• MT 4219: CTO		
 MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G 	03W2762	1
• MT 4221: CTO		
 MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G 		
C&L2 EMEA: NL/FR/GR/IT/EN	03W2763	1
• MT 4215: CTO	55	•

Windows 7 Professional 64 Office 2010 Starter	FRU #	CRU
• MT 4219: CTO		
MT 4220: 12G 13G 15G 16G 17G 18G 21GCTO 64G 83G 84G 85G 86G 87G 88G A5G A6G A7G A8G A9G B1G B2G		
• MT 4221: CTO		
MT 4222: 21G 16G CTO 53G 54G 55G 57G 58G 59G 61G 62G67F 68F 76G 77G 78G A2G A3G		

Windows XP Professional 64 Recovery CD

Windows XP Professional 64	FRU #	CRU
Japanese		
• MT 4215: CTO		
• MT 4219: CTO	64Y3864	1
• MT 4220: CTO	0413004	'
• MT 4221: CTO		
• MT 4222: CTO		
English		
• MT 4215: CTO		
• MT 4219: CTO	64Y3863	1
• MT 4220: CTO	0413003	'
• MT 4221: CTO		
• MT 4222: CTO		

Windows XP Professional 64 Mono Recovery CD

Windows XP Professional 64 Mono	FRU #	CRU
Japanese		
• MT 4215: CTO		
• MT 4219: CTO	89Y1908	1
• MT 4220: 68J 71J 78J	0911900	'
• MT 4221:		
• MT 4222:		
English		
• MT 4215: CTO		
• MT 4219: CTO	89Y1907	1
• MT 4220:	0911907	'
• MT 4221:		
• MT 4222:		

Windows XP Professional Recovery CD

Windows XP Professional	FRU #	CRU
Simplified Chinese		
• MT 4215: CTO		
• MT 4219: CTO	03W2705	1
• MT 4220: CTO	03442703	I
• MT 4221: CTO		
• MT 4222: CTO		
French		
• MT 4215: CTO		
• MT 4219: CTO	03W2706	1
• MT 4220: CTO	03442700	ı
• MT 4221: CTO		
• MT 4222: CTO		
German		
• MT 4215: CTO		
• MT 4219: CTO	0011/0707	4
• MT 4220: CTO	03W2707	1
• MT 4221: CTO		
• MT 4222: CTO		
Italy		
• MT 4215: CTO		
• MT 4219: CTO	03W2708	1
• MT 4220: CTO	03442700	'
• MT 4221: CTO		
• MT 4222: CTO		
Japanese		
• MT 4215: CTO		
• MT 4219: CTO	03W2709	1
• MT 4220: CTO	00112700	'
• MT 4221: CTO		
• MT 4222: CTO		
US English		
• MT 4215: CTO		
• MT 4219: CTO	03W2710	1
• MT 4220: CTO	03442110	ı
• MT 4221: CTO		
• MT 4222: CTO		

Windows XP Professional	FRU #	CRU
Multilingual Nordics: DK/FI/SV/NO/EN		
• MT 4215: CTO		
• MT 4219: CTO	03W2711	1
• MT 4220: CTO	03002711	ı
• MT 4221: CTO		
• MT 4222: CTO		
Multilingual EMEA: NL/FR/GR/IT/EN		
• MT 4215: CTO		
• MT 4219: CTO	03W2712	4
• MT 4220: CTO	03002712	ı
• MT 4221: CTO		
• MT 4222: CTO		

Chapter 11. Additional service information

This chapter provides additional information that the service representative might find helpful.

Security features

Security features in this section include the following:

- Passwords
- Vital Product Data
- Management Information Format (MIF)

Hardware-controlled passwords

Hardware-controlled passwords are set using the Setup Utility program. For more information about passwords, see "Using passwords" on page 39.

Operating system password

An operating system password is very similar to a power-on password and denies access to the computer by an unauthorized user when the password is activated. The computer is unusable until the password is entered and recognized by the computer.

Vital product data

Each computer has a unique Vital Product Data (VPD) code stored in the nonvolatile memory on the system board. After you replace the system board, the VPD must be updated. To update the VPD, see "Updating (flashing) the BIOS" on page 165.

BIOS levels

An incorrect level of BIOS can cause false errors and unnecessary FRU replacement. Use the following information to determine the current level of BIOS installed in the computer, the latest BIOS available for the computer, and where to obtain the latest level of BIOS.

- To determine the current Level of BIOS:
 - Start the Setup Utility program.
 - Select Standard CMOS Features.
- Sources for obtaining the latest level BIOS available
 - 1. Lenovo support web site: http://www.lenovo.com/support
 - 2. Lenovo Customer Support Center
 - 3. Levels 1 and 2 Support

To update (flash) the BIOS, see "Updating (flashing) the BIOS" on page 165.

Updating (flashing) the BIOS

This section provides instructions on how to update the BIOS for your computer.

Updating (flashing) the BIOS from a disc

System BIOS program updates are available at: http://www.lenovo.com/support

To update (flash) the BIOS from a disc, do the following:

- 1. Make sure the optical drive you want to use is set as the first boot device in the startup device sequence. See "Selecting or changing the startup device sequence" on page 41.
- 2. Make sure the computer is turned on. Insert the disc into the optical drive.
- 3. Turn off the computer and back on again. The update begins.
- 4. When prompted to change the serial number, press N.

Note: If you want to change the serial number, press Y when prompted. Type in the serial number and then press Enter.

5. When prompted to change the machine type/model, press N.

Note: If you want to change the machine type/model, press Y when prompted. Type in the machine type/model and then press Enter.

6. Follow the instructions on the screen to complete the update.

Updating (flashing) BIOS from your operating system

Note: Because Lenovo makes constant improvements to the Web site, the Web page contents are subject to change without notice, including the contents referenced in the following procedure.

To update (flash) BIOS from your operating system, do the following:

- 1. Go to http://www.lenovo.com/support.
- 2. Do the following to locate the downloadable files for your machine type:
 - a. In the Enter a product number field, type your machine type and click Go.
 - b. Click Downloads and drivers.
 - c. Select BIOS in the Refine results field to easily locate all the BIOS related links.
 - d. Click the BIOS update link.
 - e. Click the TXT file that contains the instructions for updating (flashing) BIOS from your operating system.
- 3. Print these instructions. This is very important because they are not on the screen after the download begins.
- 4. Follow the printed instructions to download, extract, and install the update.

Recovering from a POST/BIOS update failure

If power to your computer is interrupted while POST/BIOS is being updated (flash update), your computer might not restart correctly. If this happens, perform the following procedure, which is commonly called Boot-block Recovery.

- 1. Turn off the computer and any attached devices, such as printers, monitors, and external drives.
- 2. Unplug all power cords from electrical outlets, and remove the computer cover. Refer to "Removing the computer cover" on page 73.
- 3. Locate the Clear CMOS /Recovery jumper on the system board. Refer to "Locating parts on the system board" on page 71.
- Remove any cables that impede access to the Clear CMOS /Recovery jumper.

- 5. You might need to remove the secondary hard disk drive to access the Clear CMOS /Recovery jumper. See "Replacing the secondary hard disk drive" on page 93.
- 6. Move the jumper from the standard position (pin 1 and pin 2) to the maintenance position (pin 2 and pin 3).
- 7. Reconnect any cables that were disconnected and reinstall the secondary hard disk drive if removed. See "Replacing the secondary hard disk drive" on page 93.
- 8. Reinstall the computer cover and reconnect the power cords for the computer and monitor to electrical outlets. Refer to "Completing the FRU replacement" on page 103.
- 9. Turn on the computer and the monitor. Insert the POST/BIOS update (flash) disc into the optical drive.
- 10. Turn the computer off and back on again. The recovery session begins.

Note: The recovery session will take two to three minutes. During this time you will hear a series of beeps.

- 11. After the recovery session is completed, the series of beeps will end, and the system will automatically turn off. Remove the disc from the optical drive before the system completely turns off.
- 12. Repeat step 2 through step 4.
- 13. Move the Clear CMOS /Recovery jumper back to the standard position (pin 1 and pin 2).
- 14. Reconnect any cables that were disconnected and reinstall the secondary hard disk drive if removed.
- 15. Reinstall the computer cover and reconnect any cables that were disconnected.
- 16. Turn on the computer to restart the operating system.

Power management

Power management reduces the power consumption of certain components of the computer such as the system power supply, processor, hard disk drives, and some monitors.

Automatic configuration and power interface (ACPI) BIOS

Being an ACPI BIOS system, the operating system is allowed to control the power management features of the computer and the setting for Advanced Power Management (APM) BIOS mode is ignored. Not all operating systems support ACPI BIOS mode.

Automatic Power-On features

The Automatic Power-On features within the Power Management menu allow you to enable and disable features that turn on the computer automatically.

- **Serial Port A Ring Detect**: With this feature set to **Enabled** and an external modem connected to serial port (COM1), the computer will turn on automatically when a ring is detected on the modem.
- **PCI Modem Ring Detect**: With this feature set to **Enabled**, the computer will turn on automatically when a ring is detected on the internal modem.
- PCI Wake Up: This feature allows PCI cards that support this capability to wake the system.
- Wake Up on Alarm: You can specify a date and time at which the computer will be turned on automatically. This can be either a single event or a daily event.
- Wake on LAN: If the computer has a properly configured token-ring or Ethernet LAN adapter card that is
 Wake on LAN-enabled and there is remote network management software, you can use the Wake on LAN
 feature. When you set Wake on LAN to Enabled, the computer will turn on when it receives a specific
 signal from another computer on the local area network (LAN).

Appendix A. Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc. 1009 Think Place - Building One Morrisville, NC 27560 U.S.A.

Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

© Copyright Lenovo 2010, 2011 169

Television output notice

The following notice applies to models that have the factory-installed television-output feature.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Trademarks

The following terms are trademarks of Lenovo in the United States, other countries, or both:

The Lenovo logo PS/2 Rescue and Recovery **ThinkStation ThinkVantage**

Microsoft, Windows, and Windows Vista are trademarks of the Microsoft group of companies.

Intel, Intel Core, Pentium, and Xeon are trademarks of Intel Corporation in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.

lenovo_®

Part Number: 71Y8031

Printed in USA

(1P) P/N: 71Y8031

